



Pi Hole Ad Detection Display with PiTFT

Created by Brent Rubell



<https://learn.adafruit.com/pi-hole-ad-pitft-tft-detection-display>

Last updated on 2024-04-09 08:45:01 PM EDT

Table of Contents

Overview	3
<ul style="list-style-type: none">• What's Pi-hole?• Parts• PiTFT Display• Other Parts	
Raspberry Pi Setup	7
Install Pi Hole	8
<ul style="list-style-type: none">• Pre-Check• Change Hostname• Run Pi Hole Installer• Configuration• Test Admin Page• Test Blocking	
PiTFT Configuration	16
<ul style="list-style-type: none">• Assembly• PiTFT Configuration• Easy Single Command Install	
Install PADD	19
<ul style="list-style-type: none">• Open PADD at Pi Bootup• Turn off the PiTFT at Night• Smaller Pi Displays	
Using PADD and Pi Hole	24
<ul style="list-style-type: none">• Configure and Test Ad Blocking• Router Configuration for Pi-Hole• Updating PADD• Troubleshooting	

Overview



We already have a guide on using [Pi-Hole with the Raspberry Pi Zero W \(https://adafru.it/BHx\)](https://adafru.it/BHx) to send advertisements on your network into a black hole.

But, the PiOLED is small and we want to monitor more statistics at a glance. While we could open the web console to monitor Pi-hole, we can't show that to friends easily. Plus, who doesn't want more shiny, blinky, networking hardware?

We're going to install [PADD \(https://adafru.it/BHy\)](https://adafru.it/BHy) (Pi-hole Ad Detection Display) and [Pi-Hole \(https://adafru.it/youE\)](https://adafru.it/youE) on the Adafruit 2.8" or 3.5" PiTFT Plus to display useful and fun statistics such as Amount of Pi-holed Advertisements, and the top offending domain attempting to serve pesky advertisements to your network.

What's Pi-hole?

[Pi-hole \(https://adafru.it/youE\)](https://adafru.it/youE) is an open-source project which let's your Pi act as a DNS (**Domain Name Server**). While you may have an ad-blocker installed on your browser, do you have one on your phone? What about blocking in-application advertisements in your mobile games? On your Smart TV? On your smart fridge?

Pi-hole lets you block ads from **any device** configured to use it as a Domain Name Server. When an advertisement (i.e: ads.adserver.com) tries to resolve it's IP address, Pi-hole will return nothing back. You'll never connect to the advertisement server and

the ad won't even load. This makes it quicker, faster, and use less data than conventional ad blockers.

Parts

You'll need the following parts to get up-and-running with Pi-hole and PADD

You need a Raspberry Pi with built in wireless. The Raspberry Pi 3 line (3, 3 B, 3 B+) devices are wireless-ready without external configuration:

1 x [Raspberry Pi 3](https://www.adafruit.com/product/3775)

<https://www.adafruit.com/product/3775>

Model B+ - 1.4GHz Cortex-A53 with 1GB RAM

You'll also need a power supply for your Pi and a MicroSD card for holding the Pi's OS and it's applications:

1 x [5V 2.4A Power Supply](https://www.adafruit.com/product/1995)

<https://www.adafruit.com/product/1995>

5V 2.4A Switching Power Supply with 20AWG MicroUSB Cable

1 x [8GB MicroSD Card](https://www.adafruit.com/product/2692)


<https://www.adafruit.com/product/2692>

8GB Class 10 SD/MicroSD Memory Card - SD Adapter Included

PiTFT Display

To use the full version of PADD, you'll need a PiTFT supporting a resolution of at least 480x320.

If you're using a display smaller than 480x320, PADD will boot into a mini mode which displays way less statistics about the network. To view PADD, we suggest using the PiTFT Plus 3.5":

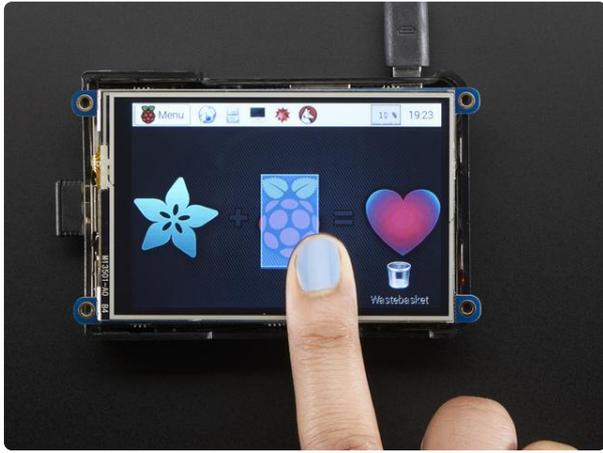

PiTFT Plus 480x320 3.5"
TFT+Touchscreen for Raspberry Pi
Is this not the cutest, little display for the Raspberry Pi? It features a 3.5" display with 480x320 16-bit color pixels and a resistive touch overlay
<https://www.adafruit.com/product/2441>


If you happen to have one of our [2.8" or 2.4" PiTFT](https://adafru.it/BHE) (<https://adafru.it/BHE>)'s, those will work too



PiTFT Plus Assembled 320x240 2.8" TFT + Resistive Touchscreen
Is this not the cutest little display for the Raspberry Pi? It features a 2.8" display with 320x240 16-bit color pixels and a resistive touch overlay. The plate uses the high...
<https://www.adafruit.com/product/2298>



Adafruit PiTFT Plus 320x240 2.8" TFT + Capacitive Touchscreen
Is this not the cutest little display for the Raspberry Pi? It features a 2.8" display with 320x240 16-bit color pixels and a capacitive touch overlay. That's right,...
<https://www.adafruit.com/product/2423>

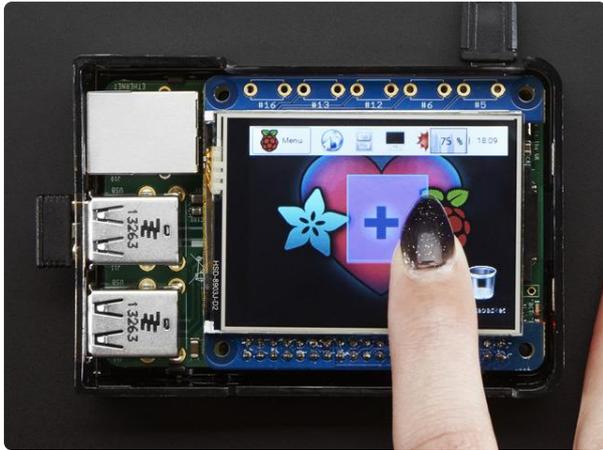

Adafruit PiTFT 2.4\"/>

Is this not the cutest little display for the Raspberry Pi? It features a 2.4\"/>

<https://www.adafruit.com/product/2455>

Other Parts

We used a Pi 3 case to protect our Pi from aesthetics and to protect our Pi against scratches, bumps, and falls. The case also makes the Pi-hole look like a networking appliance.



Adafruit Raspberry Pi B+ / Pi 2 / Pi 3 Case - Smoke Base

It took awhile to perfect - but that's okay since we can now safely say that the Adafruit case for Raspberry Pi Model B+ / Pi 2 / Pi 3 is The...

<https://www.adafruit.com/product/2258>

If you don't have a way to burn the OS image onto a **micro sd** card from your computer, we suggest picking up a USB MicroSD reader/writer.




USB MicroSD Card Reader/Writer - microSD / microSDHC / microSDXC

This is the cutest little microSD card reader/writer - but don't be fooled by its adorableness! It's wicked fast and supports up to 64 GB SDXC cards! Simply slide the card into...

<https://www.adafruit.com/product/939>

Raspberry Pi Setup

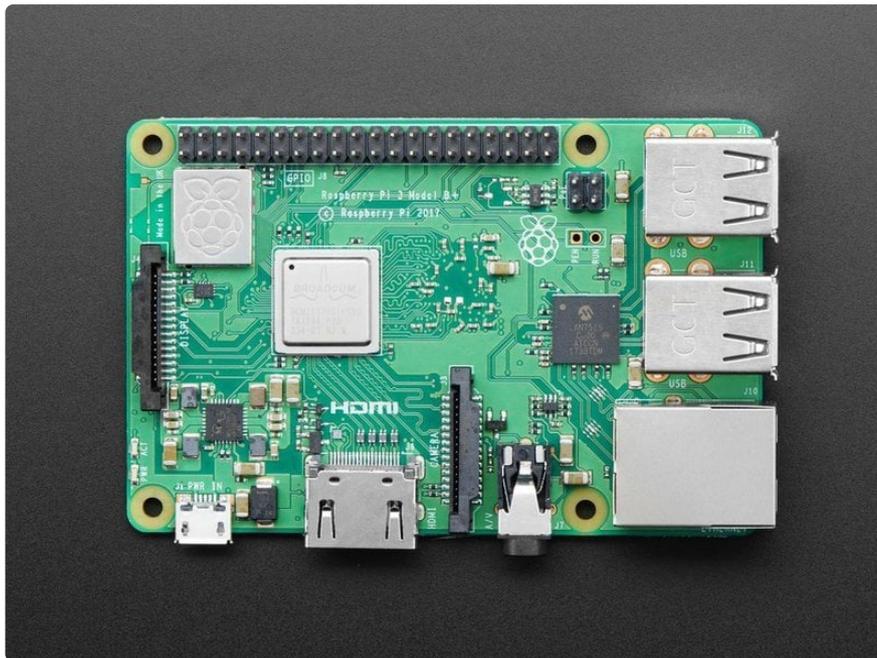

We'll need to set up the Pi with an operating system (OS), WiFi, and secure login (SSH) support before we install Pi Hole.

We have a guide on how to set up your Pi Zero W 'headless' which is how we recommend you get started. The Pi 3 (and up) and the Pi Zero W both have built in WiFi, so our guide can be used for both platforms:

Set up your Pi

<https://adafru.it/BHz>

Make sure you are using Raspbian LITE and not stretch for the OS setup.

Here's the quick-start for people with some experience:

1. Download the [latest 'Lite' Raspbian \(https://adafru.it/fQi\)](https://adafru.it/fQi) to your computer
2. [Burn the Lite Raspbian to your MicroSD card \(https://adafru.it/dDL\)](https://adafru.it/dDL) using your computer
3. [Re-plug the SD card into your computer \(don't use your Pi yet!\) and set up your wifi connection by editing supplicant.conf \(https://adafru.it/yuD\)](https://adafru.it/yuD)
4. [Activate SSH support \(https://adafru.it/yuD\)](https://adafru.it/yuD)
5. Plug the SD card into the Pi 3
6. If you have an HDMI monitor we recommend connecting it so you can see that the Pi is booting OK

7. Plug in power to the Pi 3 - you will see the green LED flicker a little. The Pi 3 will reboot while it sets up so wait a good 10 minutes
8. [If you are running Windows on your computer, install Bonjour support so you can use .local names, you'll need to reboot Windows after installation \(https://adafru.it/IPE\)](https://adafru.it/IPE)
9. [You can then ssh into raspberrypi.local \(https://adafru.it/jvB\)](https://adafru.it/jvB)


Install Pi Hole

Use the following instructions to install Pi Hole:

<https://github.com/pi-hole/pi-hole/#one-step-automated-install> (<https://adafru.it/PqC>)

Pre-Check

OK once you have set your Pi up and the WiFi is connecting to your home or office network, and you can `ssh` into it, continue with these easy steps! If you cannot connect via `ssh` yet, go back and read some of our guides until you are able to log into your Pi.

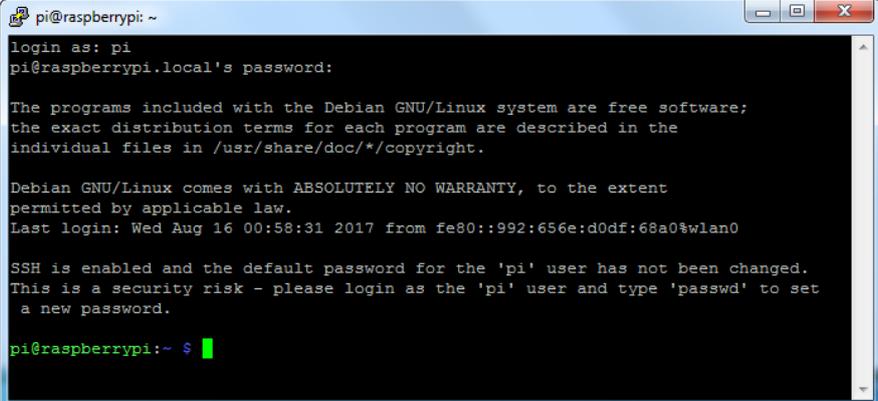

```
pi@raspberrypi: ~
login as: pi
pi@raspberrypi.local's password:

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
Last login: Wed Aug 16 00:58:31 2017 from fe80::992:656e:d0df:68a0%wlan0


SSH is enabled and the default password for the 'pi' user has not been changed.
This is a security risk - please login as the 'pi' user and type 'passwd' to set
a new password.

pi@raspberrypi:~$
```


Change Hostname

I like to do this first so I don't get confused between all the different Pi's in the house.

The hostname can be set in the imager before you get started, but if you forgot or you'd like to change it afterwards, just edit the hostname with `sudo nano /etc/hostname` and put something else on that first line, like `pi-hole`

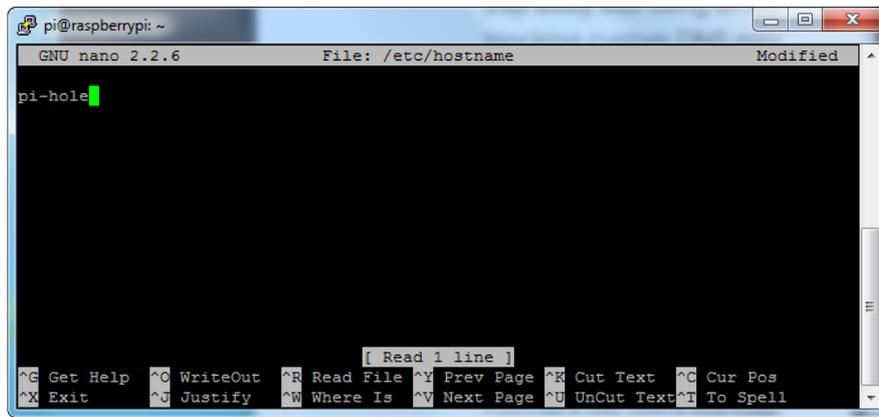

Also change it in the hosts file with `sudo nano /etc/hosts` to match the same name. It's probably the last line:

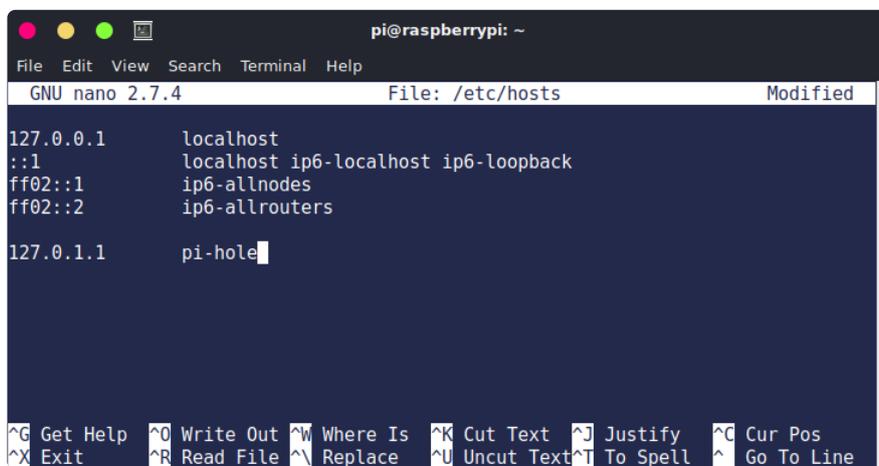

Reboot and when you ssh in again, use `pi-hole.local`

Now's also a good time to change the Pi's password with `passwd`

Run Pi Hole Installer


There's more information on how installation at <https://pi-hole.net/> (<https://adafru.it/yuE>) - as of the writing of this guide, it's easier to just run:

```
curl -sSL https://install.pi-hole.net | bash
```


It will take quite a while to install, and may seem to 'hang' at points. Just let it do its thing for about 20 minutes!

The screenshots below are based on the 5.18.2 release of Pi-Hole. The latest version may have slightly different screens and options, but generally accepting defaults to everything should be OK.


Configuration

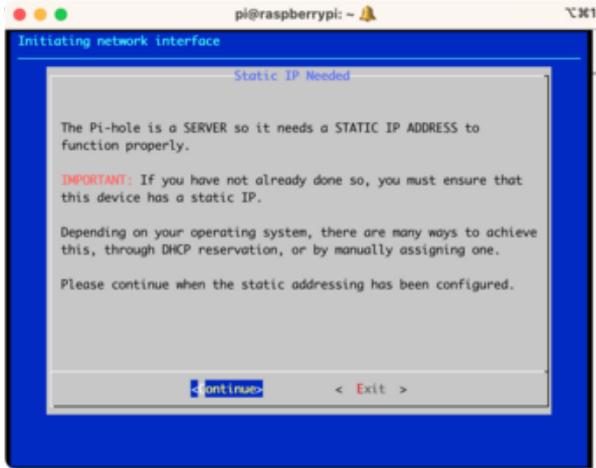


The installer may complain about needing a requiring IP address, which is recommended. This is because DHCP reservations can expire. However, in practice, if the pi stays in communication with your DHCP server, it usually just keeps renewing the same IP address, which works well enough. if you have an advanced network set up, you can configure a custom IP address

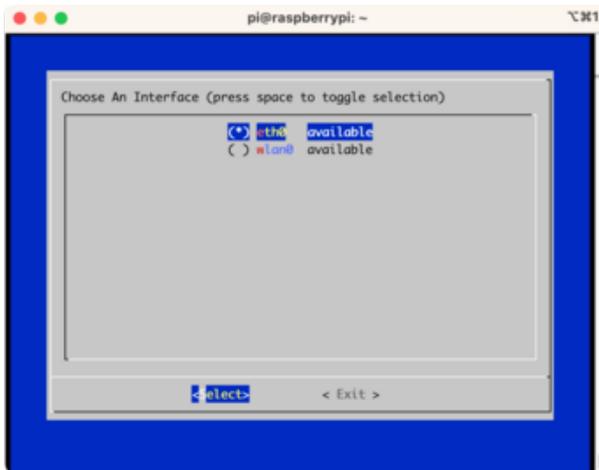


If you have your pi has multiple network interfaces such as WiFi and an ethernet adapter, it will ask you which one you would like to use.

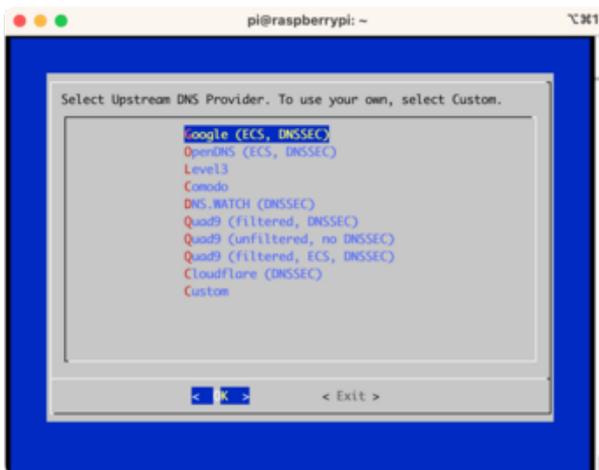

Pick who will be the upstream DNS (for non-ad blocked sites) - Google is fine and will probably be up all the time

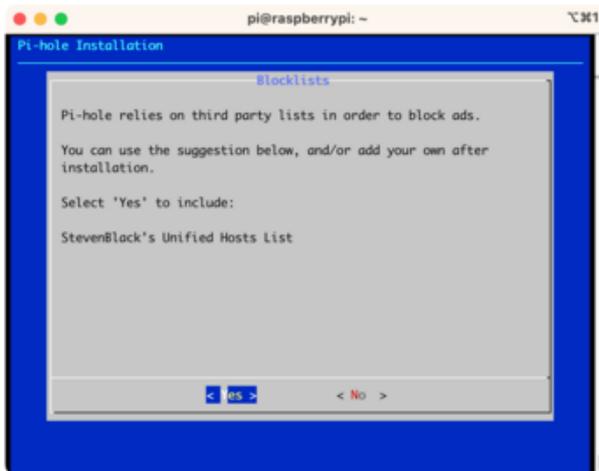


You can add any additional third party lists here or you can just use the default.

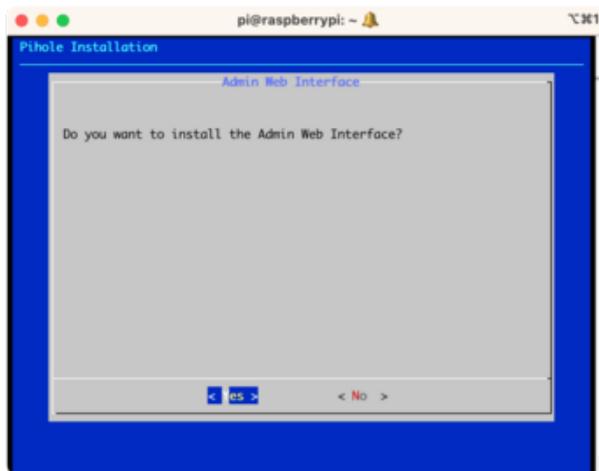

The Web Interface is kinda cool, and is password protected. We'll be showing most of the stats on the little OLED but we still need the API to be running so install this.



You'll also need a web interface running, so select this as well unless you already have another one installed.

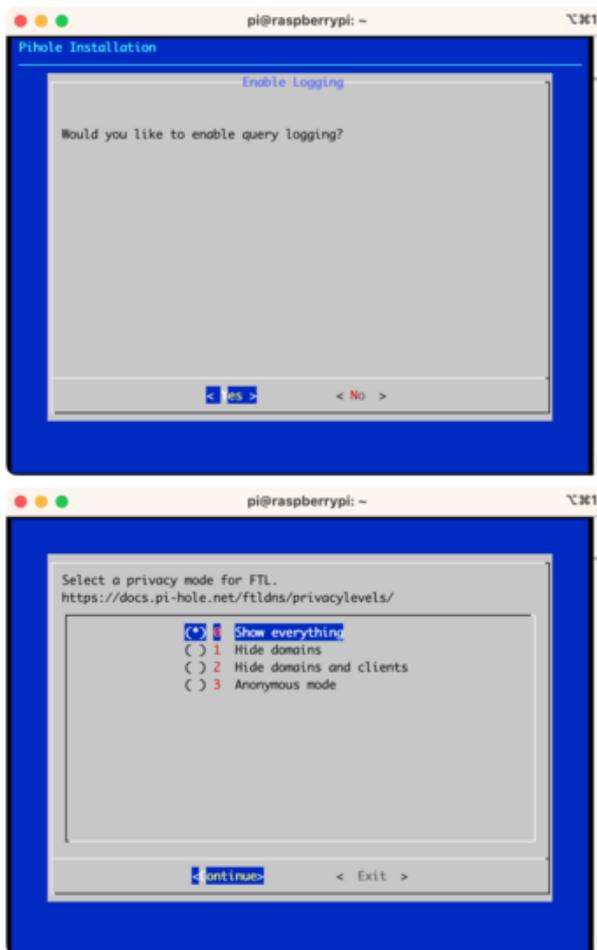


If you'd like to retain a log of the ads that are blocked, you can enable query logging. If you enable it, you'll also be asked about the amount of content that you'd like logged.

It will keep installing! Just hold tight...


```
pi@raspberrypi: ~  
Sample of non-domain entries:  
- "0.0.0.0"  
  
[✓] Building tree  
[✓] Swapping databases  
[✓] The old database remains available  
[i] Number of gravity domains: 131355 (131355 unique domains)  
[i] Number of exact blacklisted domains: 0  
[i] Number of regex blacklist filters: 0  
[i] Number of exact whitelisted domains: 0  
[i] Number of regex whitelist filters: 0  
[✓] Flushing DNS cache  
[✓] Cleaning up stray matter  
  
[✓] FTL is listening on port 53  
[✓] UDP (IPv4)  
[✓] TCP (IPv4)  
[✓] UDP (IPv6)  
[✓] TCP (IPv6)  
  
[i] Pi-hole blocking will be enabled  
[i] Enabling blocking  
[✓] Reloading DNS lists  
[✓] Pi-hole Enabled
```

When its done you'll get this final config screen! Copy & paste the password into another window for now

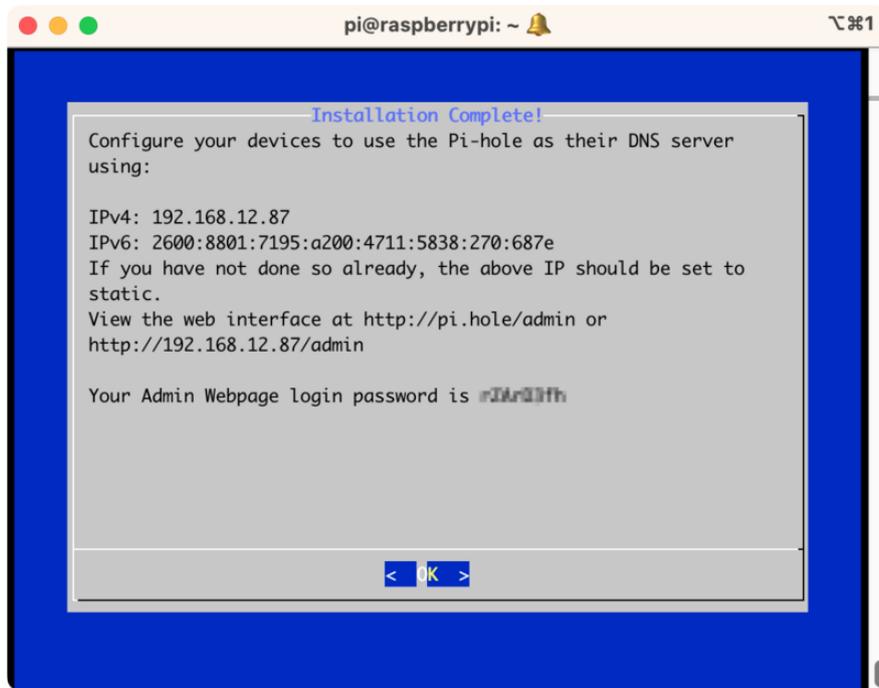


Test Admin Page

On your desktop computer or tablet, visit <http://pi.hole/admin> (<https://adafru.it/19Rb>) or if that doesn't work, try [http://\[your-ip\]/admin](http://[your-ip]/admin) () (replacing [your-ip] with you IP address) and you should see an administration panel!

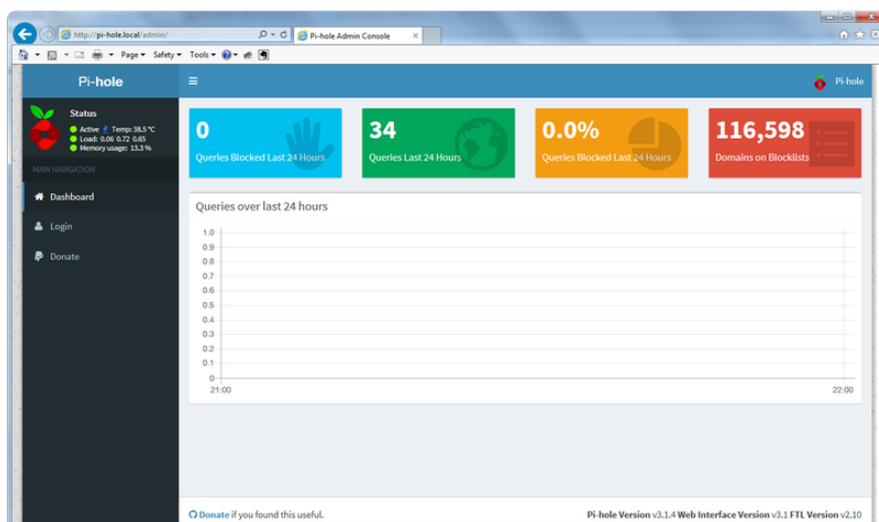


Test Blocking

On your tablet, phone, computer, etc - Set up your **DNS** server in the network settings to be the IP address of the Pi

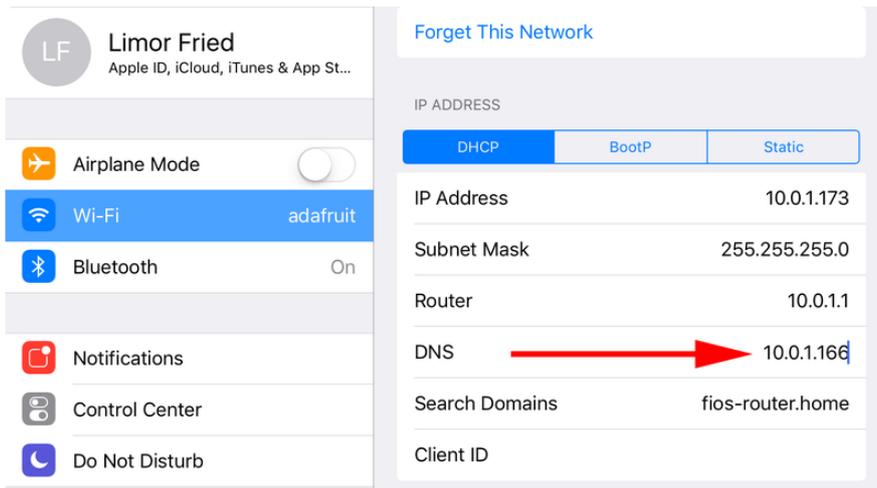

You may need to restart your network or browser to have it kick in, also there may be some cached ads so don't worry if not everything is blocked. Visit your favorite site with ads (not adafruit.com cuz we don't have any! :) and see the difference!

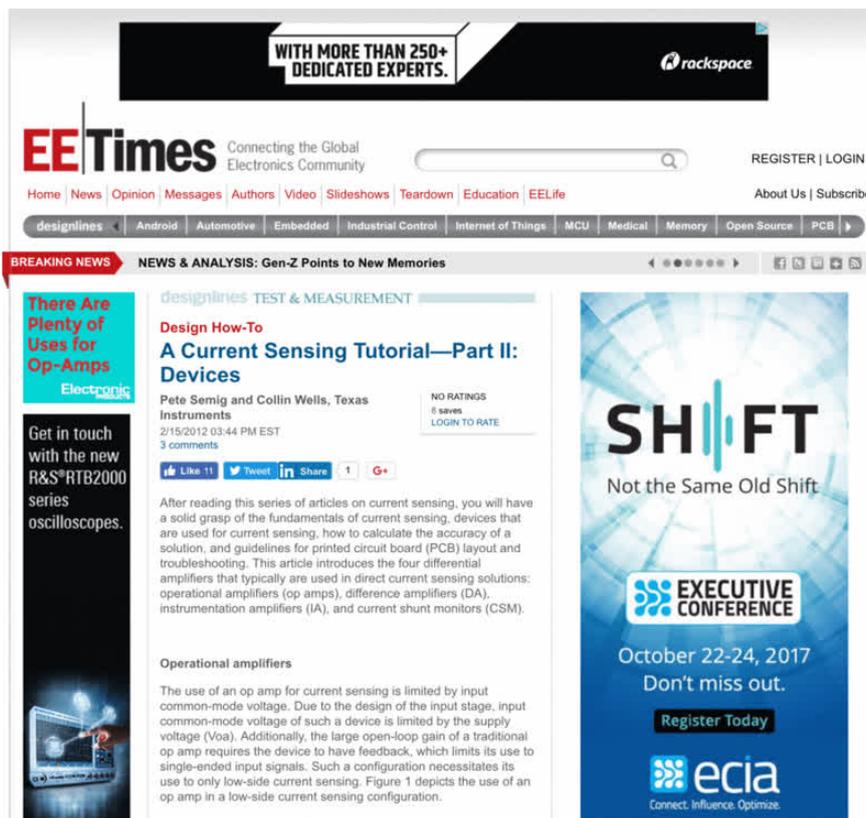

Now that you've got that done, lets continue and install the display!

PiTFT Configuration

Assembly

If you are using a case like the [Adafruit Raspberry Pi Case](http://adafru.it/2258) (<http://adafru.it/2258>), snap-fit the Pi into the case:




Leave the clear top off, we'll need to access the GPIO header for the PiTFT.

The PiTFT's four mounting ears can be used to attach the display to a bezel. But, we'll be snapping them off with pliers (they're perforated) for a flush-fit with the case/




Position the PiTFT over the 2x20 GPIO connector and press downwards. Make sure the PiTFT's header is flush against the GPIO header.

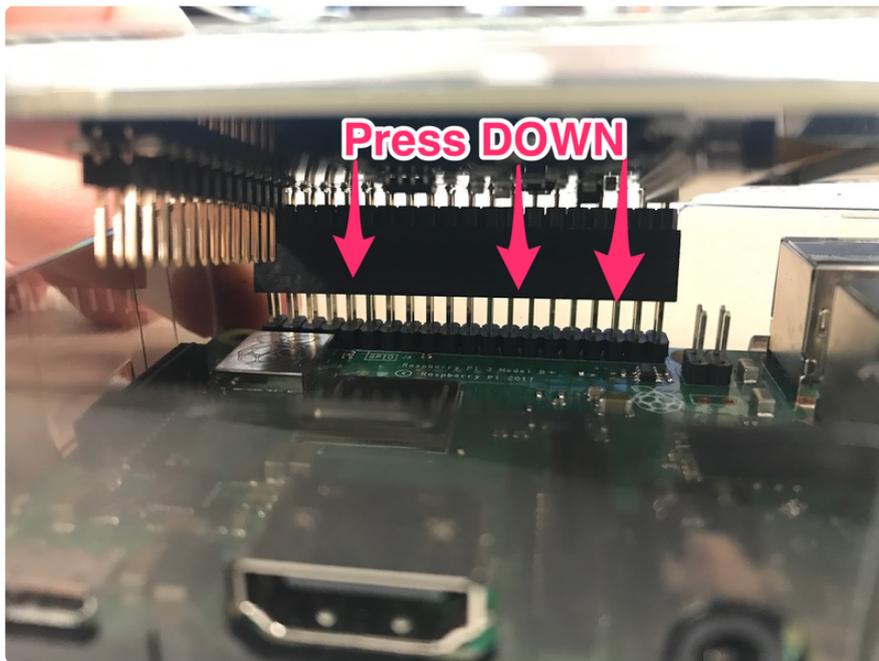

Now that our PiTFT is assembled, let's configure the display to work with our Pi.

PiTFT Configuration

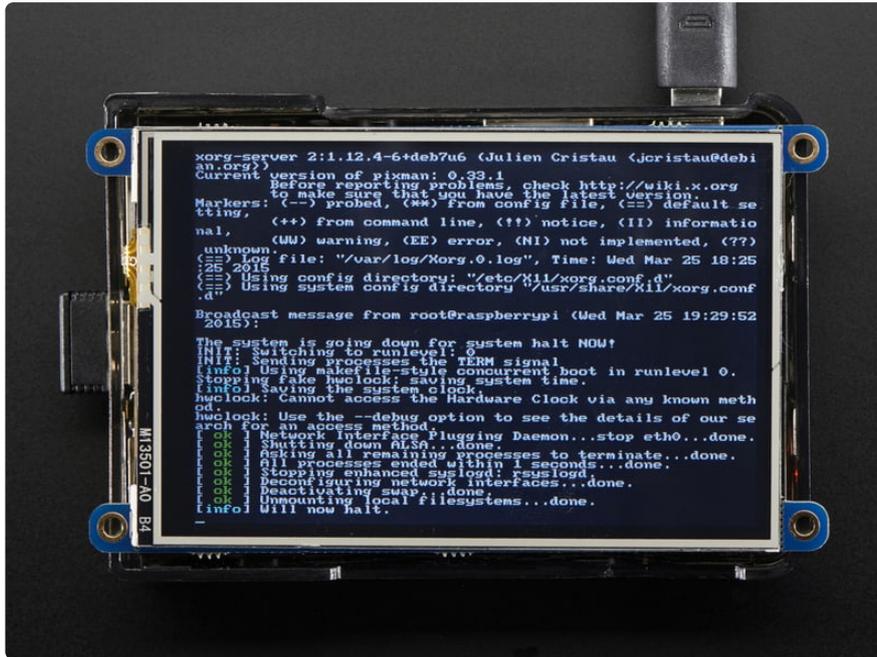

You'll need to perform some configuration to get the PiTFT up and running. We'll do this through the PiTFT installer script.

This script will do all the work for you, and install both device tree overlay support as well as configure rotation and any HDMI mirroring. PiTFT no longer needs any custom kernels or modules, so you can continue to update/upgrade your Pi and it will work with the most recent releases.

To download the script, click the link below and come back to this page when you're done:

[Download PiTFT Easy Install](https://adafru.it/FJ9)

<https://adafru.it/FJ9>

Easy Single Command Install

The latest script allows you to specify all of your options within the command so you can sit back and watch the installation.

For the **PiTFT 3.5" Resistive touchscreen** with a rotation of 270 degrees (so the PiTFT can sit on your desk while the USB cable is plugged in), use the following command:

```
sudo python3 adafruit-pitft.py --display=35r --rotation=270 --install-type=console
```


It is written and maintained by Jim McKenna who did an awesome job! (<https://adafru.it/BHF>)

In the SSH session with your Pi, navigate to your home directory:

```
cd ~
```

Grab a copy of PADD:

```
wget -N https://raw.githubusercontent.com/jpmck/PADD/master/padd.sh
```

Make PADD executable by running:

```
sudo chmod +x padd.sh
```

Open PADD at Pi Bootup


Next, we're going to set PADD to open automatically on your PiTFT when we start our Pi.

Open `~/.bashrc`:

```
nano ~/.bashrc
```

Navigate to the end of the file (by pressing the **down arrow key**) and add the following text:

```
# Run PADD
# If we're on the PiTFT screen (ssh is xterm)
if [ "$TERM" == "linux" ] ; then
  while :
  do
    ./padd.sh
    sleep 1
  done
fi
```

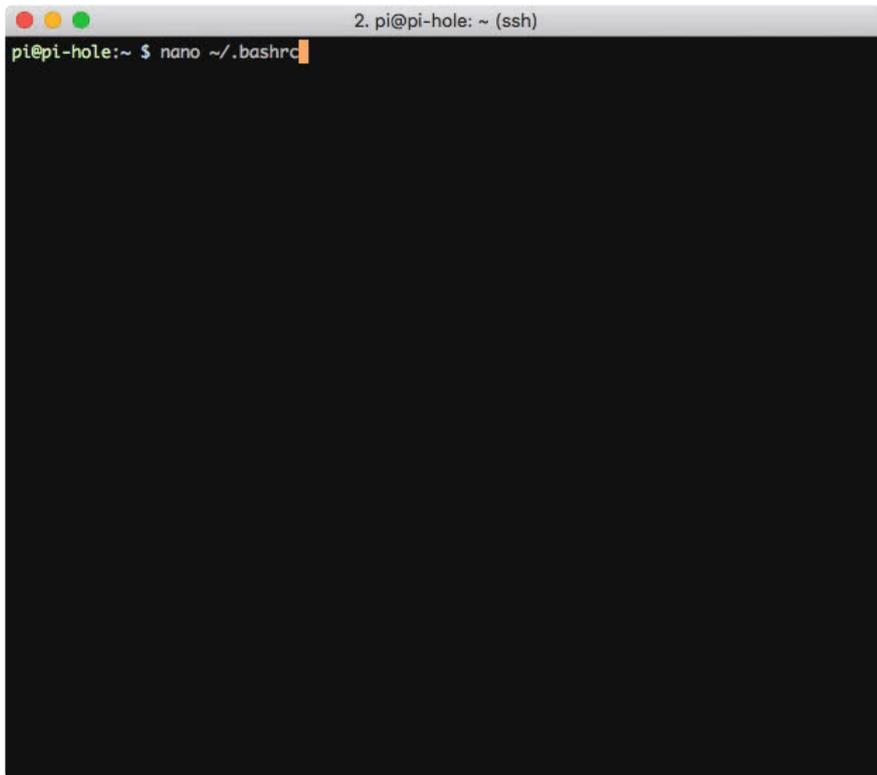

Save (**control+O**) the configuration and exit (**control+X**) nano to be brought back to the terminal.


Turn off the PiTFT at Night

The PiTFT is **bright** and doesn't need to be powered-on at night, so let's put it to sleep until we wake up.

Edit cron as root:

```
sudo crontab -e
```

Select nano as an editor by pressing the **2** key.

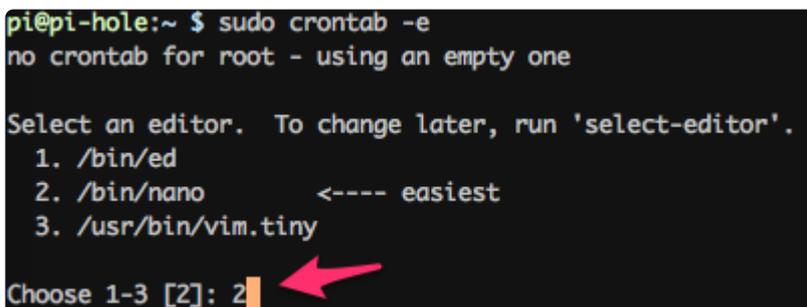

Scroll beneath the commented text (#) and enter the following:

```
# PADD Sleep
# Turn off the PiTFT+ at midnight
00 00 * * * sh -c 'echo "0" &gt; /sys/class/backlight/soc\:backlight/brightness'
# Turn on the PiTFT+ at 8:00 am
00 08 * * * sh -c 'echo "1" &gt; /sys/class/backlight/soc\:backlight/brightness'
```

```
GNU nano 2.7.4 File: /tmp/crontab.CfbmGY/crontab Modified
#
# For example, you can run a backup of all your user accounts
# at 5 a.m every week with:
# 0 5 * * 1 tar -zcf /var/backups/home.tgz /home/
#
# For more information see the manual pages of crontab(5) and cron(8)
#
# m h dom mon dow   command
# PADD Sleep
# Turn off the PiTFT+ at midnight
00 00 * * * sh -c 'echo "0" > /sys/class/backlight/soc\:backlight/brightness'
# Turn on the PiTFT+ at 8:00 am
00 08 * * * sh -c 'echo "1" > /sys/class/backlight/soc\:backlight/brightness'
```

Save (**control+O**) the configuration and exit (**control+X**) nano to be brought back to the terminal.

Reboot the Pi to apply the new changes by running:

```
sudo reboot
```

When your Pi reboots, the TFT should boot into PADD:




After PADD starts, it should go into display mode. If your PADD is displaying statistics about your network, congrats! We're all set up and ready to test our advertisement-blocking-pi.



Smaller Pi Displays


You can also use this guide with smaller displays, like the [PiTFT 2.8"](http://adafruit.it/2423) (<http://adafruit.it/2423>). The full PADD display is unsupported by this screen - but don't worry - it'll automatically display a smaller, mini PADD interface.



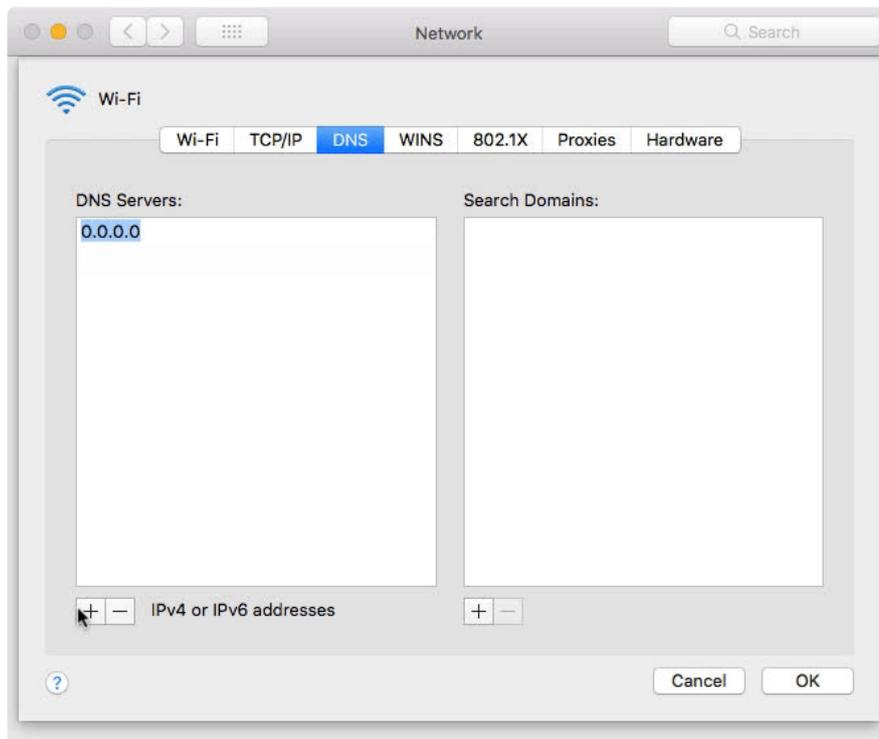

You may need to restart your network or browser to have it kick in, also there may be some cached ads so don't worry if not everything is blocked.

Not sure if your Pi-hole is configured properly? Visit blockads.fivefilters.org (<https://adafru.it/BHB>) from the device you're configuring to test Pi-hole functionality.

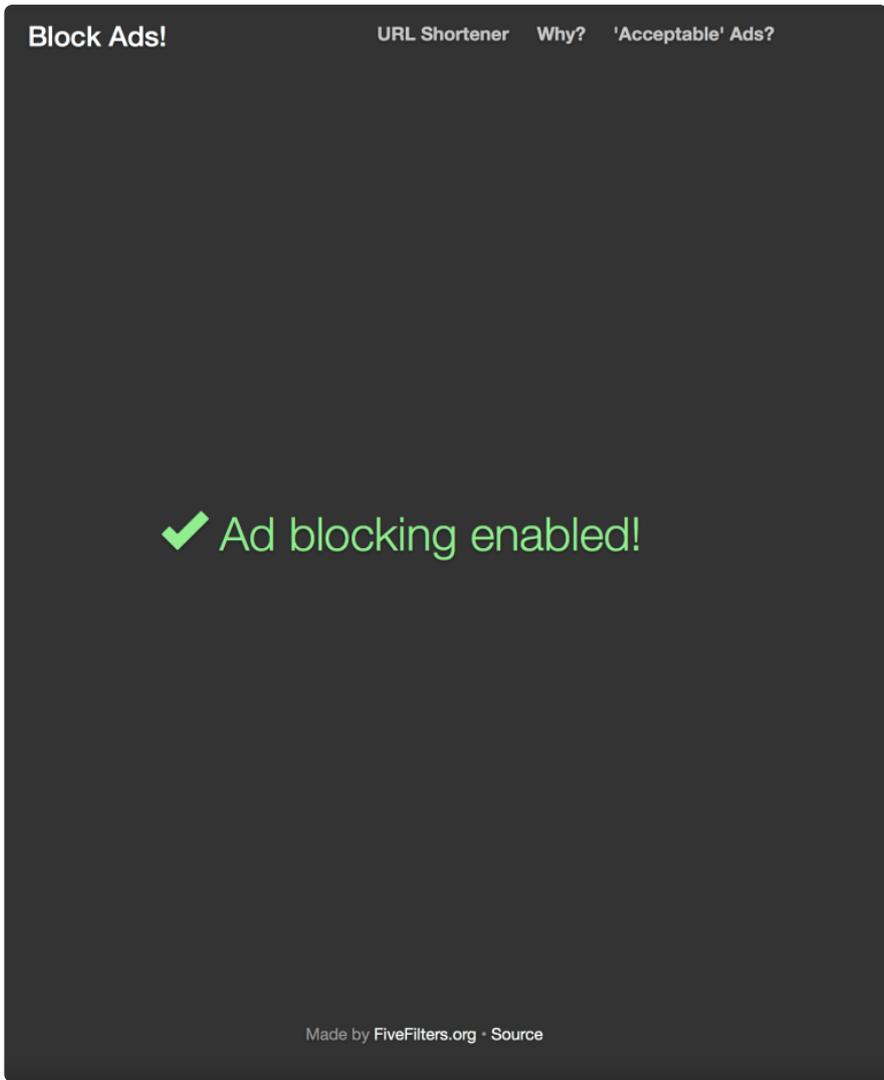

You can also visit some of your favorite sites or load a mobile application which would normally have in-application advertisements to test your Pi-hole.

Router Configuration for Pi-Hole

DHCP Server Setting

Router Name :

DHCP Server: Enabled Disabled

Start IP Address: . . .

Maximum Number of Users:

IP Address Range: . . . to

Client Lease Time: minutes (0 means one day)

Static DNS 1: . . .

Static DNS 2: . . .

Static DNS 3: . . .

WINS: . . .

Don't want to configure each device on your network separately? Have a device that doesn't allow you to enter DNS settings? [You can configure your router's DHCP options to force clients to use Pi-hole as their DNS server.](https://adafru.it/BHC) (https://adafru.it/BHC)

Want to switch back to a terminal? Hit CTRL+C

Updating PADD

If your PADD displays Update avail., you'll need to update it. PADD only uses stable builds of Pi-hole and FTLDNS, so you can rest assured that your internet won't break.

We can do this easily by SSH'ing into our Pi-Hole:

```
ssh pi@pi-hole.local
```

Log in. Then, navigate to our home directory:

```
cd ~
```

And update the version of PADD on your Pi by running:

```
wget -N https://raw.githubusercontent.com/jpmck/PADD/master/padd.sh
```

After the update completes, restart your Pi by running:

```
sudo reboot
```

Once restarted, PADD should display "Pi-hole is up-to-date".

Troubleshooting

My Pi-Hole shows an error: `bash warning: setlocale LC_ALL: cannot change locale (en_US.UTF-8)`

Enter the following in your terminal to launch raspi-config:

```
sudo raspi-config
```

From the menu, select: **Localization Options -> Change Locale.**

Select Generate en_US.UTF-8 UTF-8 , and walk through the prompts.