




# Adafruit 128x64 OLED FeatherWing

Created by Kattni Rembor

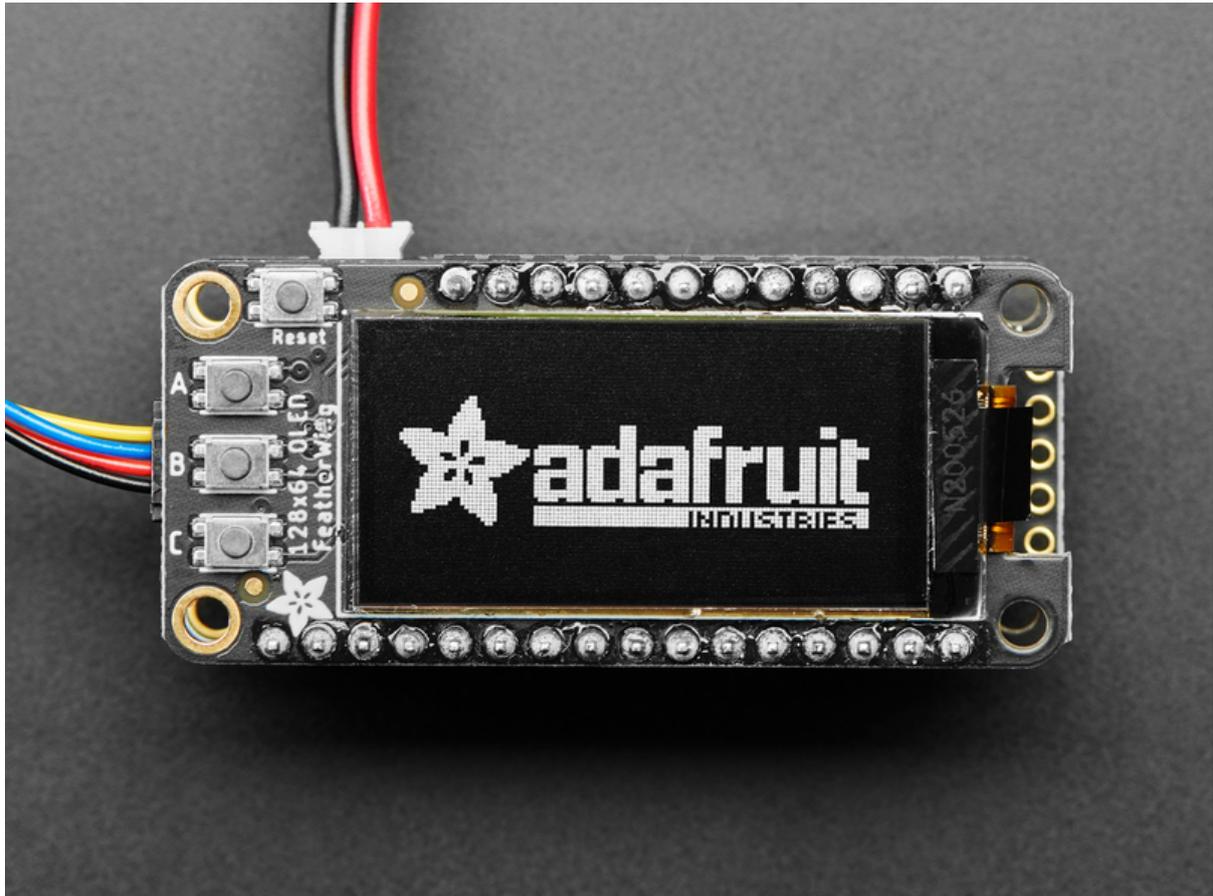

<https://learn.adafruit.com/adafruit-128x64-oled-featherwing>


Last updated on 2025-03-13 03:42:10 PM EDT

# Table of Contents


Overview	3
Assembly	6
<ul style="list-style-type: none"><li>• Prepare the header strip:</li><li>• Add the FeatherWing:</li><li>• And Solder!</li></ul>	
CircuitPython	9
<ul style="list-style-type: none"><li>• CircuitPython Wiring</li><li>• CircuitPython Installation of DisplayIO SH1107 Library</li><li>• CircuitPython Usage</li></ul>	
Python Docs	13
Arduino Code	13
<ul style="list-style-type: none"><li>• Install Arduino Libraries</li><li>• Run Example Code</li><li>• Do more!</li></ul>	
Wiring to other Microcontrollers	16
<ul style="list-style-type: none"><li>• Minimal Wiring Example</li><li>• Full Wiring Example</li></ul>	
Downloads	18
<ul style="list-style-type: none"><li>• Files</li><li>• Schematic</li><li>• Fab Print</li></ul>	

---

# Overview

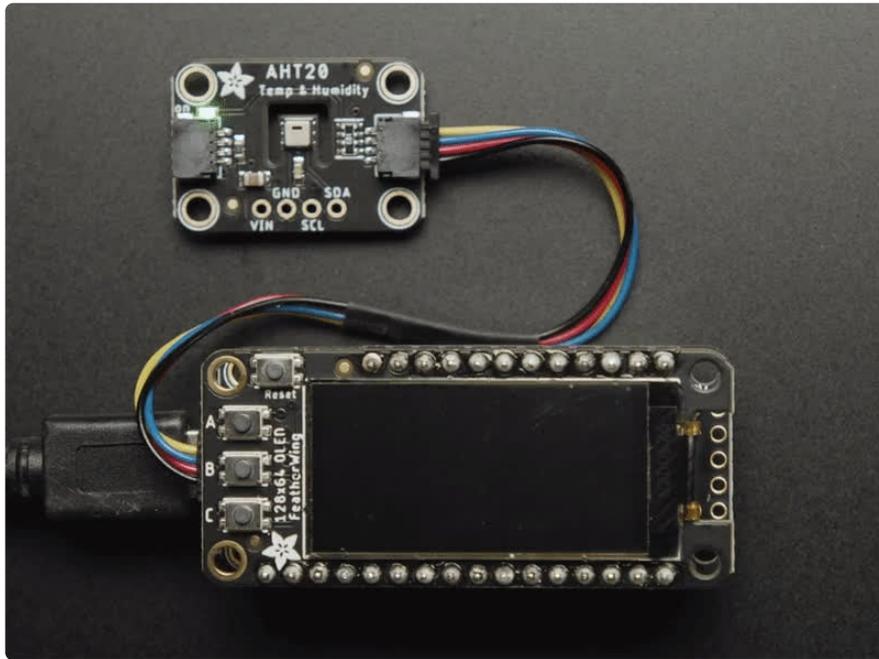


A Feather board without ambition is a Feather board without FeatherWings! This is the **FeatherWing 128x64 OLED**: it adds a gorgeous 128x64 monochrome OLED plus 3 user buttons to any Feather main board. Using our [Feather Stacking Headers](http://adafru.it/2830) (<http://adafru.it/2830>) or [Feather Female Headers](http://adafru.it/2886) (<http://adafru.it/2886>) you can connect a FeatherWing on top of your Feather board and let the board take flight!

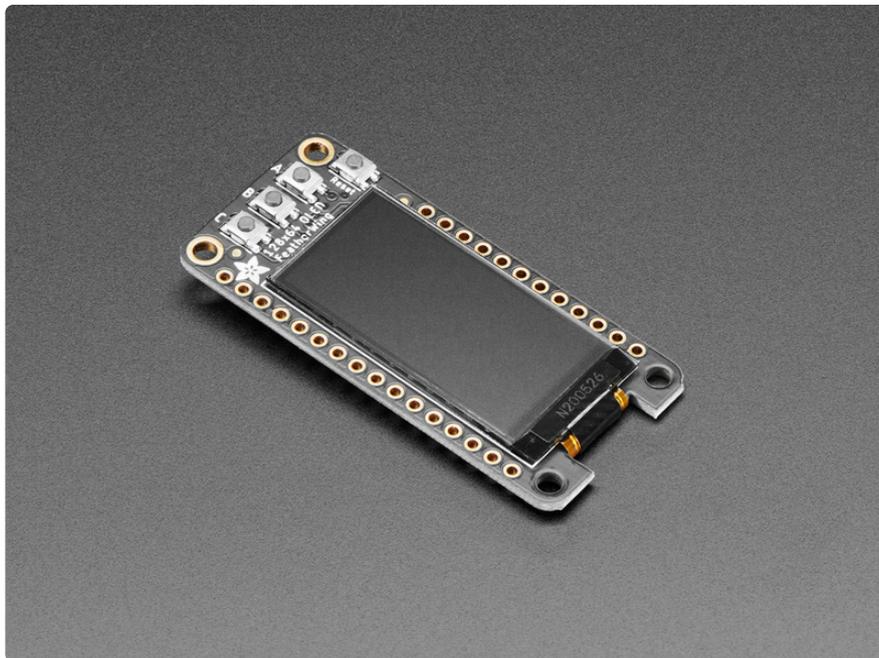


These displays are small, only about 1.3" diagonal, but very readable due to the high contrast of an OLED display. This screen is made of 128x64 individual white OLED pixels and because the display makes its own light, no backlight is required. This


reduces the power required to run the OLED and is why the display has such high contrast; we really like this miniature display for its crispness! We also toss on a reset button and three mini tactile buttons called A B and C, so you can add a mini user interface to your Feather. [If you've used our 128x32 OLED FeatherWing \(http://adafru.it/2900\)](http://adafru.it/2900), you'll be happy to know that this FeatherWing is pin compatible for a quick and easy upgrade.

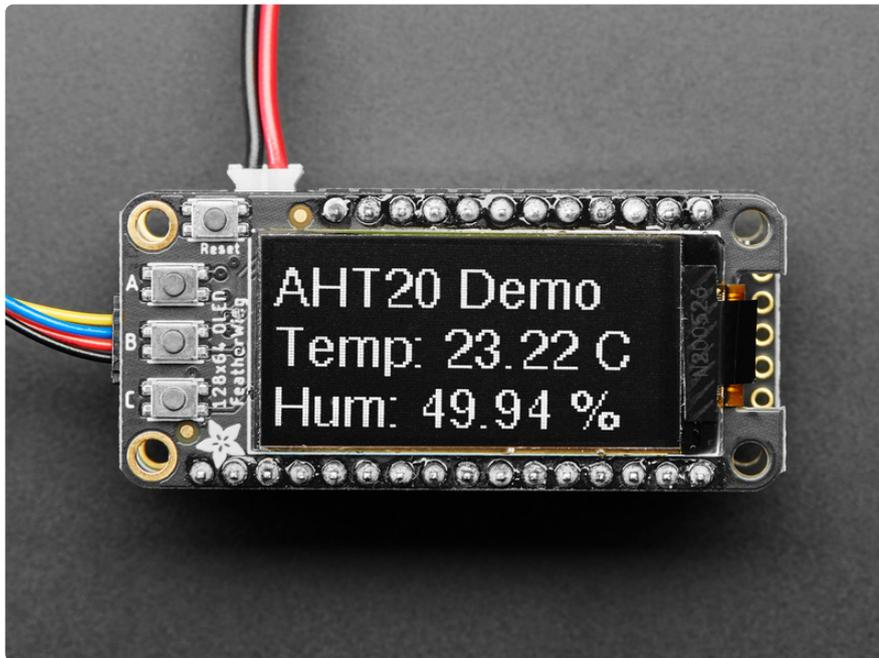


The display uses only I2C so you can easily connect it up with just two pins used (plus power and ground!). There's an auto-reset circuit and a reset button on the top. We've even included a [SparkFun qwiic \(https://adafru.it/Fpw\)](https://adafru.it/Fpw)-compatible [STEMMA QT \(https://adafru.it/Ft4\)](https://adafru.it/Ft4) connector for the I2C bus so you can plug and play any of our STEMMA QT, qwiic or [Grove I2C sensors \(http://adafru.it/4528\)](http://adafru.it/4528) and devices!

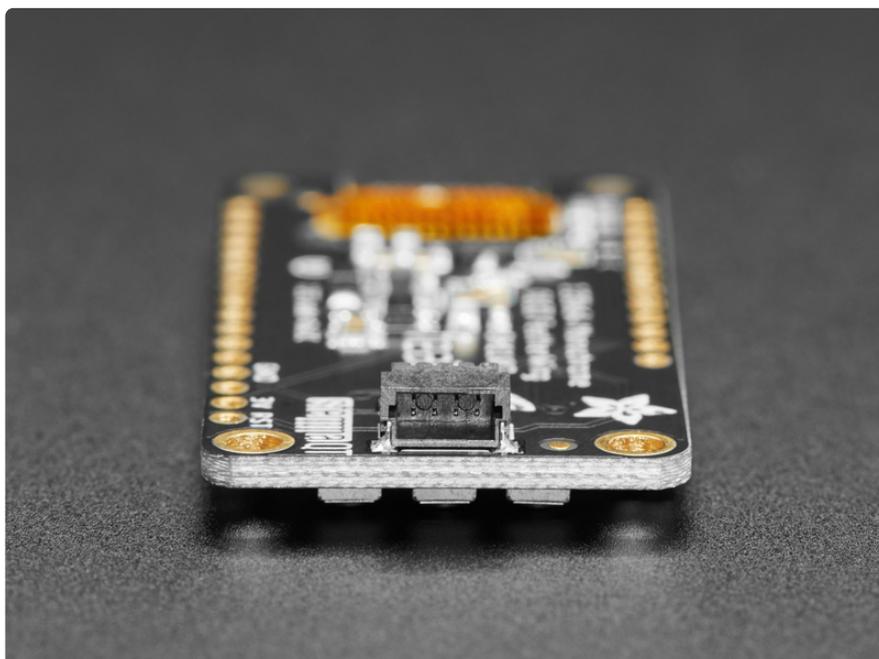

Tested working with **all Feather boards**. The OLED uses only the two I2C pins on the Feather, and you can pretty much stack it with any other FeatherWing, even ones that use I2C since that is a shared bus.

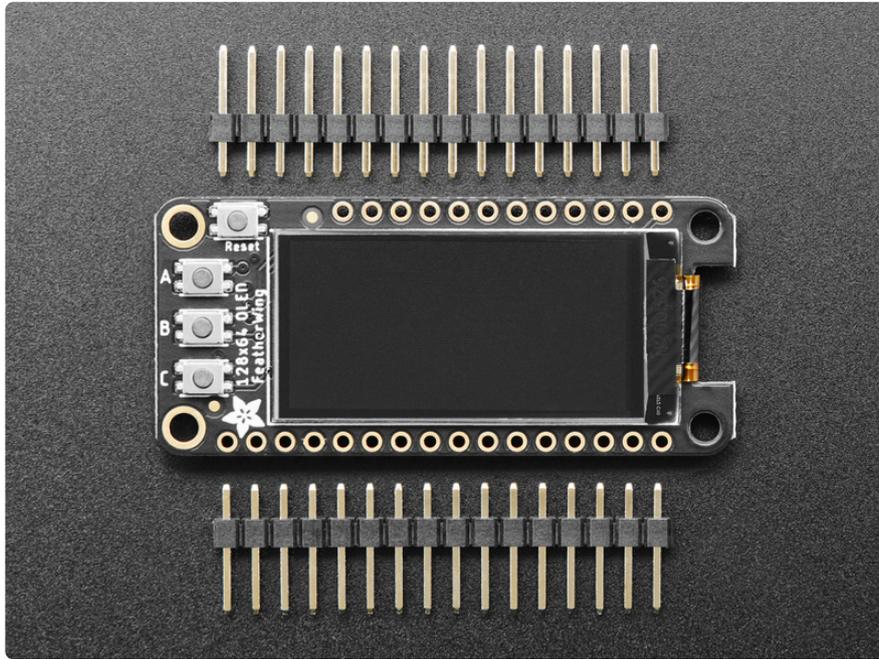

Comes with a set of 0.1" headers that are unattached, you'll need to solder them in to plug into your Feather board. [Check out our range of Feather boards here.](https://adafruit.it/l7B) (<https://adafruit.it/l7B>)

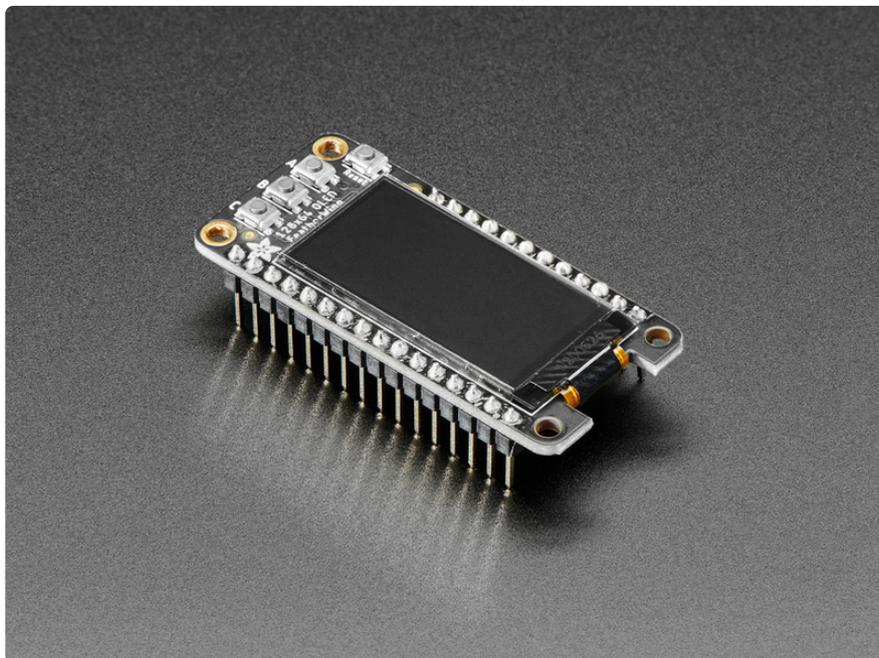


---




# Assembly



**Prepare the header strip:**  
Cut the strip to length if necessary. It will be easier to solder if you insert it into a breadboard - **long pins down**

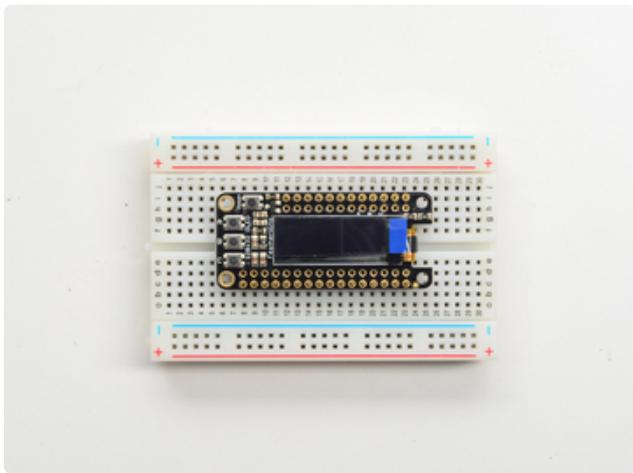

**Add the FeatherWing:**  
Place the featherwing over the pins so that the short pins poke through the two rows of breakout pads


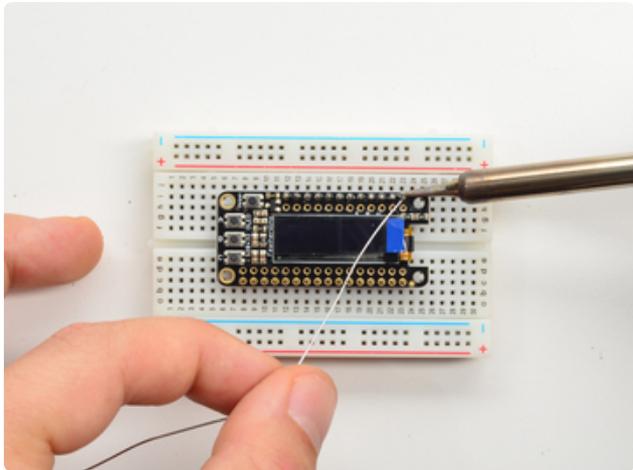
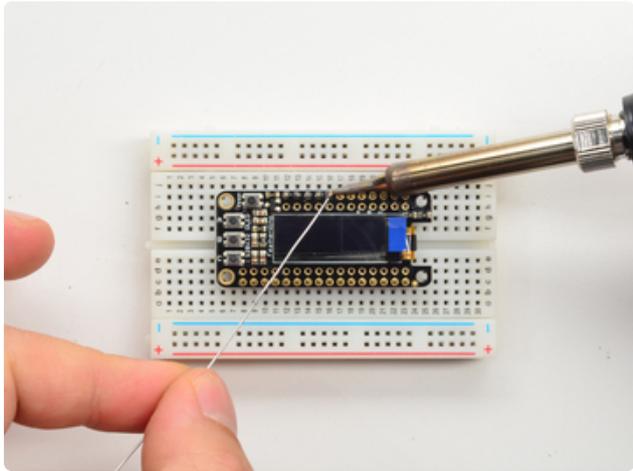
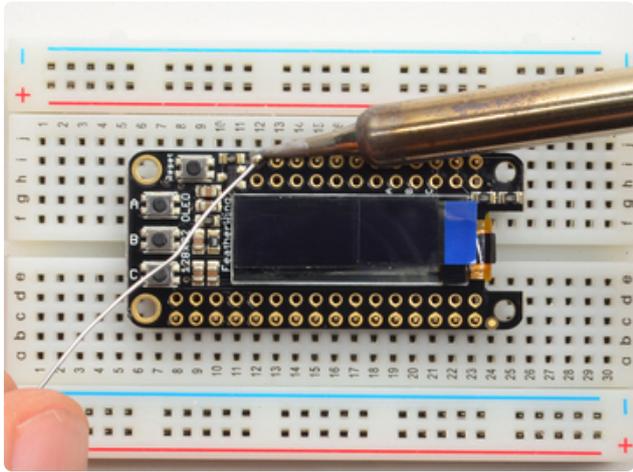


## And Solder!


Be sure to solder all pins for reliable electrical contact.

(For tips on soldering, be sure to check out our [Guide to Excellent Soldering \(https://adafru.it/aTk\)](https://adafru.it/aTk)).

Start by soldering the first row of header

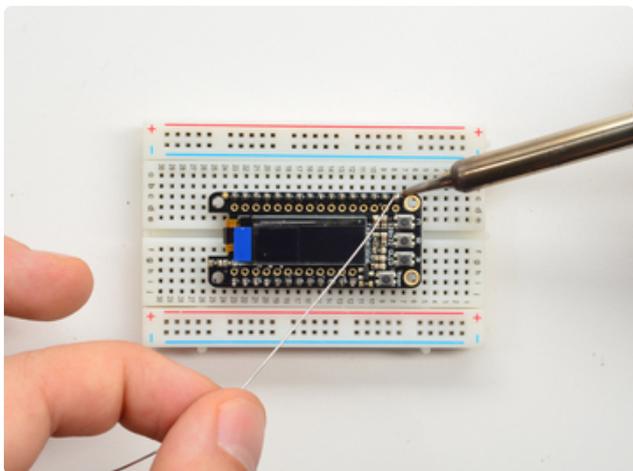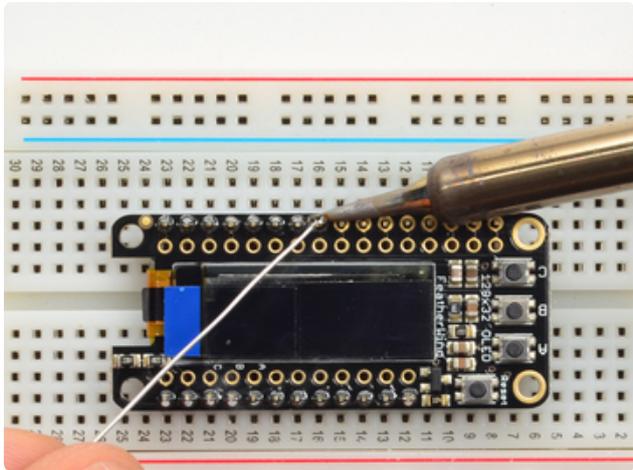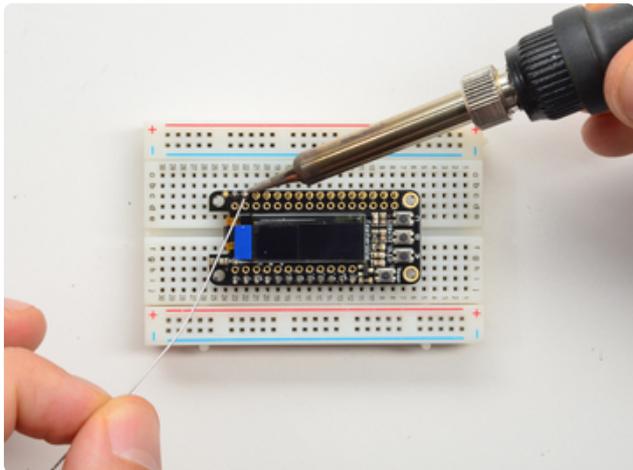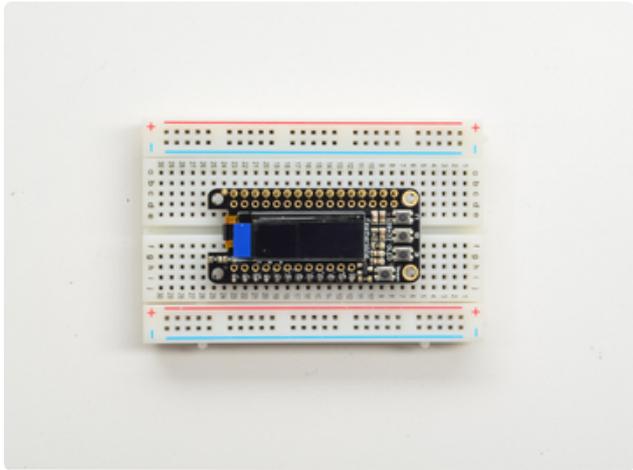


Now flip around and solder the other row completely

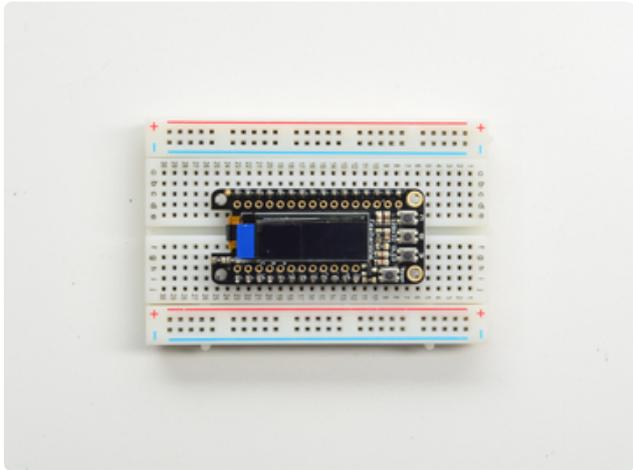

You're done with the two header strips.

Check your solder joints visually and continue onto the next steps

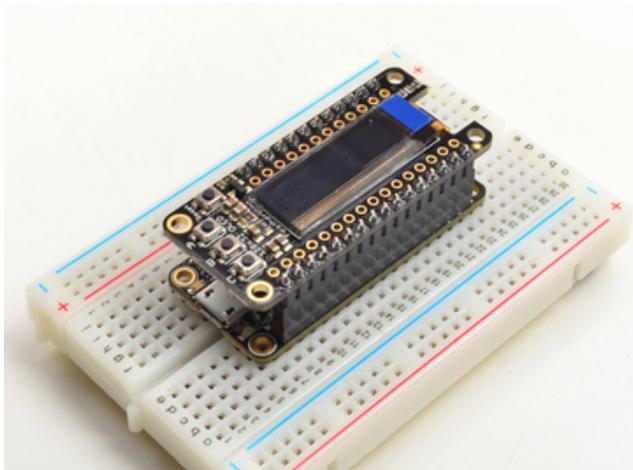

OK You're done! You can now plug your Feather into your Feather and get your OLED on!

---

## CircuitPython




It's easy to use the Adafruit 128x64 OLED FeatherWing with CircuitPython and the [Adafruit CircuitPython DisplayIO SH1107 \(https://adafru.it/OaL\)](https://adafru.it/OaL) module. This module allows you to easily write CircuitPython code to control the display.

Not all CircuitPython builds include DisplayIO support, many SAMD21 and other 'small RAM/Flash' chips may not have support. Check the Support Matrix to verify [https://circuitpython.readthedocs.io/en/latest/shared-bindings/support\\_matrix.html](https://circuitpython.readthedocs.io/en/latest/shared-bindings/support_matrix.html)

## CircuitPython Wiring

Connecting up the FeatherWing to a Feather is super simple!

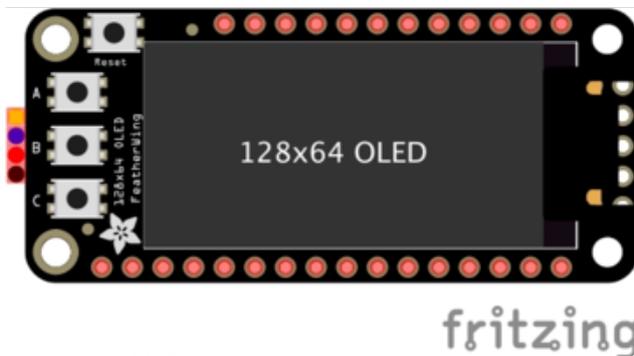


Solder the Feather with female headers on top or stacking headers. Attach the OLED FeatherWing using the stacking method.

## CircuitPython Installation of DisplayIO SH1107 Library

To use the 128x64 OLED FeatherWing with your Adafruit CircuitPython Feather board you'll need to install the [Adafruit CircuitPython DisplayIO SH1107 \(https://adafru.it/OaL\)](https://adafru.it/OaL) module on your board.

you'll need to install the necessary libraries to use the hardware--carefully follow the steps to find and install these libraries from [Adafruit's CircuitPython library bundle \(https://adafru.it/ENC\)](https://adafru.it/ENC). Our CircuitPython starter guide has [a great page on how to install the library bundle \(https://adafru.it/ABU\)](https://adafru.it/ABU).

Install the following libraries individually on your board:

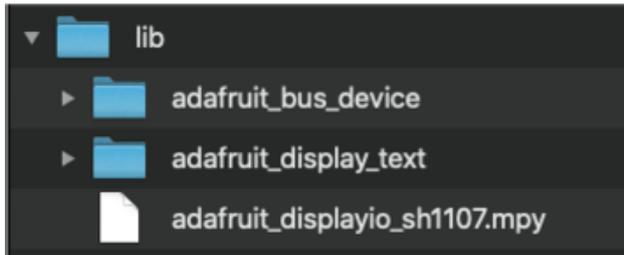

`adafruit_displayio_sh1107`  
`adafruit_bus_device`

To work through the code example below, you'll also need the following library:

`adafruit_display_text`

Before continuing make sure your board's lib folder or root filesystem has the `adafruit_displayio_sh1107.mpy`, `adafruit_bus_device` and `adafruit_display_text` files and folders copied over.

## CircuitPython Usage

Save the following to your Feather as `code.py`:

```
# SPDX-FileCopyrightText: 2021 ladyada for Adafruit Industries
#
# SPDX-License-Identifier: Unlicense
"""
Author: Mark Roberts (mdroberts1243) from Adafruit code
This test will initialize the display using displayio and draw a solid white
background, a smaller black rectangle, miscellaneous stuff and some white text.
"""

import board
import displayio
import terminalio

# can try import bitmap_label below for alternative
from adafruit_display_text import label
from i2cdisplaybus import I2CDisplayBus

import adafruit_displayio_sh1107

displayio.release_displays()
# oled_reset = board.D9

# Use for I2C
i2c = board.I2C() # uses board.SCL and board.SDA
# i2c = board.STEMMA_I2C() # For using the built-in STEMMA QT connector on a
microcontroller
display_bus = I2CDisplayBus(i2c, device_address=0x3C)

# SH1107 is vertically oriented 64x128
WIDTH = 128
HEIGHT = 64
BORDER = 2

display = adafruit_displayio_sh1107.SH1107(display_bus, width=WIDTH, height=HEIGHT)

# Make the display context
```

```

splash = displayio.Group()
display.root_group = splash

color_bitmap = displayio.Bitmap(WIDTH, HEIGHT, 1)
color_palette = displayio.Palette(1)
color_palette[0] = 0xFFFFFF # White

bg_sprite = displayio.TileGrid(color_bitmap, pixel_shader=color_palette, x=0, y=0)
splash.append(bg_sprite)

# Draw a smaller inner rectangle in black
inner_bitmap = displayio.Bitmap(WIDTH - BORDER * 2, HEIGHT - BORDER * 2, 1)
inner_palette = displayio.Palette(1)
inner_palette[0] = 0x000000 # Black
inner_sprite = displayio.TileGrid(inner_bitmap, pixel_shader=inner_palette,
x=BORDER, y=BORDER)
splash.append(inner_sprite)

# Draw some white squares
sm_bitmap = displayio.Bitmap(8, 8, 1)
sm_square = displayio.TileGrid(sm_bitmap, pixel_shader=color_palette, x=58, y=17)
splash.append(sm_square)

med_bitmap = displayio.Bitmap(16, 16, 1)
med_square = displayio.TileGrid(med_bitmap, pixel_shader=color_palette, x=71, y=15)
splash.append(med_square)

lrg_bitmap = displayio.Bitmap(32, 32, 1)
lrg_square = displayio.TileGrid(lrg_bitmap, pixel_shader=color_palette, x=91, y=28)
splash.append(lrg_square)

# Draw some label text
text1 = "0123456789ABCDEF123456789AB" # overly long to see where it clips
text_area = label.Label(terminalio.FONT, text=text1, color=0xFFFFFF, x=8, y=8)
splash.append(text_area)
text2 = "SH1107"
text_area2 = label.Label(terminalio.FONT, text=text2, scale=2, color=0xFFFFFF, x=9,
y=44)
splash.append(text_area2)

while True:
    pass

```



That's all there is to using CircuitPython with your 128x64 OLED FeatherWing!

---

# Python Docs

[Python Docs \(https://adafru.it/NFU\)](https://adafru.it/NFU)

---

## Arduino Code




The OLED display we use is well supported and works for all Feathers, all you need is a little library support and you will be drawing in no time!


## Install Arduino Libraries

Using the OLED FeatherWing with Arduino sketches requires that two libraries be installed: **Adafruit\_SH110x**, which handles the low-level communication with the hardware, and **Adafruit\_GFX**, which builds atop this to add graphics functions like lines, circles and text.


Open up the library manager:

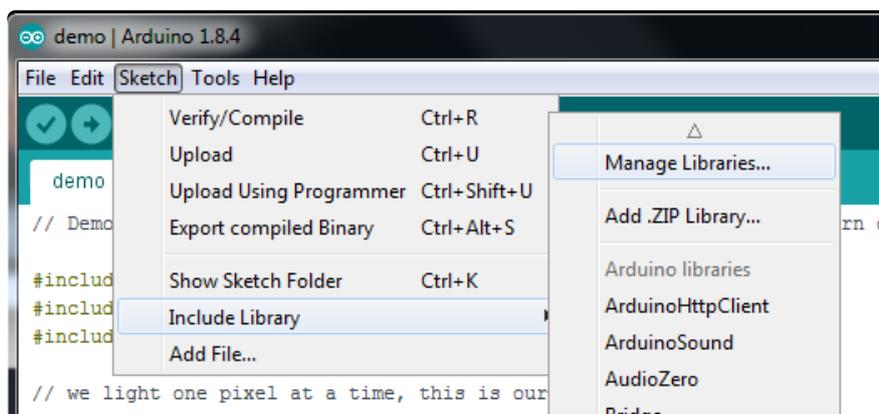

Search for the **Adafruit SH110x** library and install it

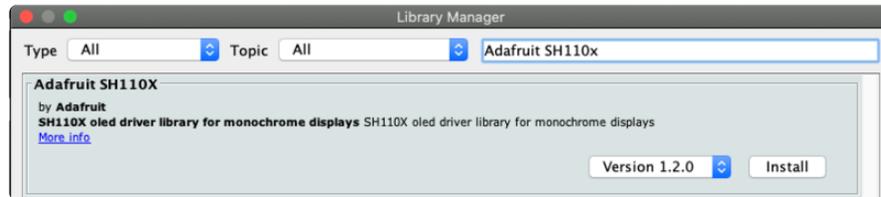

Search for the **Adafruit GFX** library and install it

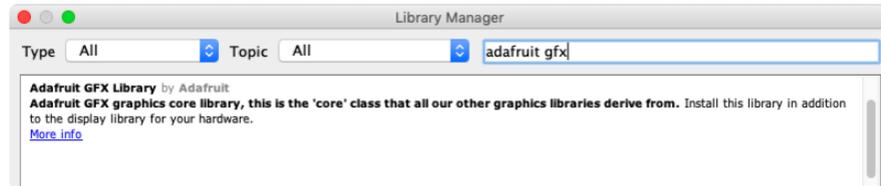

If using an earlier version of the Arduino IDE (prior to 1.8.10), also locate and install **Adafruit\_BusIO** (newer versions will install this dependency automatically).

We also have a great tutorial on Arduino library installation here:

<http://learn.adafruit.com/adafruit-all-about-arduino-libraries-install-use> (<https://adafru.it/aYM>)

## Run Example Code

We have a basic demo that works with all Feathers, so compile/upload this sketch:

```
#include <SPI.h>
#include <Wire.h>
#include <Adafruit_GFX.h>
#include <Adafruit_SH110X.h>

Adafruit_SH1107 display = Adafruit_SH1107(64, 128, &Wire);

// OLED FeatherWing buttons map to different pins depending on board:
#if defined(ESP8266)
  #define BUTTON_A 0
  #define BUTTON_B 16
  #define BUTTON_C 2
#elif defined(ESP32) && \
  !defined(ARDUINO_ADAFRUIT_FEATHER_ESP32S2) && \
  !defined(ARDUINO_ADAFRUIT_FEATHER_ESP32S3) && \
  !defined(ARDUINO_ADAFRUIT_FEATHER_ESP32S3_NOPSRAM)
  #define BUTTON_A 15
  #define BUTTON_B 32
  #define BUTTON_C 14
#elif defined(ARDUINO_STM32_FEATHER)
  #define BUTTON_A PA15
  #define BUTTON_B PC7
  #define BUTTON_C PC5
#elif defined(TEENSYDUINO)
  #define BUTTON_A 4
  #define BUTTON_B 3
  #define BUTTON_C 8
#elif defined(ARDUINO_NRF52832_FEATHER)
  #define BUTTON_A 31
  #define BUTTON_B 30
  #define BUTTON_C 27
#else // 32u4, M0, M4, nrf52840, esp32-s2, esp32-s3 and 328p
  #define BUTTON_A 9
```

```

#define BUTTON_B 6
#define BUTTON_C 5
#endif

void setup() {
  Serial.begin(115200);

  Serial.println("128x64 OLED FeatherWing test");
  delay(250); // wait for the OLED to power up
  display.begin(0x3C, true); // Address 0x3C default

  Serial.println("OLED begun");

  // Show image buffer on the display hardware.
  // Since the buffer is initialized with an Adafruit splashscreen
  // internally, this will display the splashscreen.
  display.display();
  delay(1000);

  // Clear the buffer.
  display.clearDisplay();
  display.display();

  display.setRotation(1);
  Serial.println("Button test");

  pinMode(BUTTON_A, INPUT_PULLUP);
  pinMode(BUTTON_B, INPUT_PULLUP);
  pinMode(BUTTON_C, INPUT_PULLUP);

  // text display tests
  display.setTextSize(1);
  display.setTextColor(SH110X_WHITE);
  display.setCursor(0,0);
  display.print("Connecting to SSID\n'adafruit:");
  display.print("connected!");
  display.println("IP: 10.0.1.23");
  display.println("Sending val #0");
  display.display(); // actually display all of the above
}

void loop() {
  if(!digitalRead(BUTTON_A)) display.print("A");
  if(!digitalRead(BUTTON_B)) display.print("B");
  if(!digitalRead(BUTTON_C)) display.print("C");
  delay(10);
  yield();
  display.display();
}

```

You should see the OLED display a splash screen then spit out some text (it's a make-believe WiFi connection status screen...this doesn't actually do anything, just showing how typical project might look). If you press the **A** **B** or **C** buttons it will also print those out.

## Do more!

You can use any of the Adafruit GFX library commands to draw onto your OLED, that means that you get all sorts of shapes, fonts, lines, etc available. [Check out GFX for all the underlying graphics support functions and how they work \(https://adafru.it/d0L\)](https://adafru.it/d0L)

**Remember you need to call `display()` after drawing to refresh the screen!**

---


# Wiring to other Microcontrollers

Using the OLED FeatherWing with anything but a Feather board is not recommended! Really! But people keep trying to do it anyways so here's some suggestions

While wiring to a non-Feather board is not recommended, it is still possible. This page will show you how to do that. At a minimum, you must connect the **RST** pin in addition to **3V**, **GND**, **SCL** and **SDA**, so using just a Stemma QT cable by itself is not possible. This page will show you how to wire the OLED FeatherWing up to a Metro M4 using just wires as well as the Metro ESP32-S2, which has a built-in STEMMA QT Port. Other boards may vary a bit.


## Minimal Wiring Example

To get the 128x64 OLED FeatherWing working with minimal wiring, wire it up exactly as shown below. Here's an example of wiring a Metro ESP32-S2 to the FeatherWing with I2C using one of the handy [STEMMA QT](https://adafru.it/Ft4) connectors and only 1 additional wire:

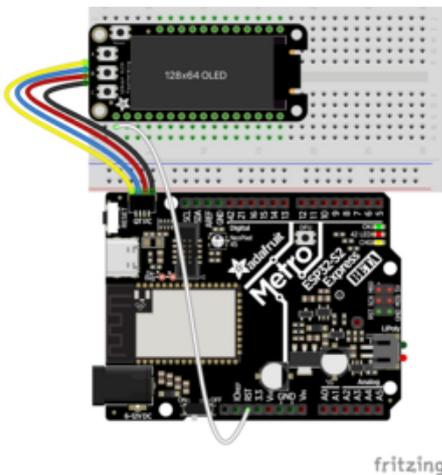

Board STEMMA QT to FeatherWing  
STEMMA QT  
Board RST to FeatherWing Reset (white wire)

If you'd like to wire the board more fully and not use the STEMMA QT, here's an example of wiring a Metro M4 to the FeatherWing:

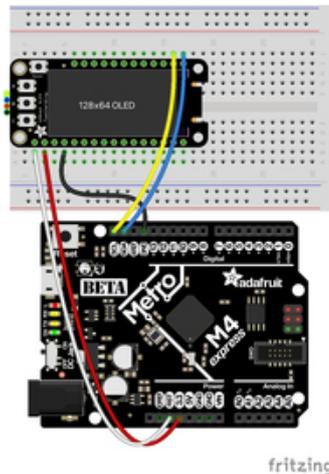


- Board 3V to FeatherWing 3V (red wire)
- Board GND to FeatherWing GND (black wire)
- Board SCL to FeatherWing SCL (yellow wire)
- Board SDA to FeatherWing SDA (blue wire)
- Board RST to FeatherWing Reset (white wire)

You can also use a [STEMMA QT adapter with male headers](http://adafru.it/4209) and wire it up with a combination of the 2 boards to replace one side of the 3V, GND, SCL, and SDA lines, but the reset wire will still need to be connected.

## Full Wiring Example


If you would also like to use the buttons on the FeatherWing, here are some examples to add those. These wiring examples use pins 5, 6, and 9 like the Feather M4, but feel free to wire them to different GPIOs if it suits your needs better.

Here's the STEMMA QT example above, but with 3 additional wires for the buttons:

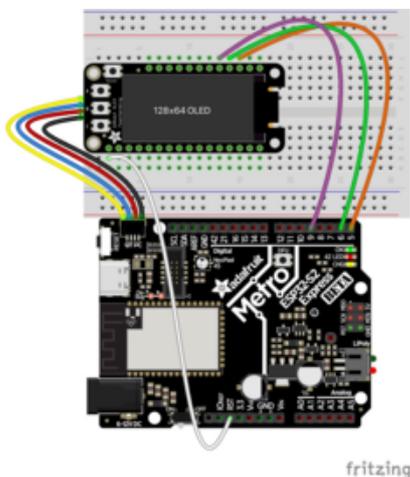

- Board STEMMA QT to FeatherWing STEMMA QT
- Board RST to FeatherWing Reset (white wire)
- Board GPIO 9 to FeatherWing Button A (purple wire)
- Board GPIO 6 to FeatherWing Button B (green wire)
- Board GPIO 5 to FeatherWing Button C (orange wire)

Here's the fully wired Metro M4 example above, but with 3 additional wires for the buttons:

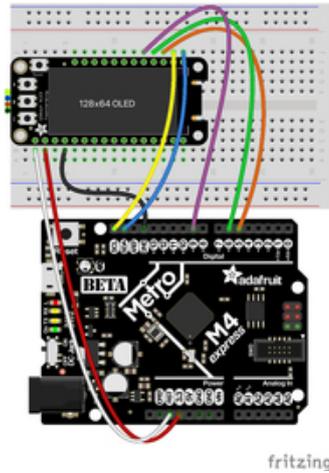

- Board 3V to FeatherWing 3V (red wire)
- Board GND to FeatherWing GND (black wire)
- Board SCL to FeatherWing SCL (yellow wire)
- Board SDA to FeatherWing SDA (blue wire)
- Board RST to FeatherWing Reset (white wire)
- Board GPIO 9 to FeatherWing Button A (purple wire)
- Board GPIO 6 to FeatherWing Button B (green wire)
- Board GPIO 5 to FeatherWing Button C (orange wire)

With these wiring examples, you should be able to run example code in other sections. Depending on your exact wiring, the examples may require some minimal changes.


---

## Downloads

### Files

- [SH1107 Datasheet \(https://adafru.it/Ndp\)](https://adafru.it/Ndp)
- [PCB Files in EagleCAD format \(https://adafru.it/nbc\)](https://adafru.it/nbc)
- [3D models on GitHub \(https://adafru.it/11xa\)](https://adafru.it/11xa)
- [Fritzing object available in the Adafruit Fritzing Library \(https://adafru.it/Ndq\)](https://adafru.it/Ndq)

# Schematic

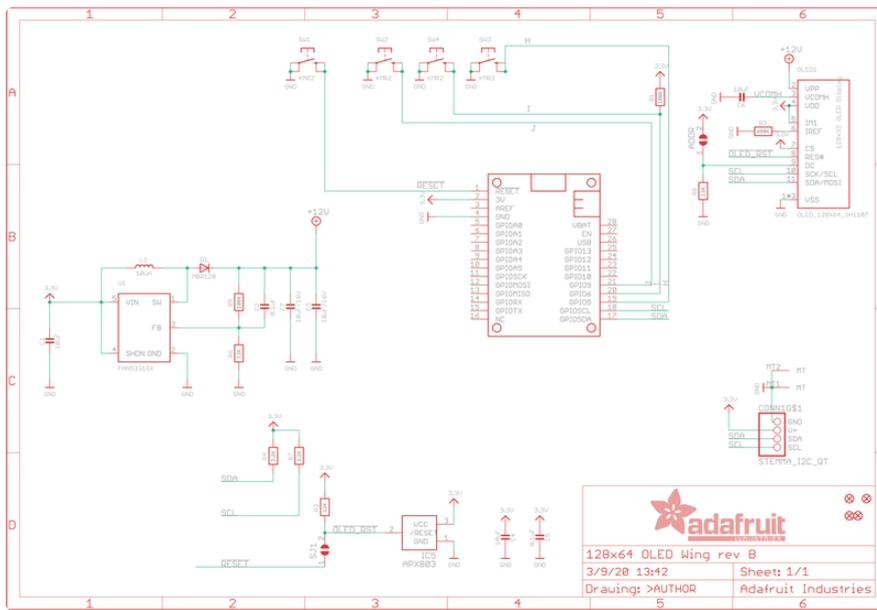

# Fab Print

