



IoT Temperature Logger with Analog Devices ADT7410, Feather and Adafruit IO

Created by Brent Rubell

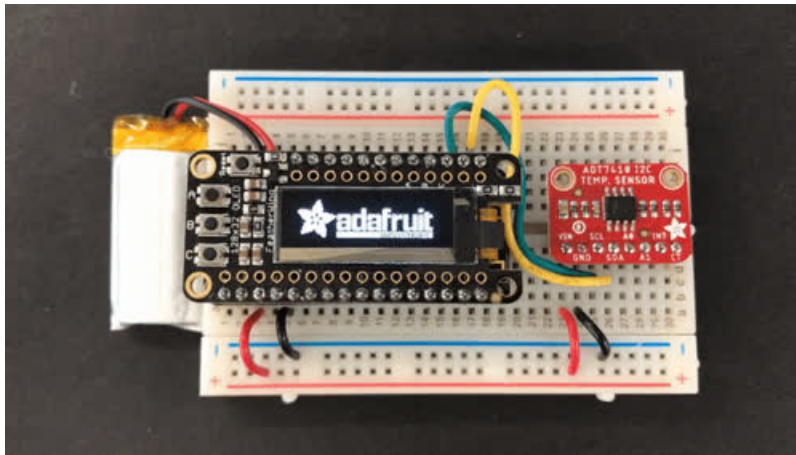


Last updated on 2019-04-04 07:08:14 PM UTC

Overview

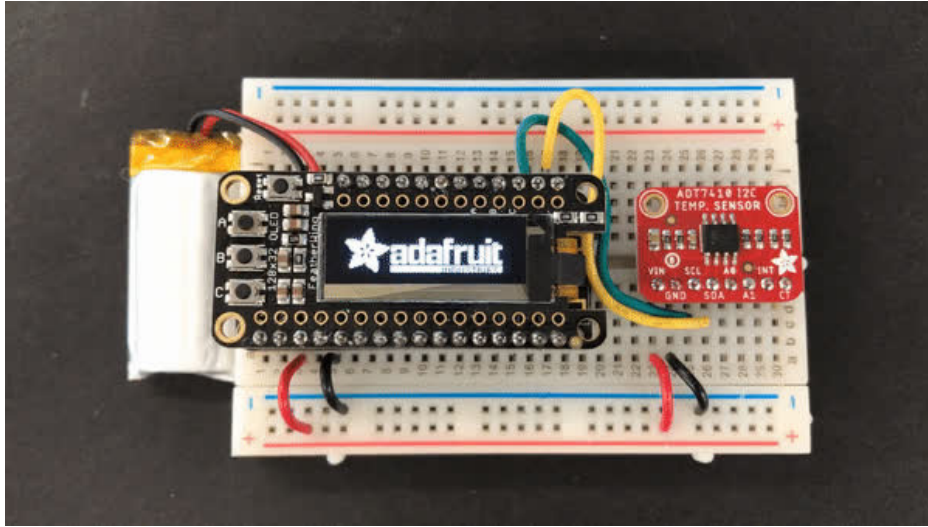

Analog Devices, known for their reliable and well-documented sensor chips - has a high precision and high resolution temperature sensor on the market, and we've got a breakout to make it easy to use! The **Analog Devices ADT7410** gets straight to the point - it's an I2C temperature sensor, with 16-bit 0.0078°C temperature resolution and 0.5°C temperature tolerance. Wire it up to your microcontroller or single-board computer to get reliable temperature readings with ease

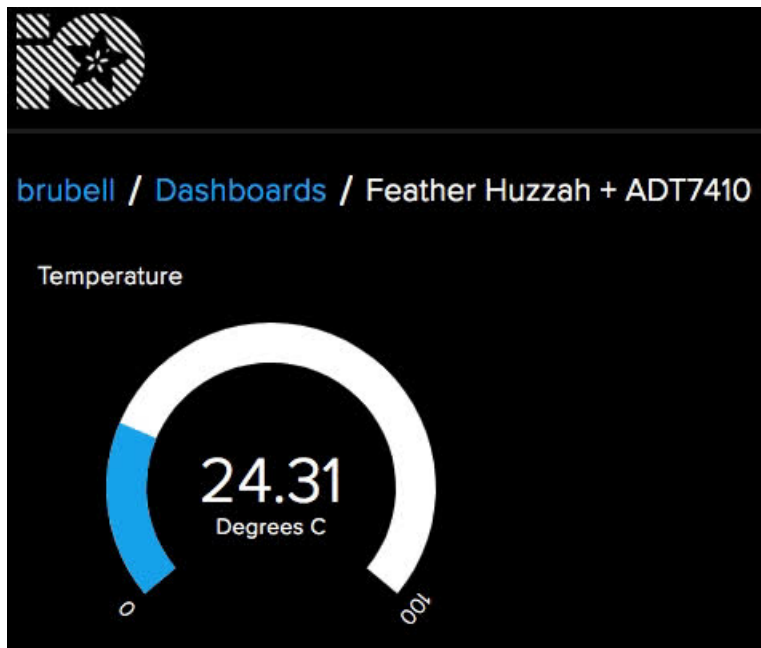


This sensor can easily be brought *online* using a Feather HUZAZH and Adafruit IO. You'll be up and running in under 15 minutes!

If you're looking for a way to precisely monitor and log temperature data to the cloud, follow along!

Thanks to [Digi-Key \(https://adafru.it/BJr\)](https://adafru.it/BJr) and [Analog Devices \(https://adafru.it/DPF\)](https://adafru.it/DPF) for sponsoring the development of this guide - we've made the ADT7410 PCB "[Digi-Key red \(https://adafru.it/BJr\)](https://adafru.it/BJr)" in their honor!


Parts

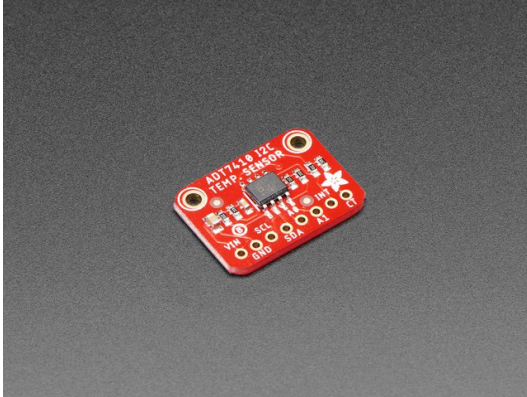

ADT7410 High Accuracy I2C Temperature Sensor Breakout Board

\$5.95
IN STOCK


ADD TO CART

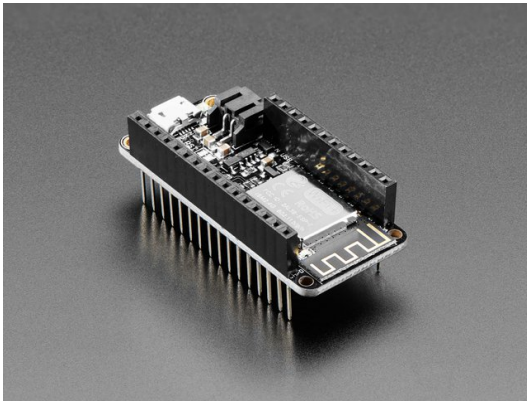

Assembled Feather Huzzah w/ ESP8266 WiFi With Stacking Headers

\$19.95
IN STOCK

ADD TO CART

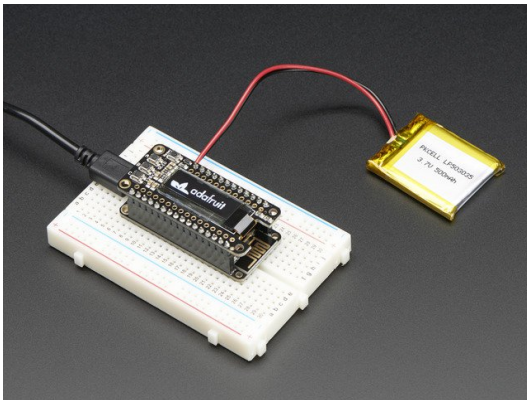

Adafruit FeatherWing OLED - 128x32 OLED Add-on For Feather

\$14.95
IN STOCK

ADD TO CART

Materials

You'll need the materials below to complete this project. If you do not have them, pick them up from the Adafruit Store.

1x [Breadboard](#)

Half-size breadboard

ADD TO CART

1x [Wire Bundle](#)

Breadboarding wire bundle

ADD TO CART

1 x [MicroUSB Cable](#)

USB cable - USB A to Micro-B - 3 foot long

ADD TO CART

Adafruit IO Setup

Feed Setup

If you do not already have an Adafruit IO account set up, head over to io.adafruit.com (<https://adafru.it/fH9>) to link your Adafruit.com account to Adafruit IO.

The first step is to create a new Adafruit IO feed to hold the AD7410's temperature. Navigate to the [feeds page](https://adafru.it/mxC) (<https://adafru.it/mxC>) on Adafruit IO. Then click **Actions** -> **Create New Feed**, and name this feed **temperature**.

- If you do not already know how to create a feed, head over to [Adafruit IO Basics: Feeds](https://adafru.it/ioA) (<https://adafru.it/ioA>).

Create a new Feed ✕

Name

Description

Add to groups

Cancel


Create

Dashboard Setup


Next, step is to create a dashboard to display the value read by the ADT7410 sensor.


- If you do not know how to create or use Dashboards in Adafruit IO, head over to the [Adafruit IO Basics: Dashboards](https://adafru.it/f5m) (<https://adafru.it/f5m>) guide.

Select the Gauge block.

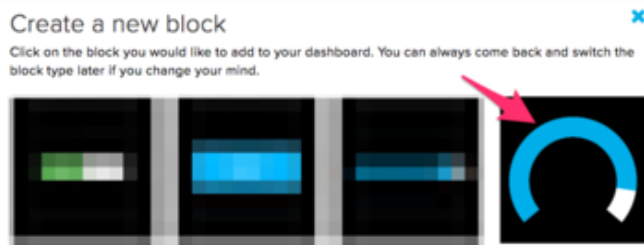

Select the *temperature* feed created earlier.

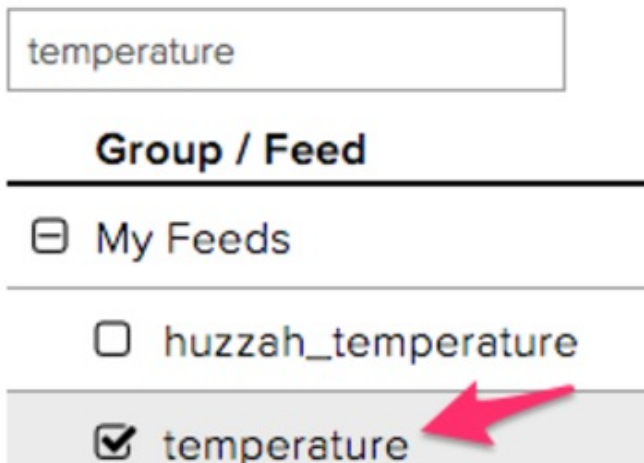

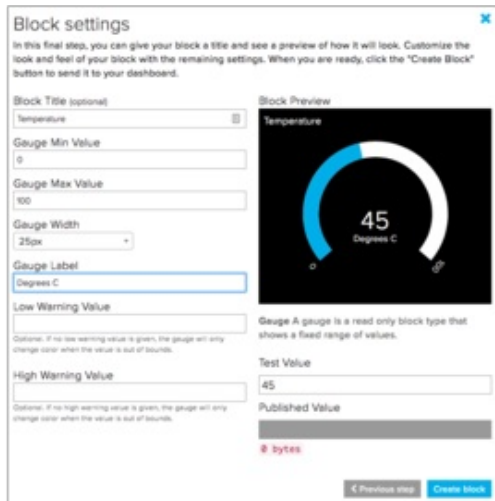


In the Block Settings step, set the **Block Title to Temperature**, set the **Gauge Min/Max Values to the upper and lower temperature thresholds** you want to measure.

You can label the gauge by setting the **Gauge Label** - this example assumes temperature is to be measured in Degrees C.

Uncomfortably hot/cold? You can optionally set the gauge change color to warn you if the temperature goes above (or below) a certain value.

After adding the gauge element, your dashboard will look like the following:

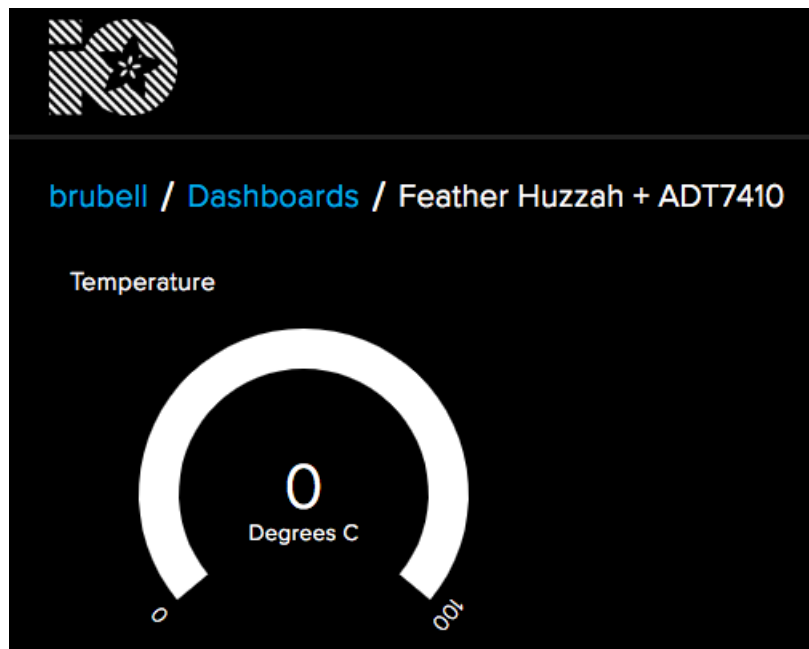

You are also going to need your Adafruit IO username and secret API key.

Navigate to your profile and click the **View AIO Key** button to retrieve them. Write them down in a safe place, you'll need them for later.

Hello, Brent Rubell | [Sign Out](#) | [My Account](#)

Home

Feeds

Dashboards

Triggers

View IO Key

API Docs

FAQ

Learn

News

Support

Terms of Service

Send Feedback

IO Plus Usage
 Feeds: 15 of 16
 Dashboards: 9 of 10
 Rate: 60 / minute
 Current Usage: 0 / min
 Storage: 60 days
[Change Plan](#)

brubell / Profile

[Profile](#) | [Public](#) | [Monitor](#) | [Activities](#) | [Billing](#)

Current Plan

Adefruit IO+

60 data points per minute
 60 days of data storage
 Unlimited dashboards
 Unlimited feeds
 Community support
 Projects and guides

[Redeem Coupon or Pass](#)

Billing

\$99.00 per year plus applicable taxes

You haven't entered a payment method. If you want IO to automatically renew, please [add a payment method](#) to your account.


Your subscription will renew on **May 29, 2019**

[Preview Upcoming Invoice](#)
[Update payment method](#)
[View billing history](#)
[Cancel subscription](#)

Connected services

IFTTT Connected as [Disconnect from IFTTT.com](#)

Wiring

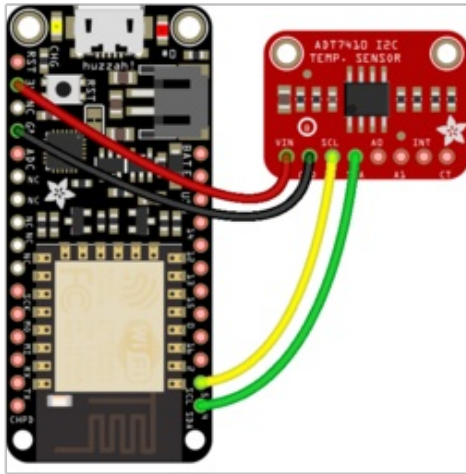


Make the following connections between the **ADT7410** and the **Feather Huzzah ESP8266**

- ADT7410 VIN to Feather 3V
- ADT7410 GND to Feather GND
- ADT7410 SCL to Feather SCL
- ADT7410 SDA to Feather SDA




To easily plug in the Feather OLED on top, make sure to solder or select a Huzzah Feather with stacking headers

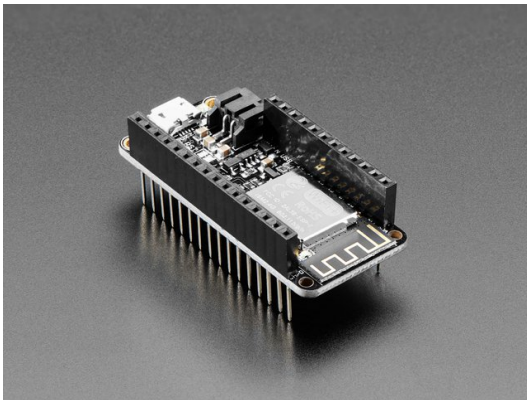

Assembled Feather HUZAZH w/ ESP8266 WiFi With Stacking Headers

\$19.95
IN STOCK

ADD TO CART

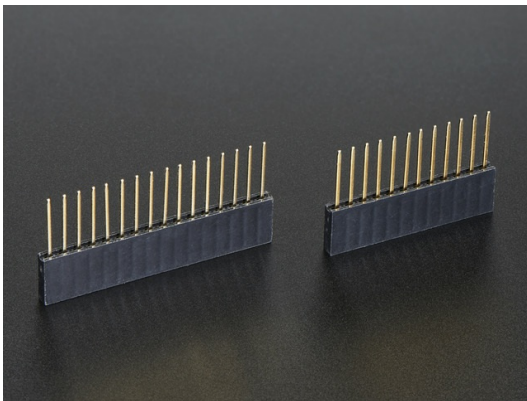

Stacking Headers for Feather - 12-pin and 16-pin female headers

\$1.25
IN STOCK

ADD TO CART

Adding the FeatherWing OLED may require soldering assembly - [follow this page here for instructions \(https://adafruit.com/DSD\)](https://adafruit.com/DSD).

Arduino Code

The ESP8266 based Feather HUZZAH & the HUZZAH ESP8266 breakout are both very popular options for connecting projects to Adafruit IO. This guide assumes you've completed the setup required to get your ESP8266 up and running with Arduino IDE and Adafruit IO.

- If you haven't yet set up your ESP8266 for use with Adafruit IO and the Arduino IDE, [follow along with this guide \(https://adafru.it/DCI\)](https://adafru.it/DCI). The setup only needs to be performed once.

You'll also need the **Adafruit_ADT7410** library and the Adafruit Unified Sensor library installed.

- If you have not done this yet, [click here to visit the setup guide and come back to this page when you're done. \(https://adafru.it/DSE\)](https://adafru.it/DSE)

Code

Copy and paste the following code into an empty Arduino Sketch:

```
// Adafruit IO ADT7410 Example
//
// Adafruit invests time and resources providing this open source code.
// Please support Adafruit and open source hardware by purchasing
// products from Adafruit!
//
// Written by Ladyada and Brent Rubell for Adafruit Industries
// Copyright (c) 2019 Adafruit Industries
// Licensed under the MIT license.
//
// All text above must be included in any redistribution.

/***** Adafruit IO Config *****/

// visit io.adafruit.com if you need to create an account,
// or if you need your Adafruit IO key.
#define IO_USERNAME "YOUR_IO_USERNAME"
#define IO_KEY "YOUR_IO_KEY"

/***** WIFI *****/

// the AdafruitIO_WiFi client will work with the following boards:
// - HUZZAH ESP8266 Breakout -> https://www.adafruit.com/products/2471
// - Feather HUZZAH ESP8266 -> https://www.adafruit.com/products/2821
// - Feather HUZZAH ESP32 -> https://www.adafruit.com/product/3405
// - Feather M0 WiFi -> https://www.adafruit.com/products/3010
// - Feather WICED -> https://www.adafruit.com/products/3056

#define WIFI_SSID "WIFI_NAME"
#define WIFI_PASS "WIFI_PASS"

// comment out the following two lines if you are using fona or ethernet
#include "AdafruitIO_WiFi.h"
AdafruitIO_WiFi io(IO_USERNAME, IO_KEY, WIFI_SSID, WIFI_PASS);

/***** Configuration *****/

// time between sending data to adafruit io. in minutes
```

```

// Time between sending data to MQTT server, in minutes
#define MESSAGE_WAIT_SEC (15 * 60)
/***** Example Starts Here *****/
#include <Wire.h>
// adt7410 sensor
#include "Adafruit_ADT7410.h"
// featherwing oled
#include <Adafruit_GFX.h>
#include <Adafruit_SSD1306.h>
#include <SPI.h>

// Create the OLED display object
Adafruit_SSD1306 display = Adafruit_SSD1306(128, 32, &Wire);

// Create the ADT7410 temperature sensor object
Adafruit_ADT7410 tempsensor = Adafruit_ADT7410();

// set up the 'temperature' feed
AdafruitIO_Feed *huzzah_temperature = io.feed("temperature");

void setup()
{
    // start the serial connection
    Serial.begin(115200);

    // wait for serial monitor to open
    while (!Serial)
        ;

    Serial.println("Adafruit IO ADT7410 + OLED");
    display.begin(SSD1306_SWITCHCAPVCC, 0x3C); // Address 0x3C for 128x32
    Serial.println("OLED begun");

    // Show image buffer on the display hardware.
    // Since the buffer is initialized with an Adafruit splashscreen
    // internally, this will display the splashscreen.
    display.display();
    delay(1000);

    // Clear the buffer.
    display.clearDisplay();
    display.display();

    // Make sure the sensor is found, you can also pass in a different i2c
    // address with tempsensor.begin(0x49) for example
    if (!tempsensor.begin())
    {
        Serial.println("Couldn't find ADT7410!");
        while (1)
            ;
    }

    // sensor takes 250 ms to get first readings
    delay(250);

    // connect to io.adafruit.com
    Serial.print("Connecting to Adafruit IO");
    io.connect();
}

```

```

display.clearDisplay();
display.display();
display.setTextSize(1);
display.setTextColor(WHITE);
display.setCursor(0, 0);
display.print("Connecting to IO...");
display.display();

// wait for a connection
while (io.status() < AIO_CONNECTED)
{
  Serial.print(".");
  delay(500);
}

// we are connected
Serial.println();
Serial.println(io.statusText());
}

void loop()
{

  // io.run(); is required for all sketches.
  // it should always be present at the top of your loop
  // function. it keeps the client connected to
  // io.adafruit.com, and processes any incoming data.
  io.run();

  // Read and print out the temperature, then convert to *F
  float c = tempsensor.readTempC();

  Serial.print("Temp: ");
  Serial.print(c);
  Serial.println("C");

  // clear the display
  display.clearDisplay();
  display.display();

  // print to display
  display.setTextColor(WHITE);
  display.setTextSize(2);
  display.setCursor(0, 0);
  display.print("Temp:");
  display.print(c);

  // send data to adafruit io
  display.setCursor(15, 20);
  display.setTextSize(1);
  display.print("Sending...");
  display.display();
  Serial.println("Sending to Adafruit IO");
  delay(1000);
  huzzah_temperature->save(c, 0, 0, 0, 2);

  // sent to IO
  display.clearDisplay();
  display.display();
  display.setTextSize(2):

```

```

display.setCursor(0, 0);
display.print("Temp:");
display.print(c);
display.setTextSize(1);
display.setCursor(15, 20);
display.print("Sending...Done!");
display.display();

Serial.print("Waiting ");
Serial.print(MESSAGE_WAIT_SEC);
Serial.println(" seconds");
// wait 15 minutes between sends
for (int i = 0; i < MESSAGE_WAIT_SEC; i++)
{
  delay(1000);
}
}

```

Before you upload the sketch to the Huzzah, you'll need to configure the network and Adafruit IO.

Change `IO_USERNAME` to your Adafruit IO username and `IO_KEY` to the Adafruit IO Key you saved earlier.

```

/***** Adafruit IO Config *****/

// visit io.adafruit.com if you need to create an account,
// or if you need your Adafruit IO key.
#define IO_USERNAME "YOUR_IO_USERNAME"
#define IO_KEY      "YOUR_IO_KEY"

```

Next, set up the sketch to use WiFi. Change `WIFI_SSID` to your router's SSID and `WIFI_PASS` to your router's password.

```

/***** WIFI *****/

// the AdafruitIO_WiFi client will work with the following boards:
// - HUZZAH ESP8266 Breakout -> https://www.adafruit.com/products/2471
// - Feather HUZZAH ESP8266 -> https://www.adafruit.com/products/2821
// - Feather HUZZAH ESP32 -> https://www.adafruit.com/product/3405
// - Feather M0 WiFi -> https://www.adafruit.com/products/3010
// - Feather WICED -> https://www.adafruit.com/products/3056

#define WIFI_SSID "WIFI_NAME"
#define WIFI_PASS "WIFI_PASS"

```

Save and upload the sketch to your board, and open the Arduino Serial Monitor. Your board should now connect to Adafruit IO.

```

Adafruit IO ADT7410 + OLED
OLED begun
Connecting to Adafruit IOAdafruitIO::connect()

Adafruit IO connected.

```

The ADT7410 will read temperature values and the Feather will send them to Adafruit IO. You should see something resembling the following in the Arduino Serial Monitor:

```
Temp: 24.31C
Sending to Adafruit IO
Waiting 900 seconds
```

Want to change the amount of precision (decimal places) sent from the ADT7410 to Adafruit IO?

Modify this line from:

```
huzzah_temperature->save(c, 0, 0, 0, 2);
```

to

```
huzzah_temperature->save(c, 0, 0, 0, decimal_places);
```

Make sure to replace *decimal_places* with the number of decimal places you'd like to send from the ADT7410.

Want to change the delay between sending data to Adafruit IO?

In the code, **change this line from:**

```
#define MESSAGE_WAIT_SEC (15* 60)
```

to

```
#define MESSAGE_WAIT_SEC (SECONDS_TO_DELAY_BY* 60)
```

Make sure to replace **SECONDS_TO_DELAY_BY** with the number of seconds to delay between sending sensor data.

Using Adafruit IO


Next, let's check that the data has been received by Adafruit IO. You can do this [by visiting the Adafruit IO Monitor page \(https://adafru.it/DOK\)](#). Every 15 minutes, the page will refresh with a new `huzzah-temperature` value.

Live Data newest data at the top

2019/02/08 12:23pm	huzzah-temperature	24.19
2019/02/08 12:23pm	huzzah-temperature	24.19
2019/02/08 12:22pm	huzzah-temperature	24.12
2019/02/08 12:22pm	huzzah-temperature	24.12
2019/02/08 12:22pm	huzzah-temperature	24.12
2019/02/08 12:22pm	huzzah-temperature	24.12
2019/02/08 12:22pm	huzzah-temperature	24.12
2019/02/08 12:22pm	huzzah-temperature	24.06
2019/02/08 12:22pm	huzzah-temperature	24.06
2019/02/08 12:22pm	huzzah-temperature	24.06
-----	-----	-----

Connections only available while this page is open

2019/02/08 12:17:44pm e63e95d0-de2b-41f1-9d5a-6b65ddb8 **connected**

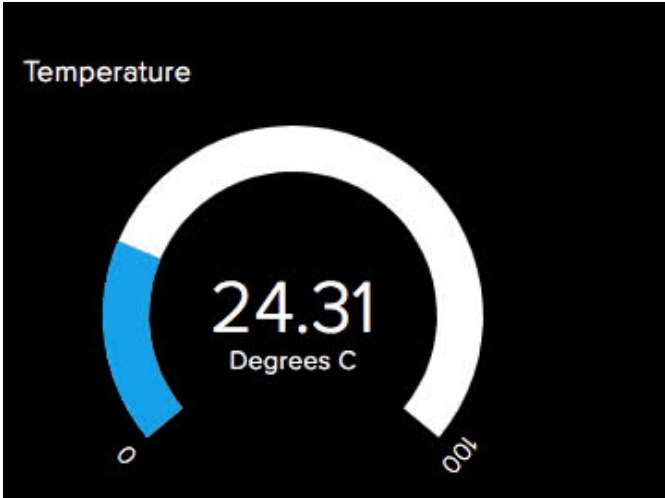

Navigate to the dashboard you created earlier to view the temperature gauge you've added.

Every 15 minutes, it'll update and display a new value.