

Error: Can't find stylesheet to import.


```
4 | @import "gist";  
   |         ^^^^^^
```

app/assets/stylesheets/application.pdf.scss 4:9 root stylesheet



Adafruit Metro M7 1011 with AirLift

Created by lady ada

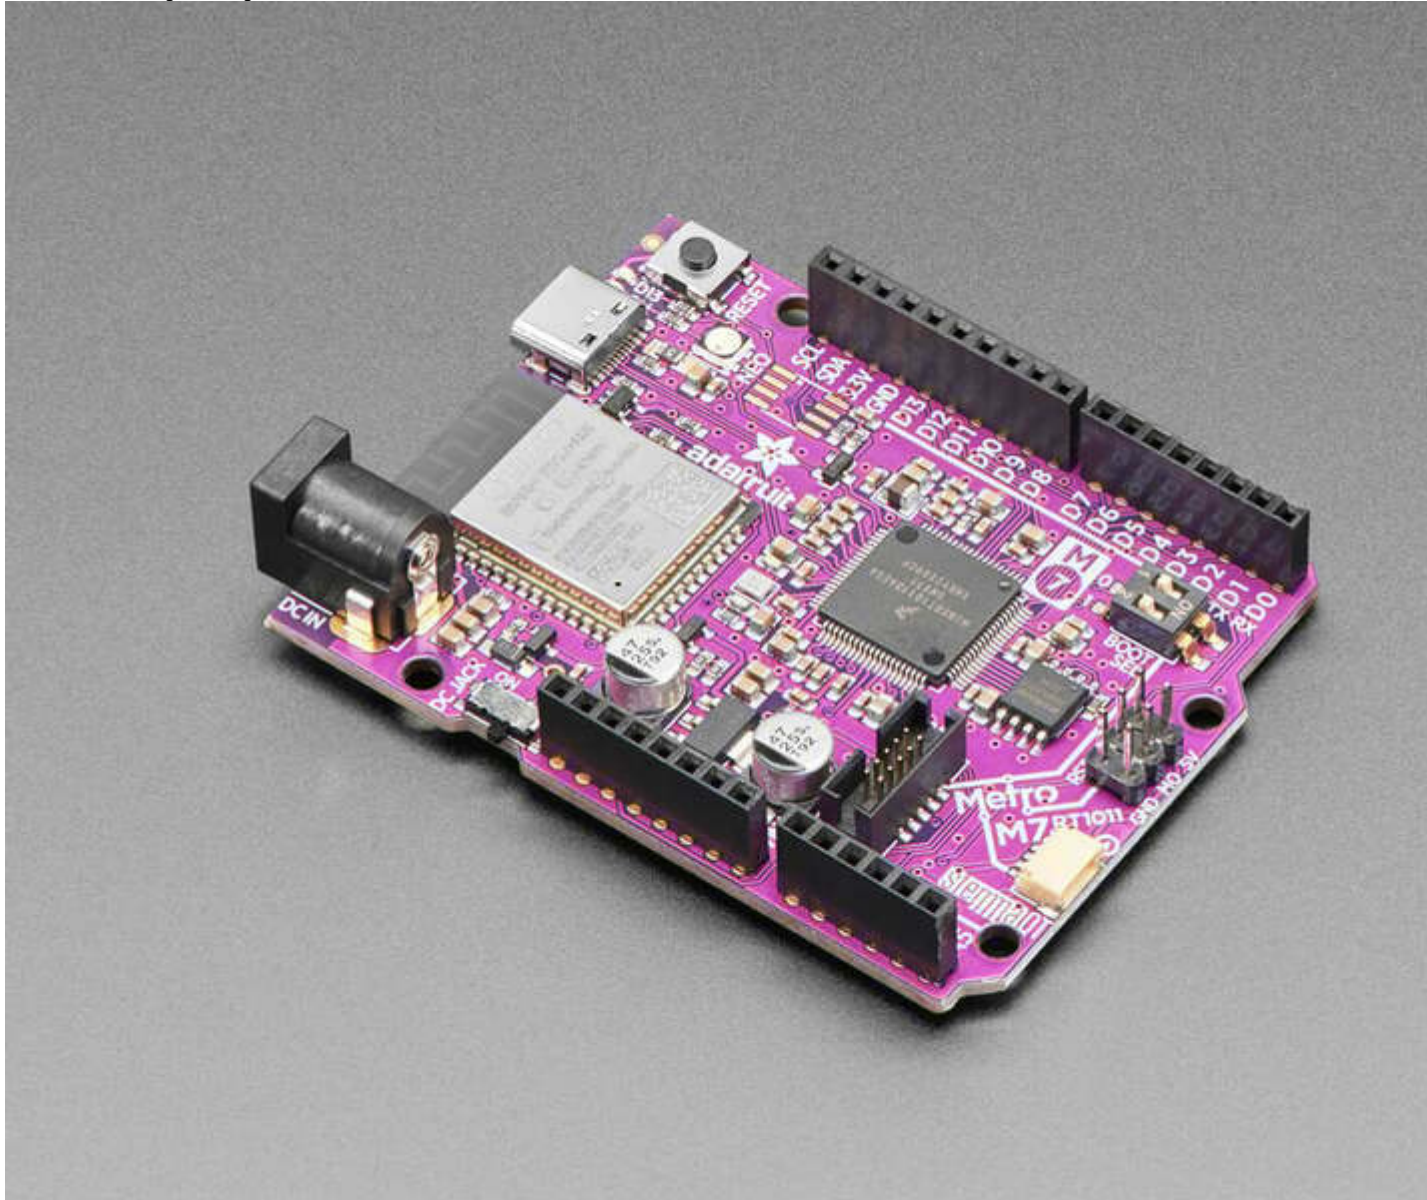

<https://learn.adafruit.com/adafruit-metro-m7-with-airlift>
Last updated on 2024-03-31 10:04:27 AM EDT

Table of Contents

[Overview](#)

[Pinouts](#)

- [Power](#)
- [i.MX RT1011 Processor](#)
- [ESP32 WiFi Co-Processor](#)

- [Logic Pins](#)
- [NeoPixel](#)
- [STEMMA QT](#)
- [Onboard LEDs](#)
- [Reset Button and Reset Pin](#)
- [Boot Mode Switches](#)
- [Debug Interface](#)

Install CircuitPython

- [CircuitPython Quickstart](#)

Installing the Mu Editor

- [Download and Install Mu](#)
- [Starting Up Mu](#)
- [Using Mu](#)

The CIRCUITPY Drive

- [Boards Without CIRCUITPY](#)

Creating and Editing Code

- [Creating Code](#)
- [Editing Code](#)
- [Back to Editing Code...](#)
- [Naming Your Program File](#)

Exploring Your First CircuitPython Program

- [Imports & Libraries](#)
- [Setting Up The LED](#)
- [Loop-de-loops](#)
- [What Happens When My Code Finishes Running?](#)
- [What if I Don't Have the Loop?](#)

Connecting to the Serial Console

- [Are you using Mu?](#)
- [Serial Console Issues or Delays on Linux](#)
- [Setting Permissions on Linux](#)
- [Using Something Else?](#)

Interacting with the Serial Console

The REPL

- [Entering the REPL](#)
- [Interacting with the REPL](#)

- [Returning to the Serial Console](#)

CircuitPython Libraries

- [The Adafruit Learn Guide Project Bundle](#)
- [The Adafruit CircuitPython Library Bundle](#)
- [Downloading the Adafruit CircuitPython Library Bundle](#)
- [The CircuitPython Community Library Bundle](#)
- [Downloading the CircuitPython Community Library Bundle](#)
- [Understanding the Bundle](#)
- [Example Files](#)
- [Copying Libraries to Your Board](#)
- [Understanding Which Libraries to Install](#)
- [Example: ImportError Due to Missing Library](#)
- [Library Install on Non-Express Boards](#)
- [Updating CircuitPython Libraries and Examples](#)
- [CircUp CLI Tool](#)

CircuitPython Documentation

- [CircuitPython Core Documentation](#)
- [CircuitPython Library Documentation](#)

Recommended Editors

- [Recommended editors](#)
- [Recommended only with particular settings or add-ons](#)
- [Editors that are NOT recommended](#)

Advanced Serial Console on Windows

- [Windows 7 and 8.1](#)
- [What's the COM?](#)
- [Install Putty](#)

Advanced Serial Console on Mac

- [What's the Port?](#)
- [Connect with screen](#)

Advanced Serial Console on Linux

- [What's the Port?](#)
- [Connect with screen](#)
- [Permissions on Linux](#)

Frequently Asked Questions

- [Using Older Versions](#)
- [Python Arithmetic](#)

- [Wireless Connectivity](#)
- [Asyncio and Interrupts](#)
- [Status RGB LED](#)
- [Memory Issues](#)
- [Unsupported Hardware](#)

Troubleshooting

- [Always Run the Latest Version of CircuitPython and Libraries](#)
- [I have to continue using CircuitPython 7.x or earlier. Where can I find compatible libraries?](#)
- [macOS Sonoma 14.x: Disk Errors Writing to CIRCUITPY](#)
- [Bootloader \(boardnameBOOT\) Drive Not Present](#)
- [Windows Explorer Locks Up When Accessing boardnameBOOT Drive](#)
- [Copying UF2 to boardnameBOOT Drive Hangs at 0% Copied](#)
- [CIRCUITPY Drive Does Not Appear or Disappears Quickly](#)
- [Device Errors or Problems on Windows](#)
- [Serial Console in Mu Not Displaying Anything](#)
- [code.py Restarts Constantly](#)
- [CircuitPython RGB Status Light](#)
- [CircuitPython 7.0.0 and Later](#)
- [CircuitPython 6.3.0 and earlier](#)
- [Serial console showing ValueError: Incompatible .mpy file](#)
- [CIRCUITPY Drive Issues](#)
- [Safe Mode](#)
- [To erase CIRCUITPY: storage.erase_filesystem\(\)](#)
- [Erase CIRCUITPY Without Access to the REPL](#)
- [For the specific boards listed below:](#)
- [For SAMD21 non-Express boards that have a UF2 bootloader:](#)
- [For SAMD21 non-Express boards that do not have a UF2 bootloader:](#)
- [Running Out of File Space on SAMD21 Non-Express Boards](#)
- [Delete something!](#)
- [Use tabs](#)
- [On MacOS?](#)
- [Prevent & Remove MacOS Hidden Files](#)
- [Copy Files on MacOS Without Creating Hidden Files](#)
- [Other MacOS Space-Saving Tips](#)
- [Device Locked Up or Boot Looping](#)

Welcome to the Community!

- [Adafruit Discord](#)
- [CircuitPython.org](#)
- [Adafruit GitHub](#)
- [Adafruit Forums](#)
- [Read the Docs](#)

CircuitPython Essentials

Blink

- [LED Location](#)
- [Blinking an LED](#)

Digital Input

- [LED and Button](#)
- [Controlling the LED with a Button](#)

Analog In

- [Analog to Digital Converter \(ADC\)](#)
- [Potentiometers](#)
- [Hardware](#)
- [Wire Up the Potentiometer](#)
- [Reading Analog Pin Values](#)
- [Reading Analog Voltage Values](#)

NeoPixel

- [NeoPixel Location](#)
- [NeoPixel Color and Brightness](#)
- [RGB LED Colors](#)
- [NeoPixel Rainbow](#)

I2C

- [I2C and CircuitPython](#)
- [Necessary Hardware](#)
- [Wiring the MCP9808](#)
- [Find Your Sensor](#)
- [I2C Sensor Data](#)
- [Where's my I2C?](#)

PWM Audio

- [Necessary Hardware](#)
- [Wiring the STEMMA Speaker](#)
- [PWM Tone Playback](#)
- [PWM WAV File Playback](#)

I2S Audio

- [I2S and CircuitPython](#)
- [Necessary Hardware](#)
- [Wiring the MAX98357A](#)
- [I2S Tone Playback](#)
- [I2S WAV File Playback](#)
- [CircuitPython I2S-Compatible Pin Combinations](#)

CircuitPython BLE

- [CircuitPython BLE UART Example](#)
- [Update the AirLift Firmware](#)
- [Install CircuitPython Libraries](#)
- [Install the Adafruit Bluefruit LE Connect App](#)
- [BLE Example](#)
- [Talk to the AirLift via the Bluefruit LE Connect App](#)

Create Your settings.toml File

- [CircuitPython settings.toml File](#)
- [settings.toml File Tips](#)
- [Accessing Your settings.toml Information in code.py](#)

CircuitPython WiFi

- [CircuitPython Microcontroller Pinout](#)
- [CircuitPython Setup](#)
- [CircuitPython Usage](#)

Installing the Bootloader

- [Step 1. Install SPSDK to get the sdphost tool](#)


Upgrading ESP32 AirLift Firmware

- [Upload Passthrough Code](#)
- [Download NINA Firmware](#)
- [Upload NINA Firmware](#)
- [Verify the New Firmware Version](#)
- [\(Advanced\) Upload NINA Firmware with ESPTool.py](#)

Downloads


- [Files](#)
- [Schematic and Fab Print](#)

Overview

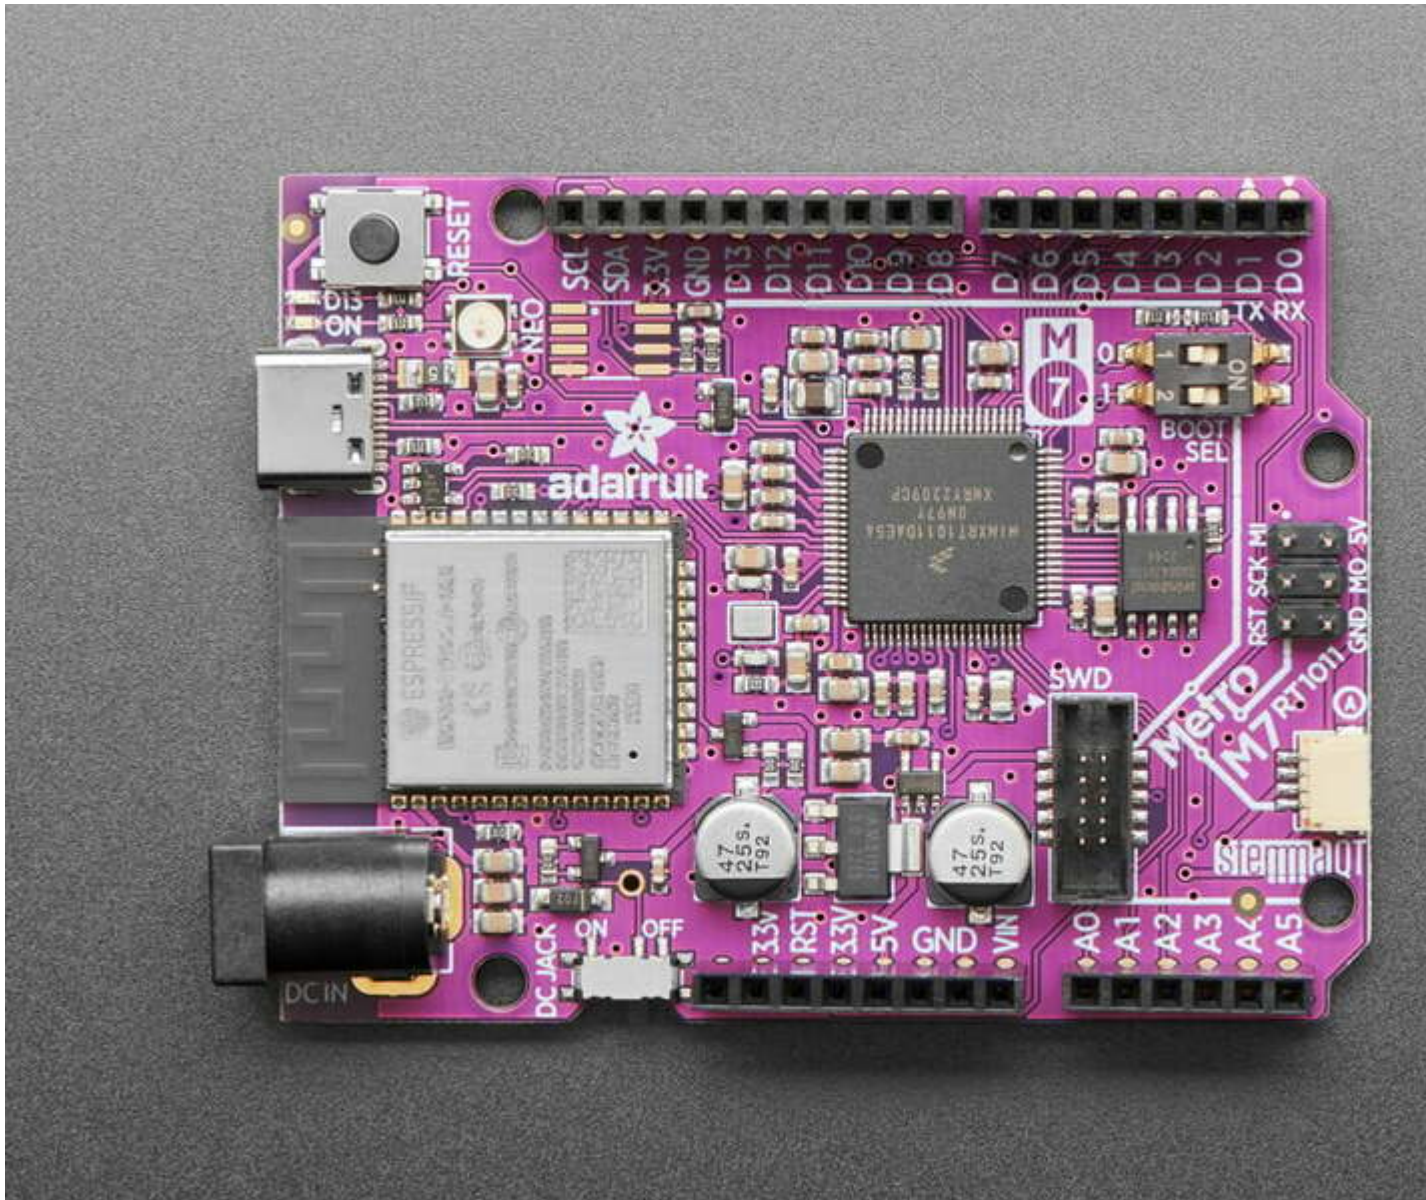

Get ready for our fastest Metro ever - the NXP i.MX RT1011 microcontroller powers this board with a 500 MHz ARM Cortex M7 processor. There's 4 MB of execute-in-place QSPI for firmware + disk storage and 128KB of SRAM in-chip.

Currently we have support for using this board with CircuitPython. There is no Arduino support at this time.

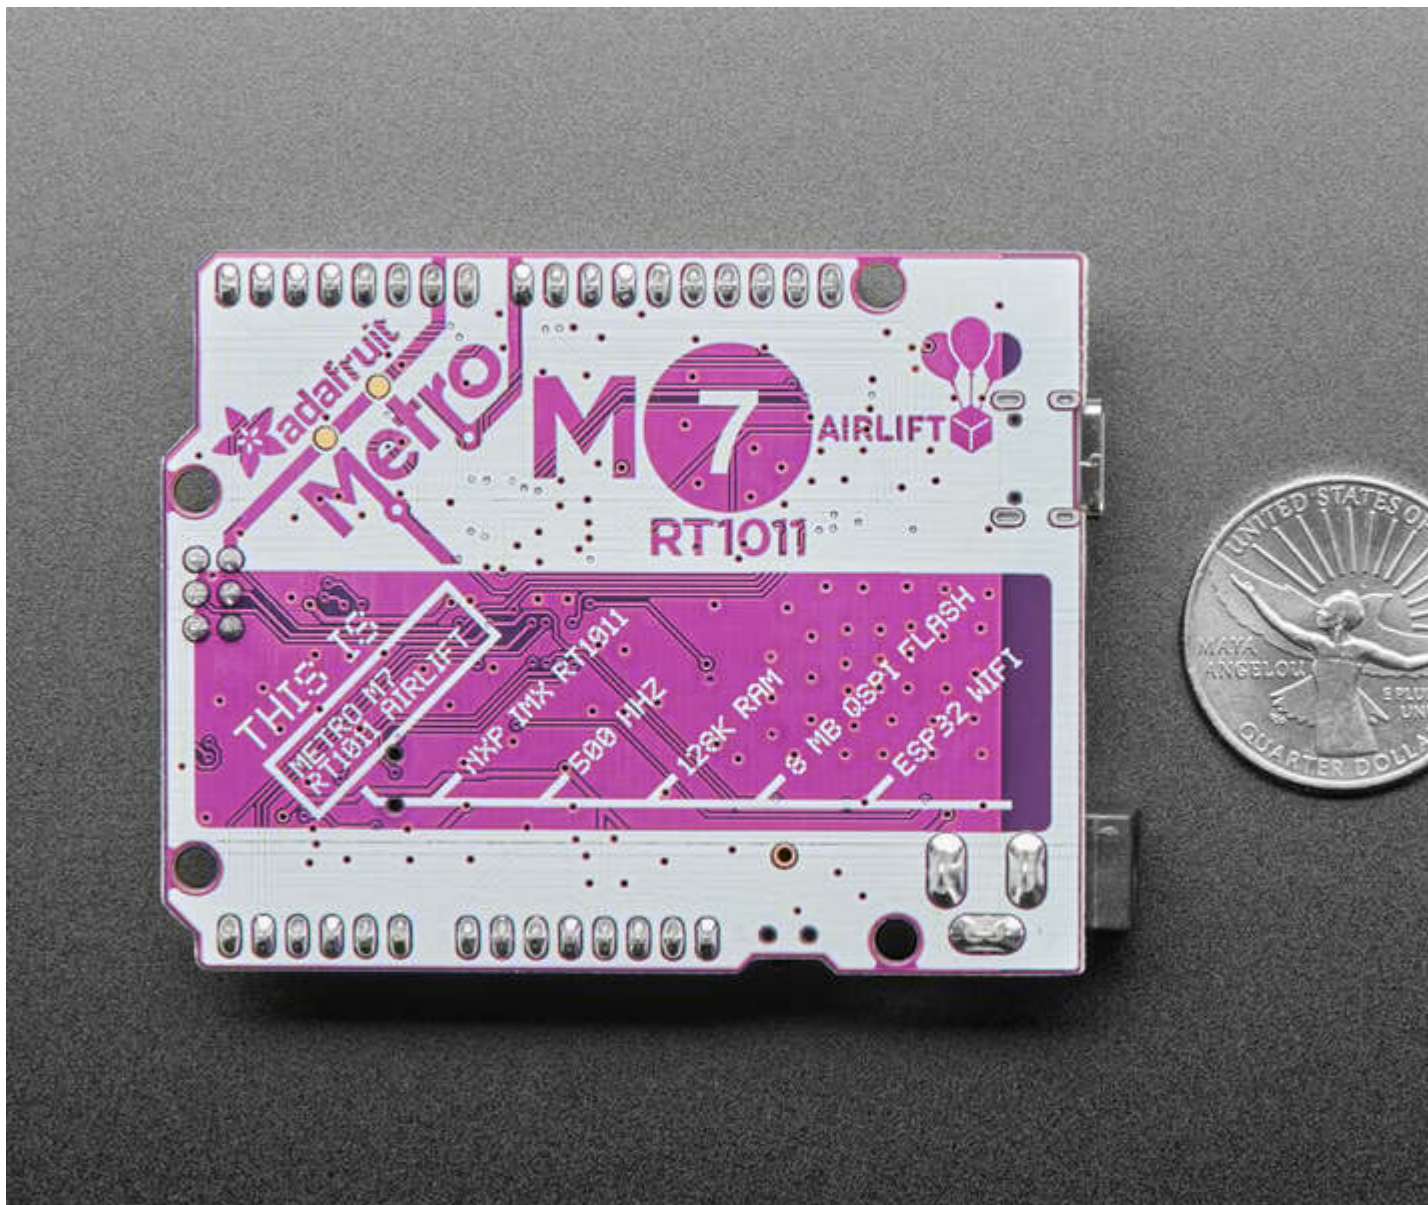


Features:

- **NXP i.MX RT1011 processor** - ARM Cortex M7 processor running at 500 MHz, with 128KB SRAM and high speed USB!
- **AirLift WiFi Co-processor**, with TLS/SSL support, plenty of RAM for sockets, communication is over SPI and it has CircuitPython library support ready to go for fast wireless integration.
- **4MB of QSPI XIP Flash.**
- **Power options** - 6-12VDC barrel jack **or** USB type C.
- **UNO-shape** so shields can plug in.
- **Reset** button - Click to restart, double-click to enter UF2 bootloader.
- **Boot-mode switches** to get into the ROM bootloader (you can always reload code over USB if TinyUF2 gets corrupted somehow).
- **SWD connector** for advanced debugging access.
- **On/Off switch**
- **STEMMA QT** connector for I2C devices.
- **On/User LEDs** + status **NeoPixel**.
- **Works with CircuitPython!**

- 53.2mm x 72mm / 2" x 2.8"
- Height (w/ barrel jack): 14.8mm / 0.6"
- Weight: 22.5g

Pinouts

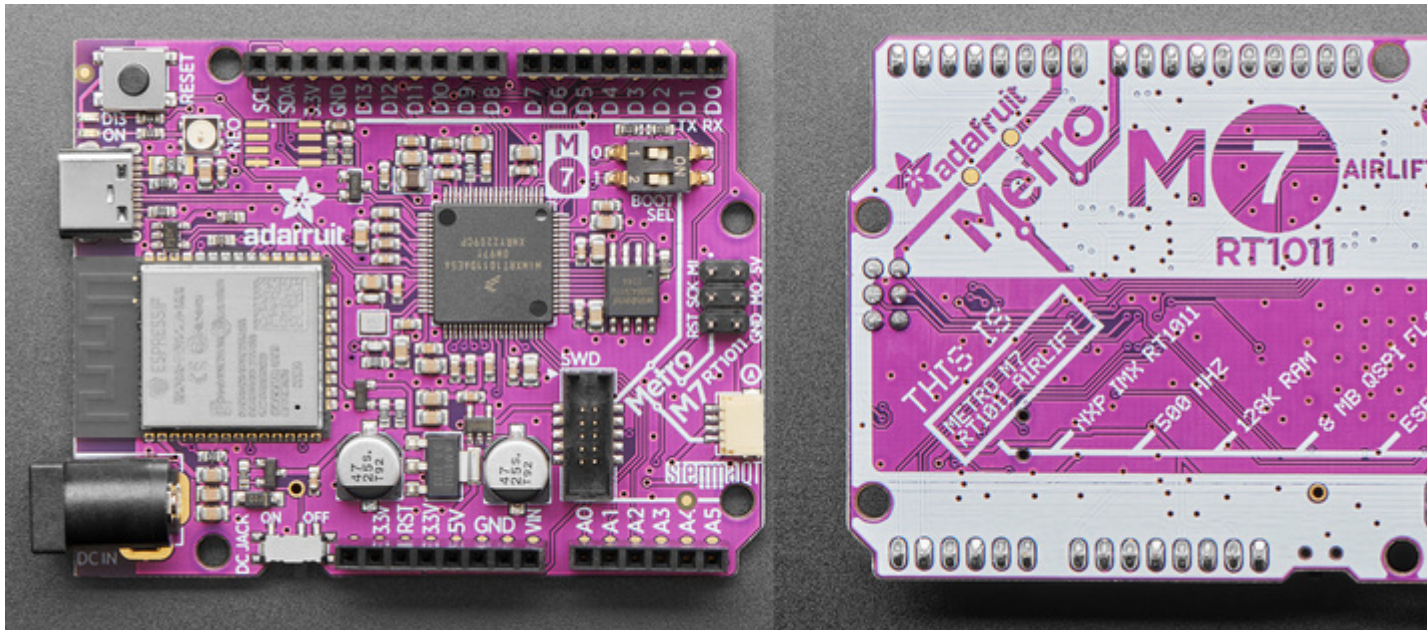

Adafruit Metro M7 iMX RT1011 with AirLift
<https://www.adafruit.com/product/4950>

- Power
- GND
- Control
- CircuitPython Name
- GPIO
- ADC
- PWM
- I2C
- SPI
- UART
- I2S
- Other
- Debug

TXD
RXD
TXD
CTS_B/TXD

PC91
PC91
PC92
PC90

SCL
SDA
SCL
SDA

ADC2
ADC1
ADC0
ADC5
ADC10
ADC8

GPIO_AD_02
GPIO_AD_01
GPIO_AD_00
GPIO_AD_05
GPIO_AD_10
GPIO_AD_08

A0
A1
A2
A3
A4
A5

NEOPixel GPIO_00
SCL GPIO_02
SDA GPIO_01
GPIO_03
GPIO_04
GPIO_05
GPIO_06
GPIO_07
GPIO_08
GPIO_11
GPIO_SD_02
GPIO_SD_01
GPIO_SD_00
GPIO_12
GPIO_13
GPIO_16
GPIO_09

DQ0/PC93/PC93
SDA
SDA
SS1_B
DATA2
DATA1
SS0_B
TXD
RXD
TXD
RXD

RX_BCLK
RX_SYNC

SDA
SCL

GPIO_01
GPIO_02

SCL

SD1
SCK

AD03
AD06

GPIO_AD_03
GPIO_AD_06

MISO
MOSI

GPIO_AD_04
GPIO_AD_07

ESP32 AirLift Co-Processor

ESP_CS
ESP_GPIO0
ESP_BUSY
ESP_RESET

GPIO_AD_14
GPIO_AD_05
GPIO_AD_11
GPIO_AD_01

ADC14
ADC5
ADC11
ADC7


SCL
SDA
SDA

SS1_B/SD1
PC90

CTS_B/CTS_B
RTS_B/RXD

TXD
RXD

Power

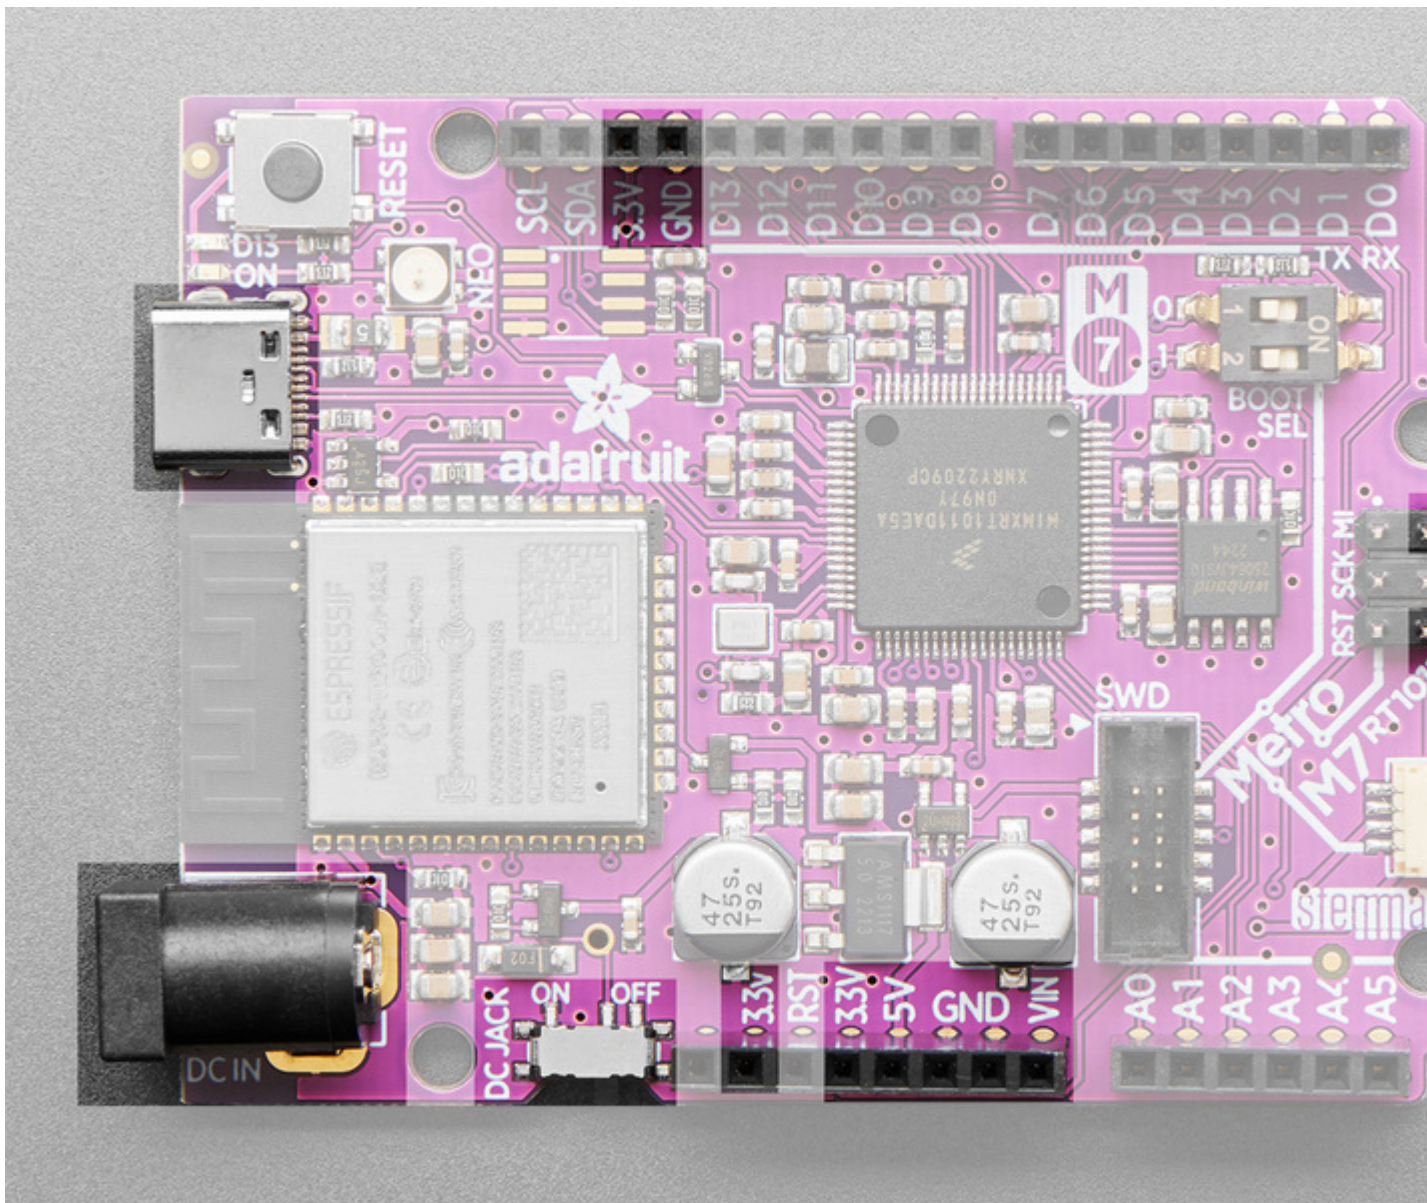

There are two ways that you can power the Metro M7 1011:


- **USB-C port**- This is used for both powering and programming the board. You can power it with any USB C cable.
- **DC Jack** - The DC Jack is a 5.5mm/2.1mm center-positive DC connector, which is the most common available. Provide about 6V-12V here to power the Metro M7 1011.
- **DC Jack On/Off Switch** - This switch can turn incoming power from the DC jack on or off. It only controls the DC jack, it has no affect on the USB port.

The following pins are related to power on the Metro M7 1011:

- **3.3V** - this is the output from the 3.3V regulator, it can supply 500mA peak.


- **5V** - this is the output from the 5V regulator (when DC jack is used), or from USB. It can supply ~500mA peak from USB and ~800mA peak from DC.
- **GND** - this is the common ground for all power and logic.
- **VIN** - this is the higher of the DC jack or USB voltage. So if the DC jack is plugged in and 9V, Vin is 9V. If only USB connected, this will be 5V.

i.MX RT1011 Processor

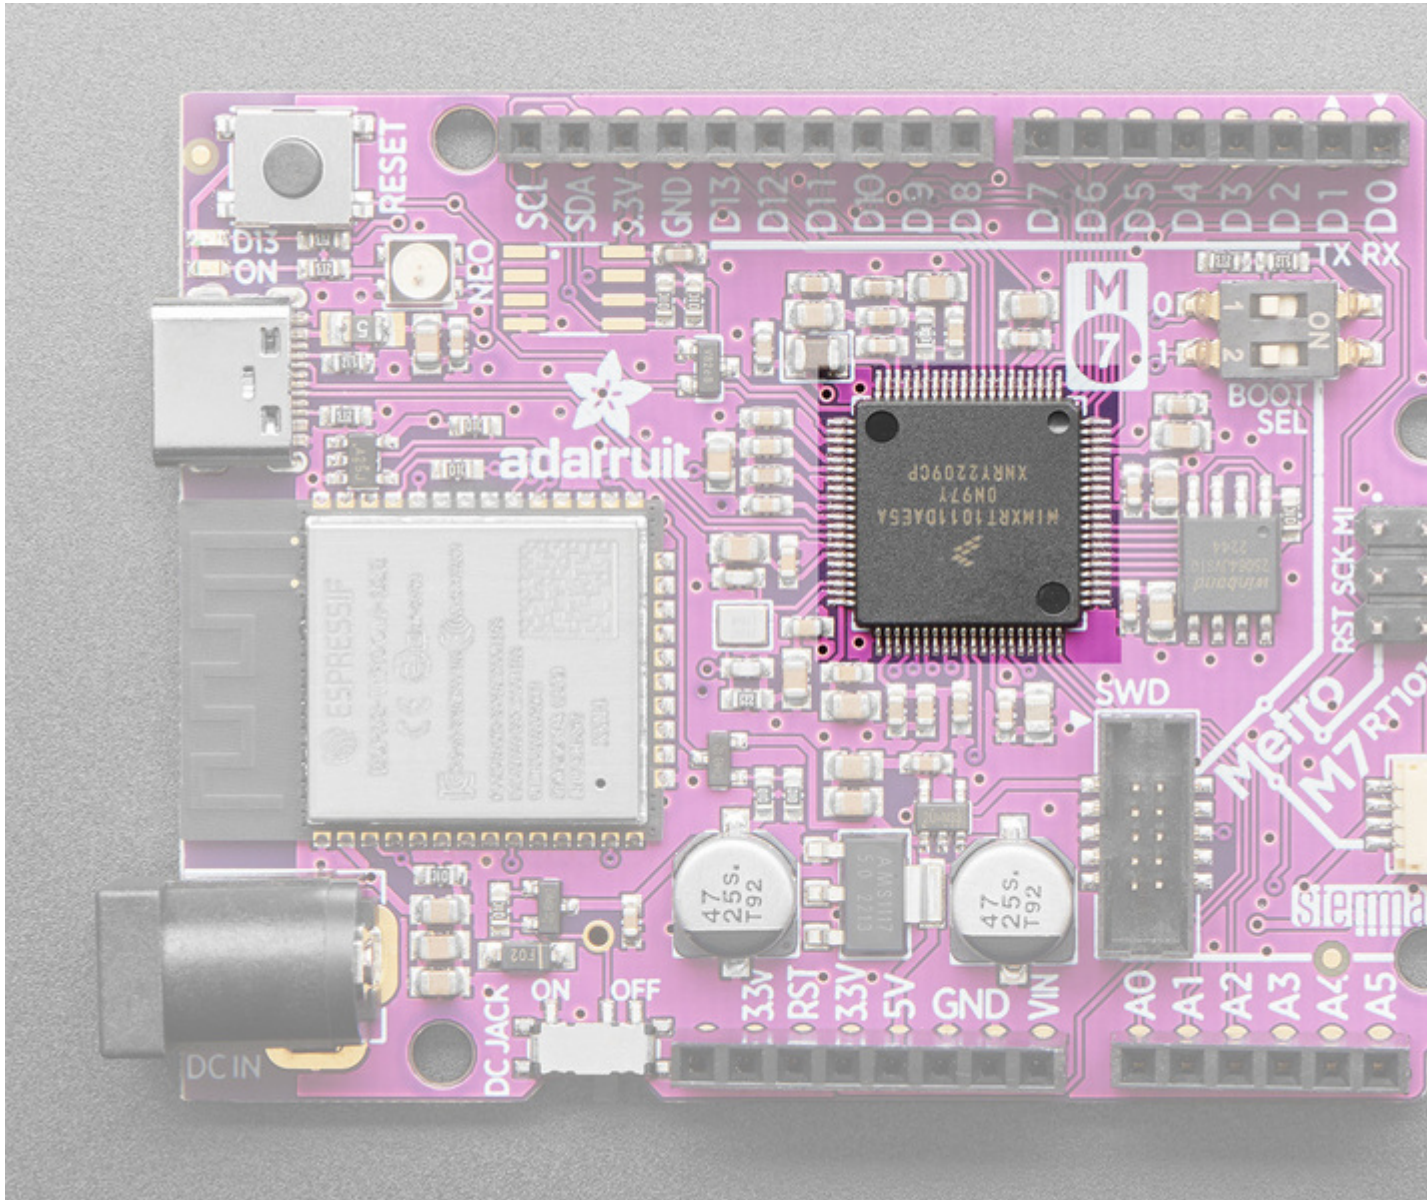

The Metro M7 1011 is powered by the NXP i.MX RT1011 processor. This is an ARM Cortex M7 processor running at 500 MHz. It has 128KB of SRAM in-chip, along with high speed USB.

ESP32 WiFi Co-Processor

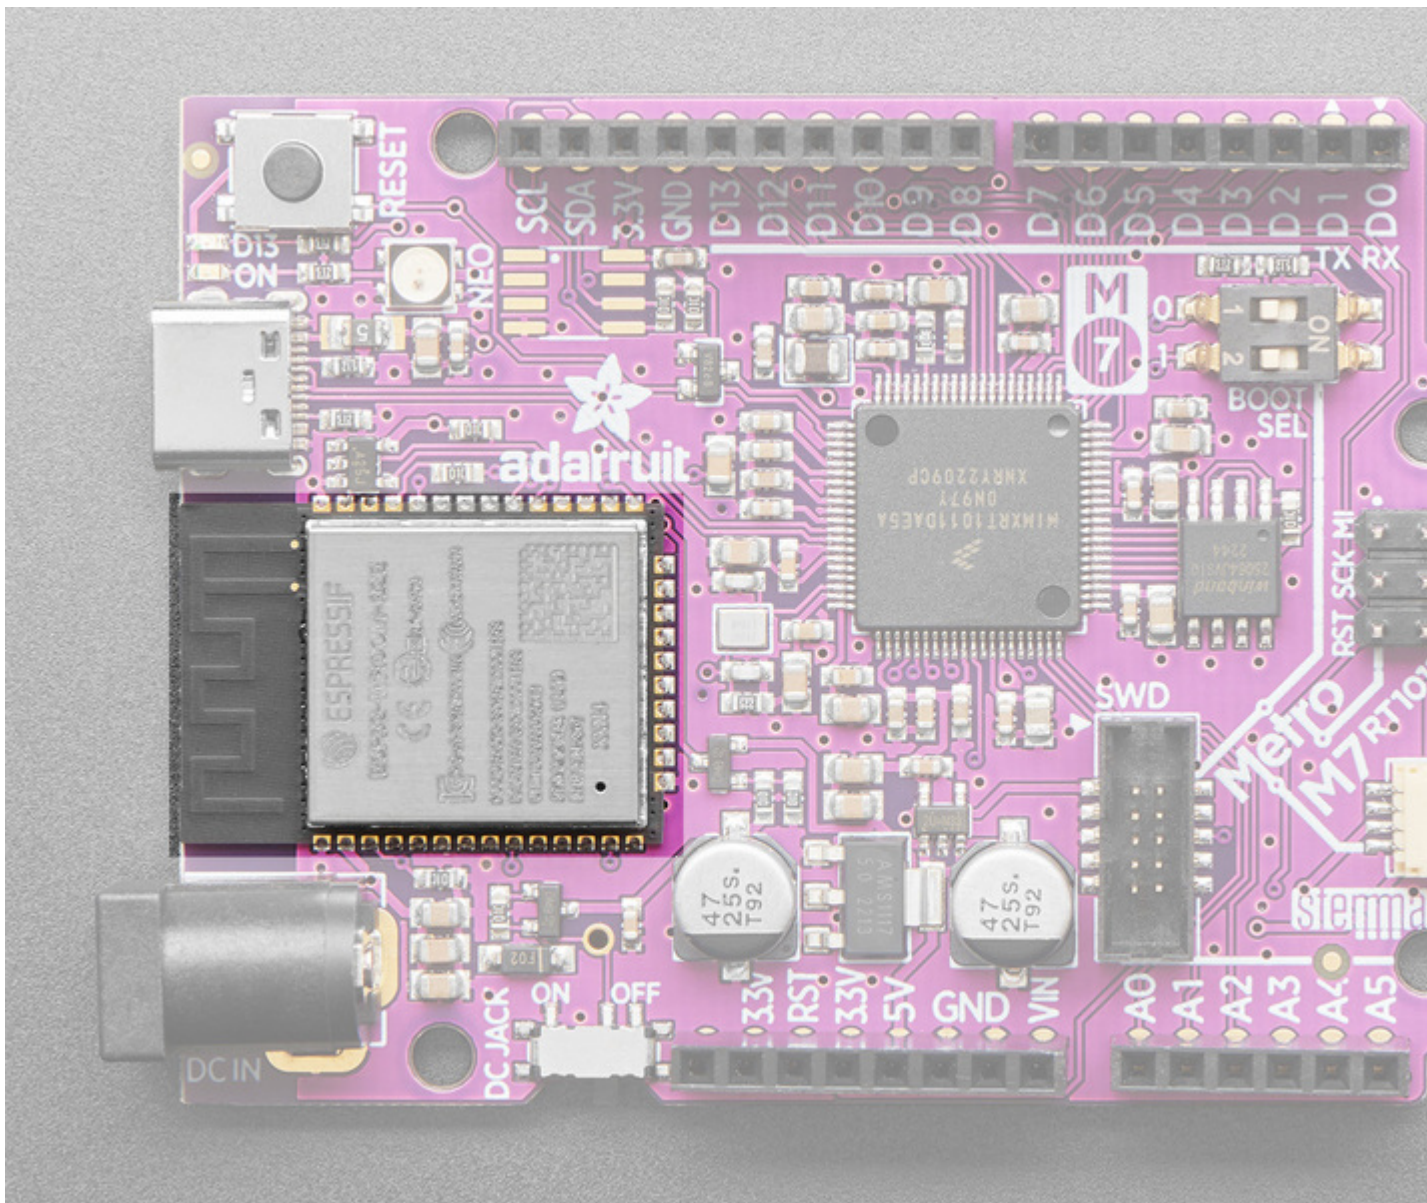


The WiFi capability uses an **Espressif ESP32 Wi-Fi coprocessor**, aka the **AirLift**, with TLS/SSL support built-in. Communication is over SPI and it has CircuitPython library support ready to go for fast wireless integration with the following pins:

- **MOSI** pin (`board.ESP_MOSI`)
- **MISO** pin (`board.ESP_MISO`)
- **SCK** pin (`board.ESP_SCK`)
- **CS** pin (`board.ESP_CS`)
- **Ready/Busy** pin (`board.ESP_BUSY`)
- **Reset** pin (`board.ESP_RESET`)
- **ESP RX/TX** pins (`board.ESP_RX` and `board.ESP_TX`) are shared with the M7 **RX/TX** pins. There's a resistor between the M7's **RX** line and the ESP32 module so that a device connected on the **RX** pin will override the communication from the ESP32 module.

- You can also connect to the ESP32 **RTS** pin (used in some serial contexts) on board.ESP_RTS
- The ESP32 **GPIO0** pin for bootloader enable is connected to board.ESP_GPIO0

Logic Pins

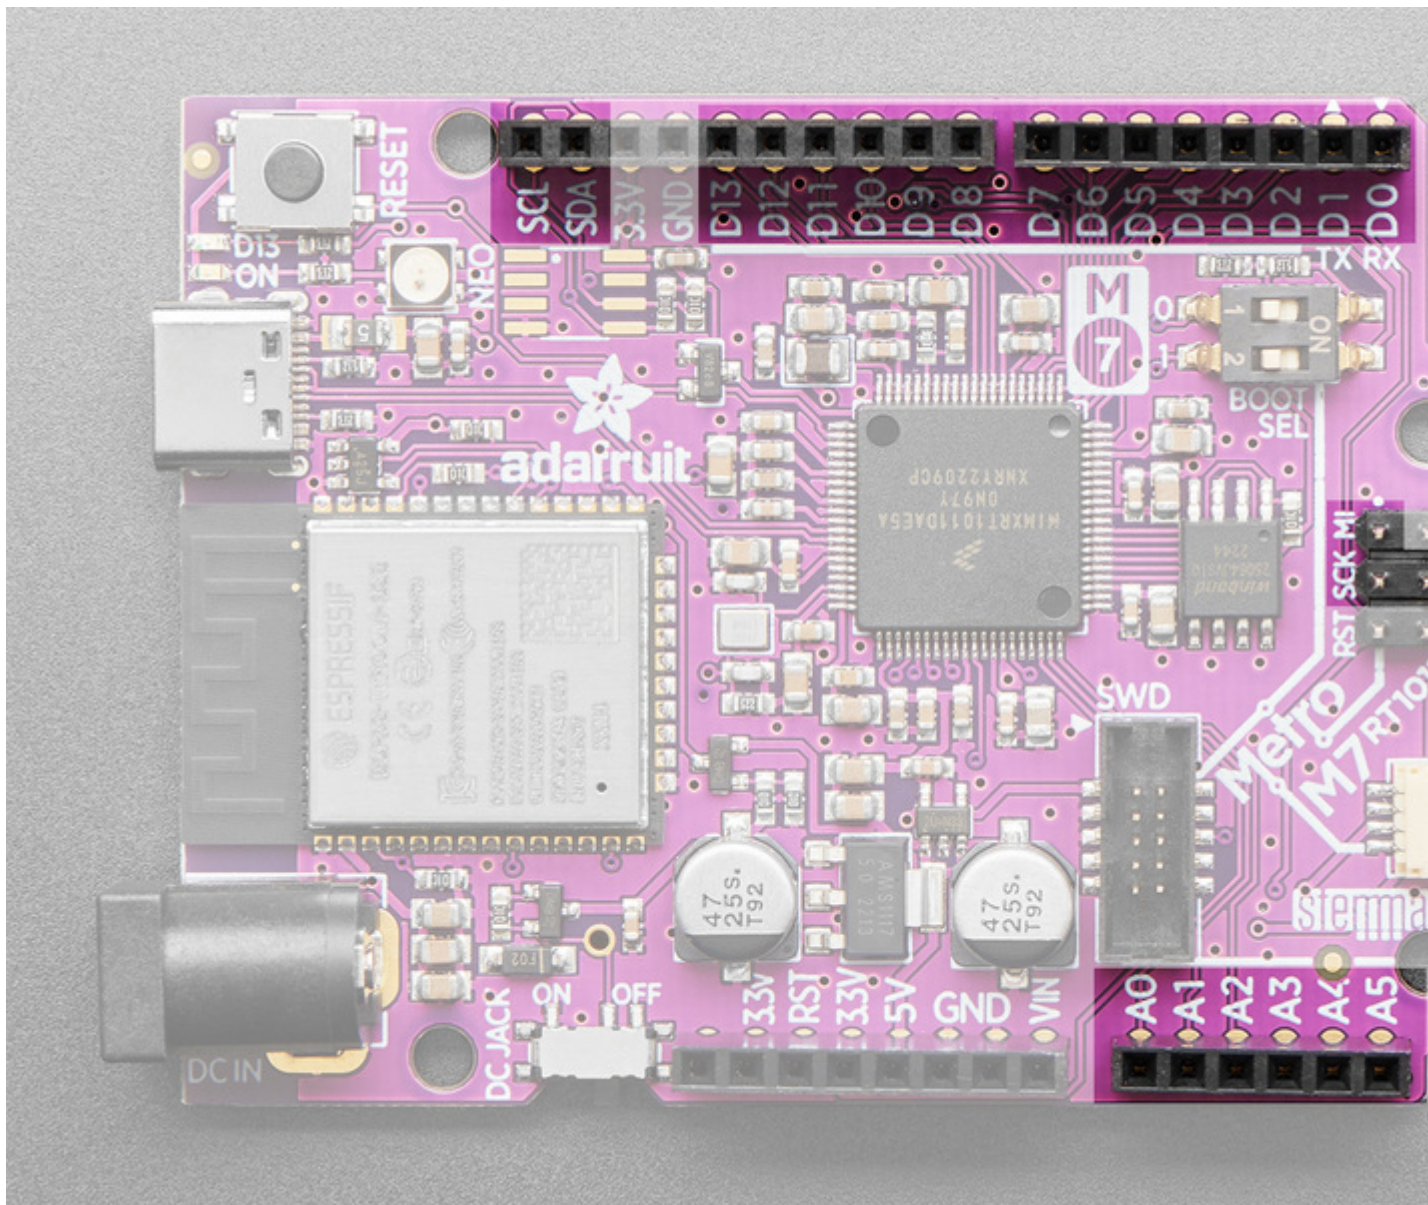

These are the general purpose I/O pin set for the microcontroller.

Top Row:

- **D0 / RX** - GPIO D0, also receive (input) pin/**RX** for UART. This pin is shared with the **ESP32 RX** pin. There is a resistor between **D0/RX** and the **ESP32 RX** pins so that a device that is connected to **D0/RX** will override the communication from the **ESP32 RX** pin.
- **D1 / TX** - GPIO D1, also transmit (output) pin/**TX** for UART
- **D2 through D12** - These are general purpose GPIO

- **D13** - GPIO D13 and is connected to the **red LED** marked **D13** next to the reset button.
- **SDA** - the I2C data pin. **There's a 10K pull up on this pin to 3V already installed**
- **SCL** - the I2C clock pin. **There's a 10K pull up on this pin to 3V already installed**


Bottom Row:

- **A0 thru A5** - These are analog inputs as well as digital I/O pins.

Right side:


- **SCK/MOSI/MISO** - These are the hardware SPI pins, are are connected to the 2x3 header on the right hand side. These are also used by the ESP32 so they should not be used for anything but SPI connectivity - not for GPIO.

NeoPixel

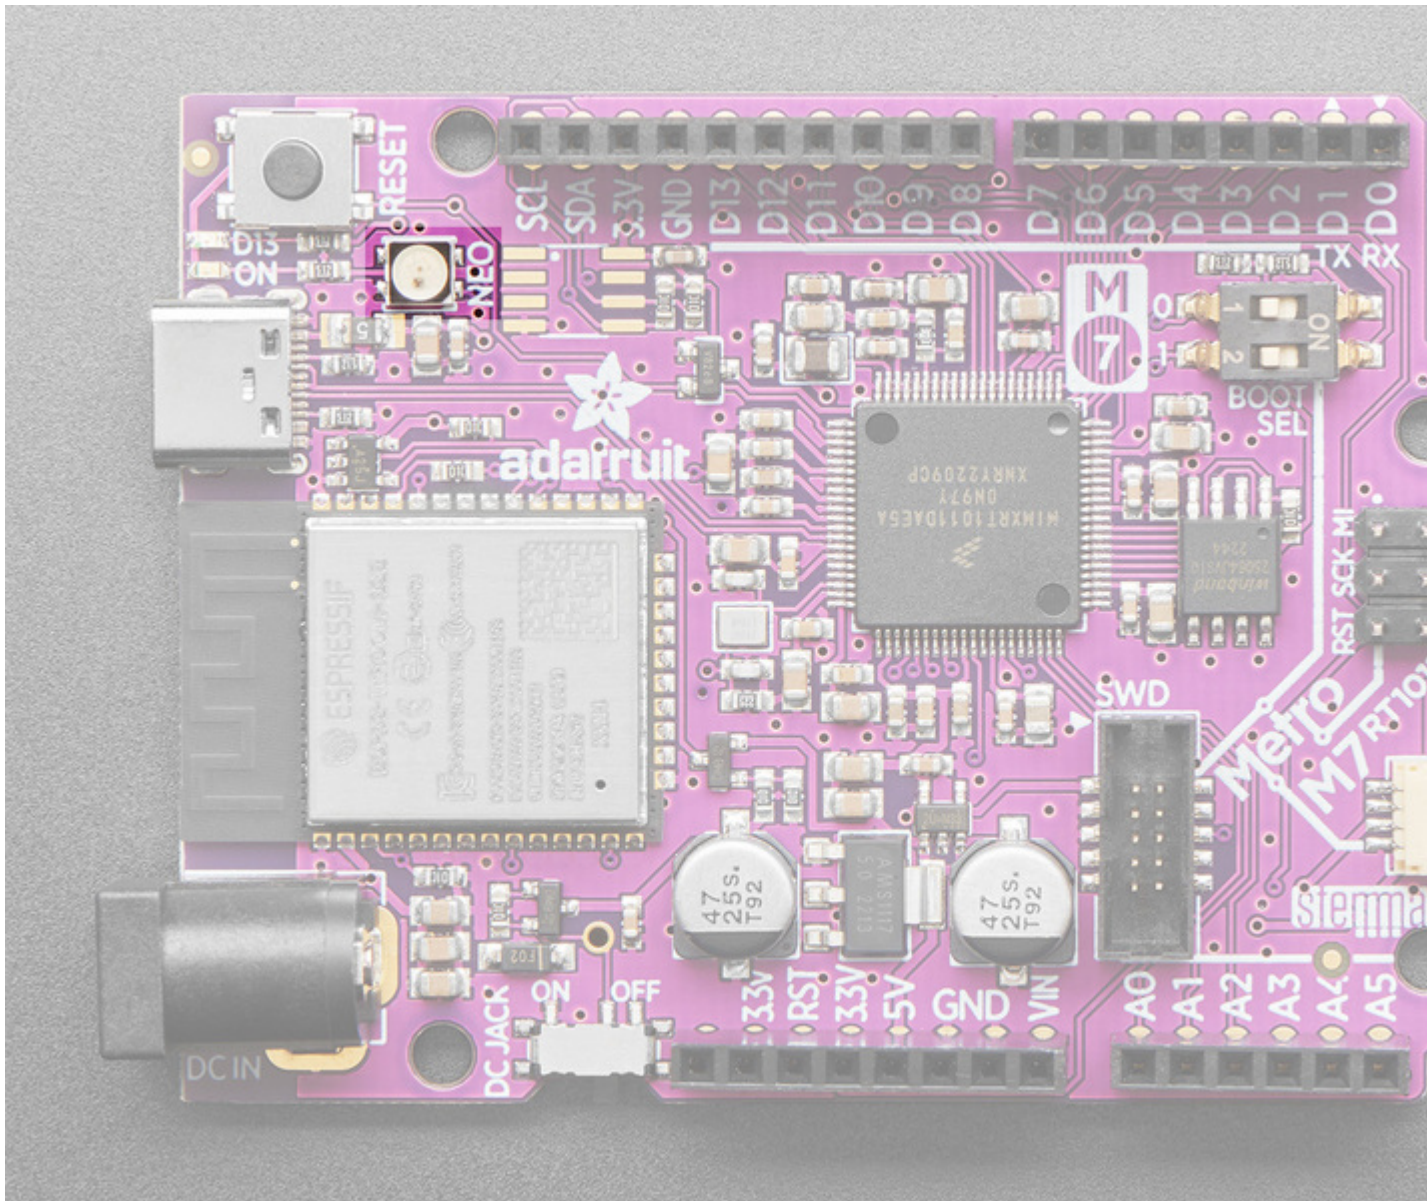

- **NeoPixel LED** - This addressable RGB NeoPixel LED, labeled **NEO** on the board, works both as a status LED (in CircuitPython and the bootloader), and can be controlled with code. It is available in CircuitPython as `board.NEOPIXEL`.


STEMMA QT

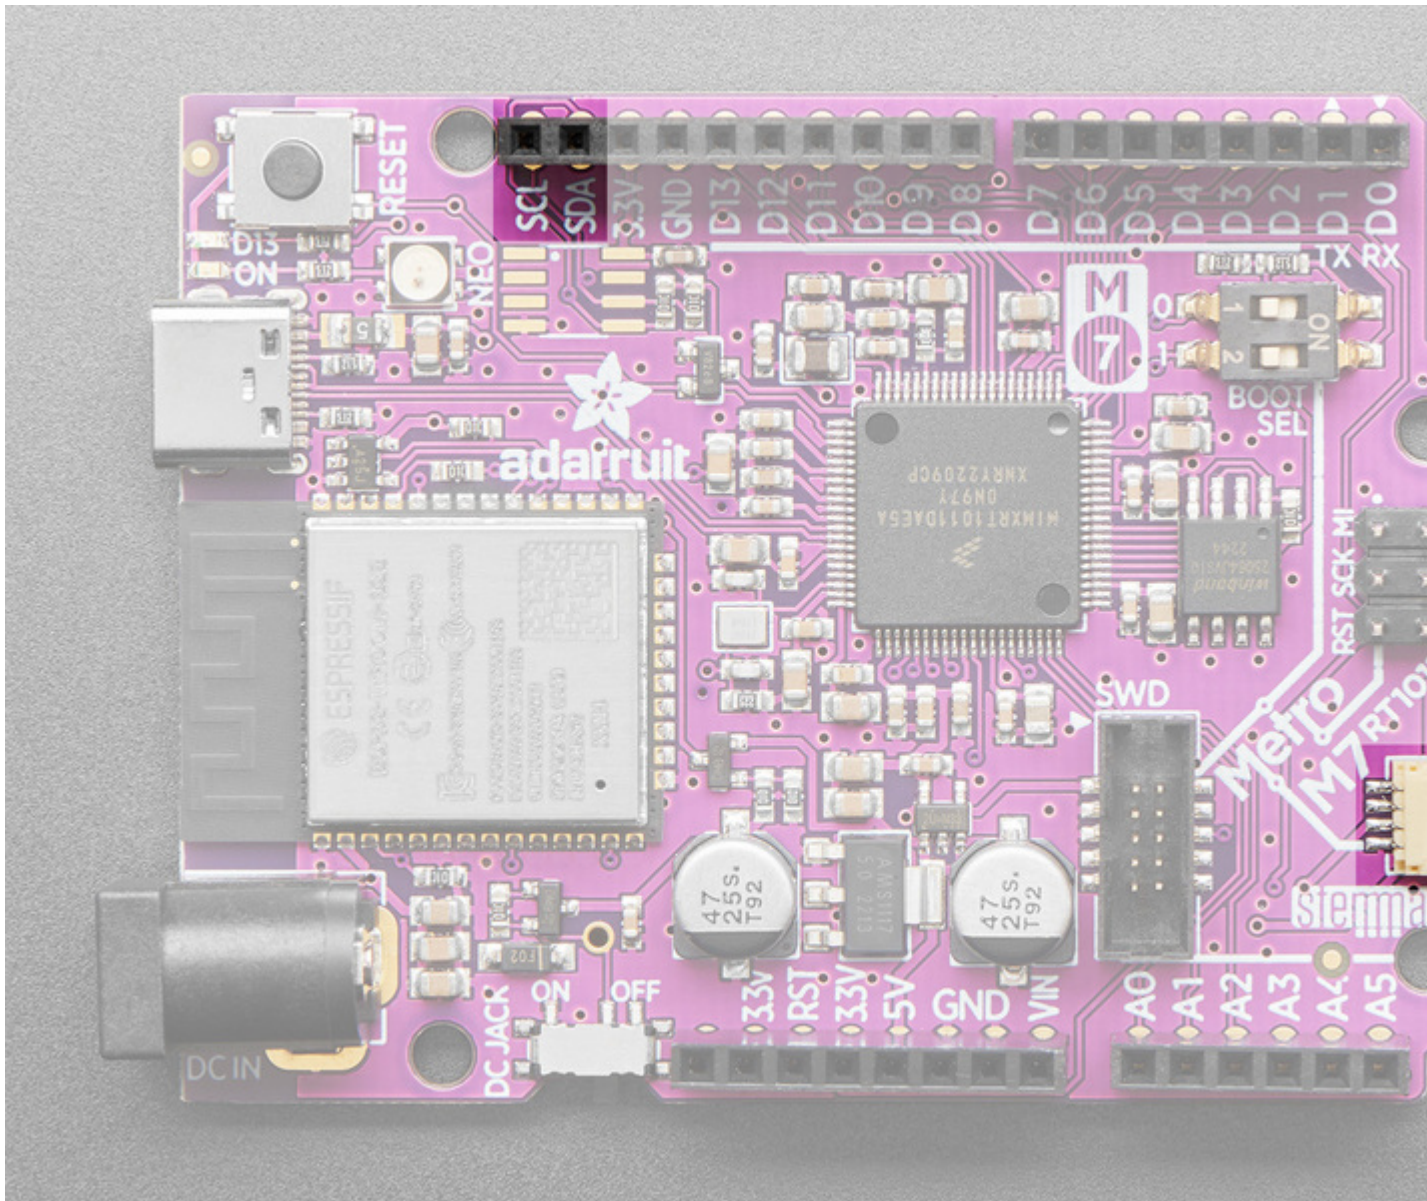

This **JST SH 4-pin STEMMA QT** (<https://adafru.it/Ft4>) **connector** breaks out I2C (SCL, SDA, 3.3V, GND). It allows you to connect to [various breakouts and sensors with STEMMA QT connectors](https://adafru.it/Qgf) (<https://adafru.it/Qgf>) or to other things using [assorted associated accessories](https://adafru.it/Ft6) (<https://adafru.it/Ft6>). It works great with any STEMMA QT or Qwiic sensor/device. You can also use it with Grove I2C devices thanks to [this handy cable](http://adafru.it/4528) (<http://adafru.it/4528>).


In CircuitPython, this port can be accessed with `board.STEMMA_I2C()`.

Onboard LEDs

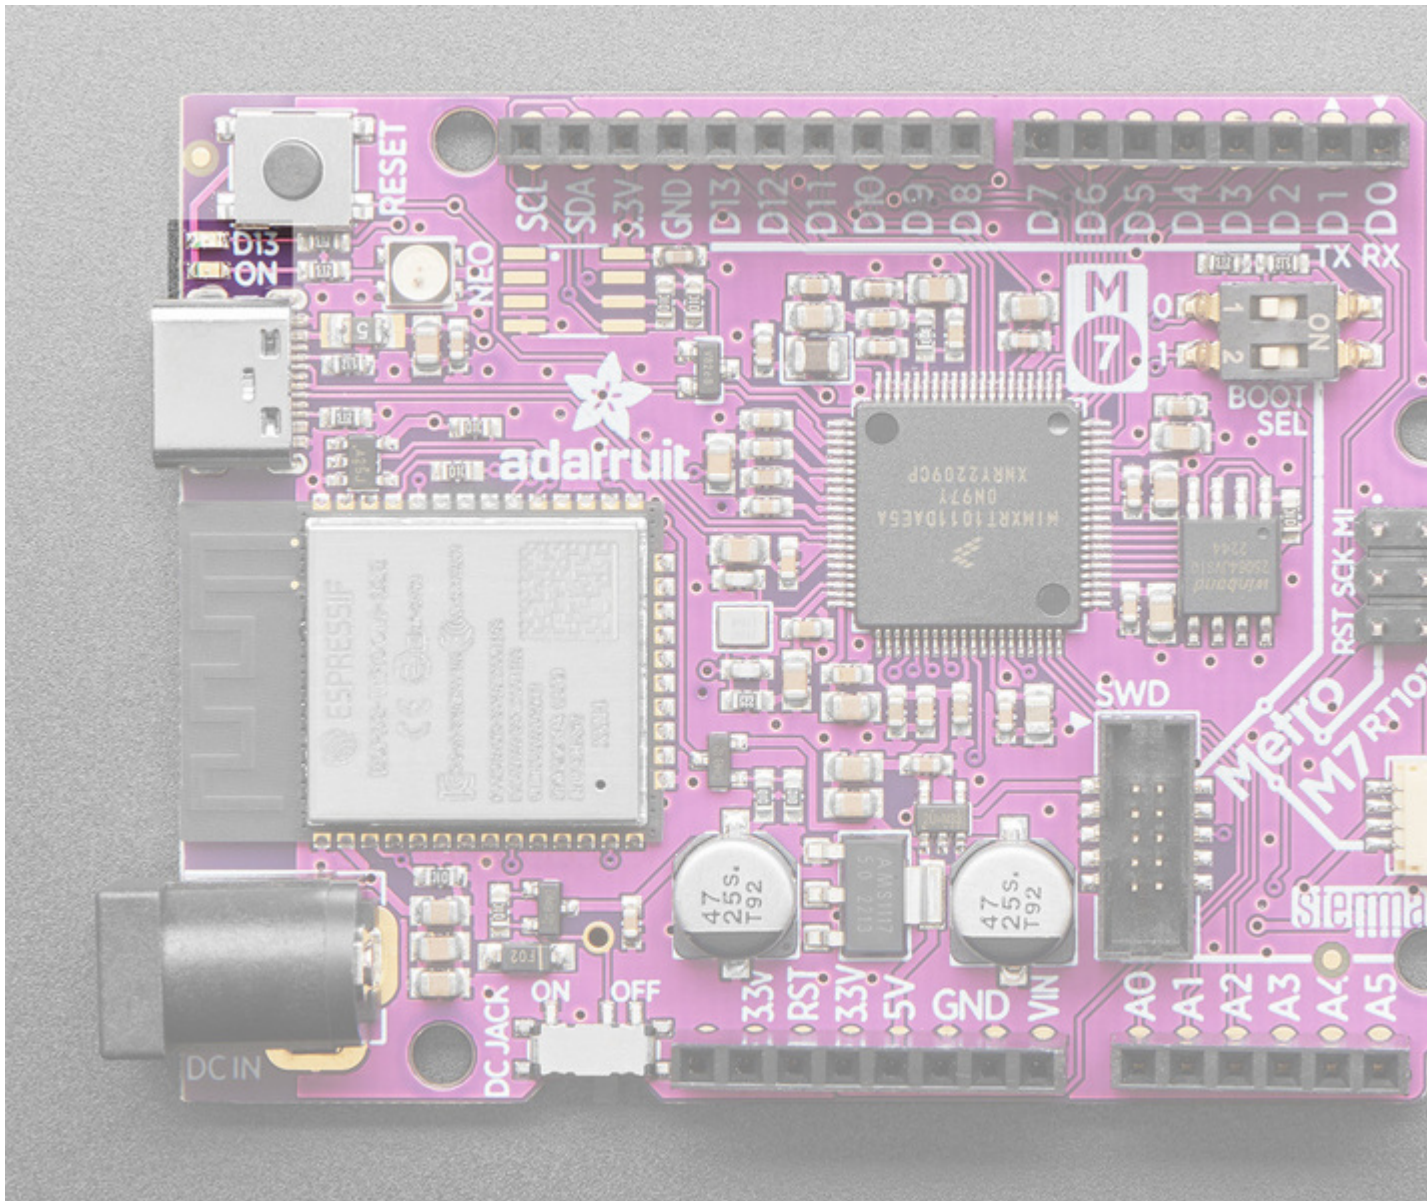


- **Power LED** - Above the USB-C port, on the front of the board, is the power LED, labeled **ON**. It is the green LED.
- **Red LED**- This little red LED, labeled **D13** on the board, is on or blinks during certain operations (such as pulsing when in the bootloader), and is controllable in code. It is available in CircuitPython as `board.LED`.

Reset Button and Reset Pin

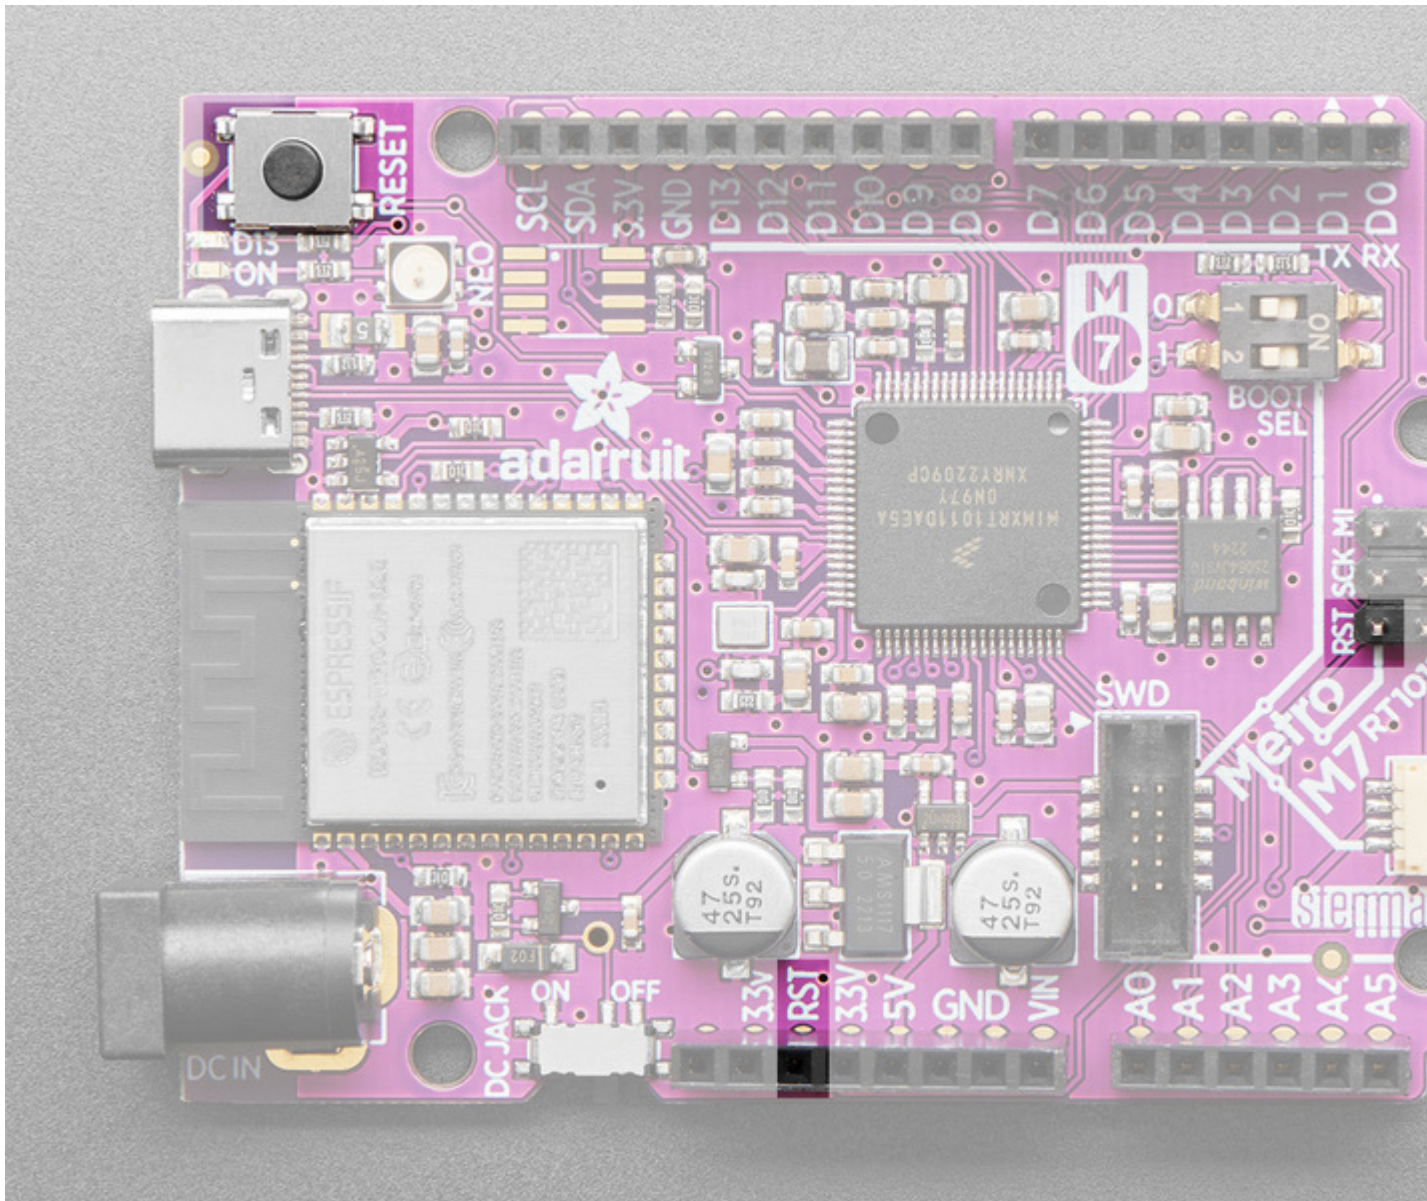

- **Reset button** - The reset button restarts the board and helps enter the bootloader. You can click it once to reset the board without unplugging the USB cable or battery. Alternatively, tap once, and then tap again while the NeoPixel status LED is purple to enter the UF2 bootloader (needed to load CircuitPython).
- The **RST pin** can be used to reset the board. Tie to ground manually to reset the board.

Boot Mode Switches

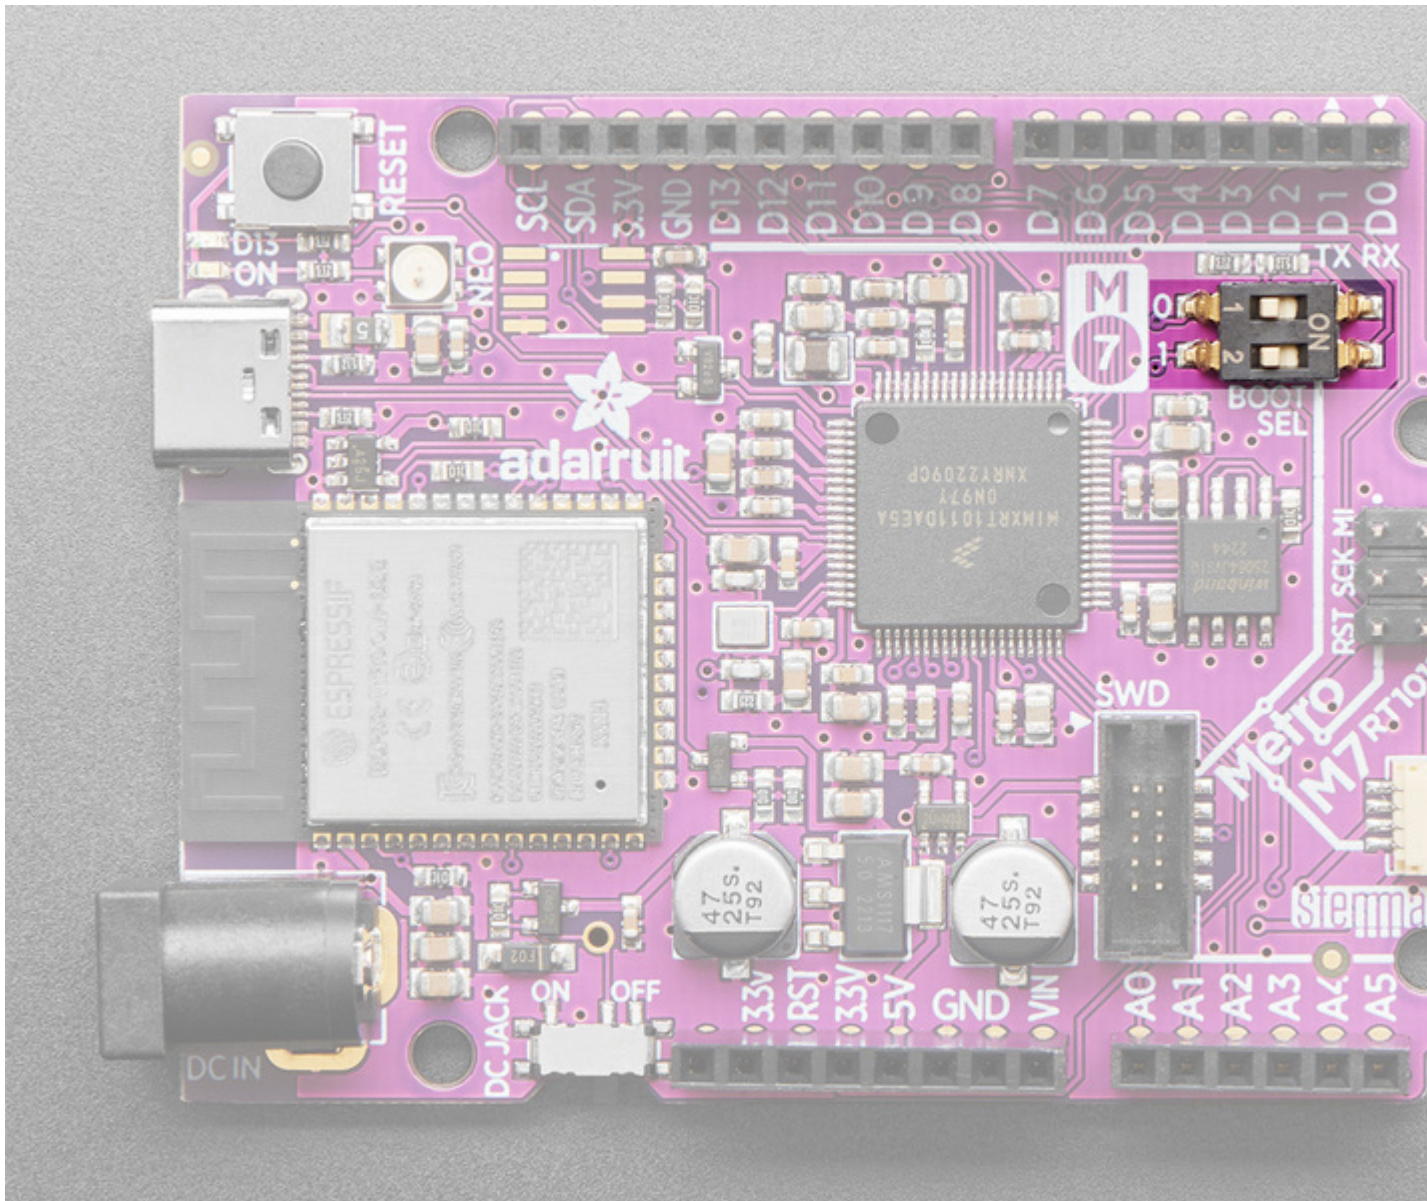


The photo shows both switches in the OFF position, but for normal operation B0 should be OFF and B1 should be ON.

The boot mode switches (labeled **BOOT SEL** on the board silk) are used to get into the ROM bootloader. The switch has two individual switches: **B0** and **B1**. The photo shows both switches in the **OFF** position, but for normal operation **B0** should be **OFF** and **B1** should be **ON**.

The individual switches are set to **ON** (or **1**) when they are moved next to the **ON text** on the switch housing and **OFF** (or **0**) when they are moved next to their labels on the board silk. You can find more information on entering the bootloader with these switches on the [Installing the Bootloader page](https://adafru.it/18sF) (<https://adafru.it/18sF>) in this guide.

Debug Interface

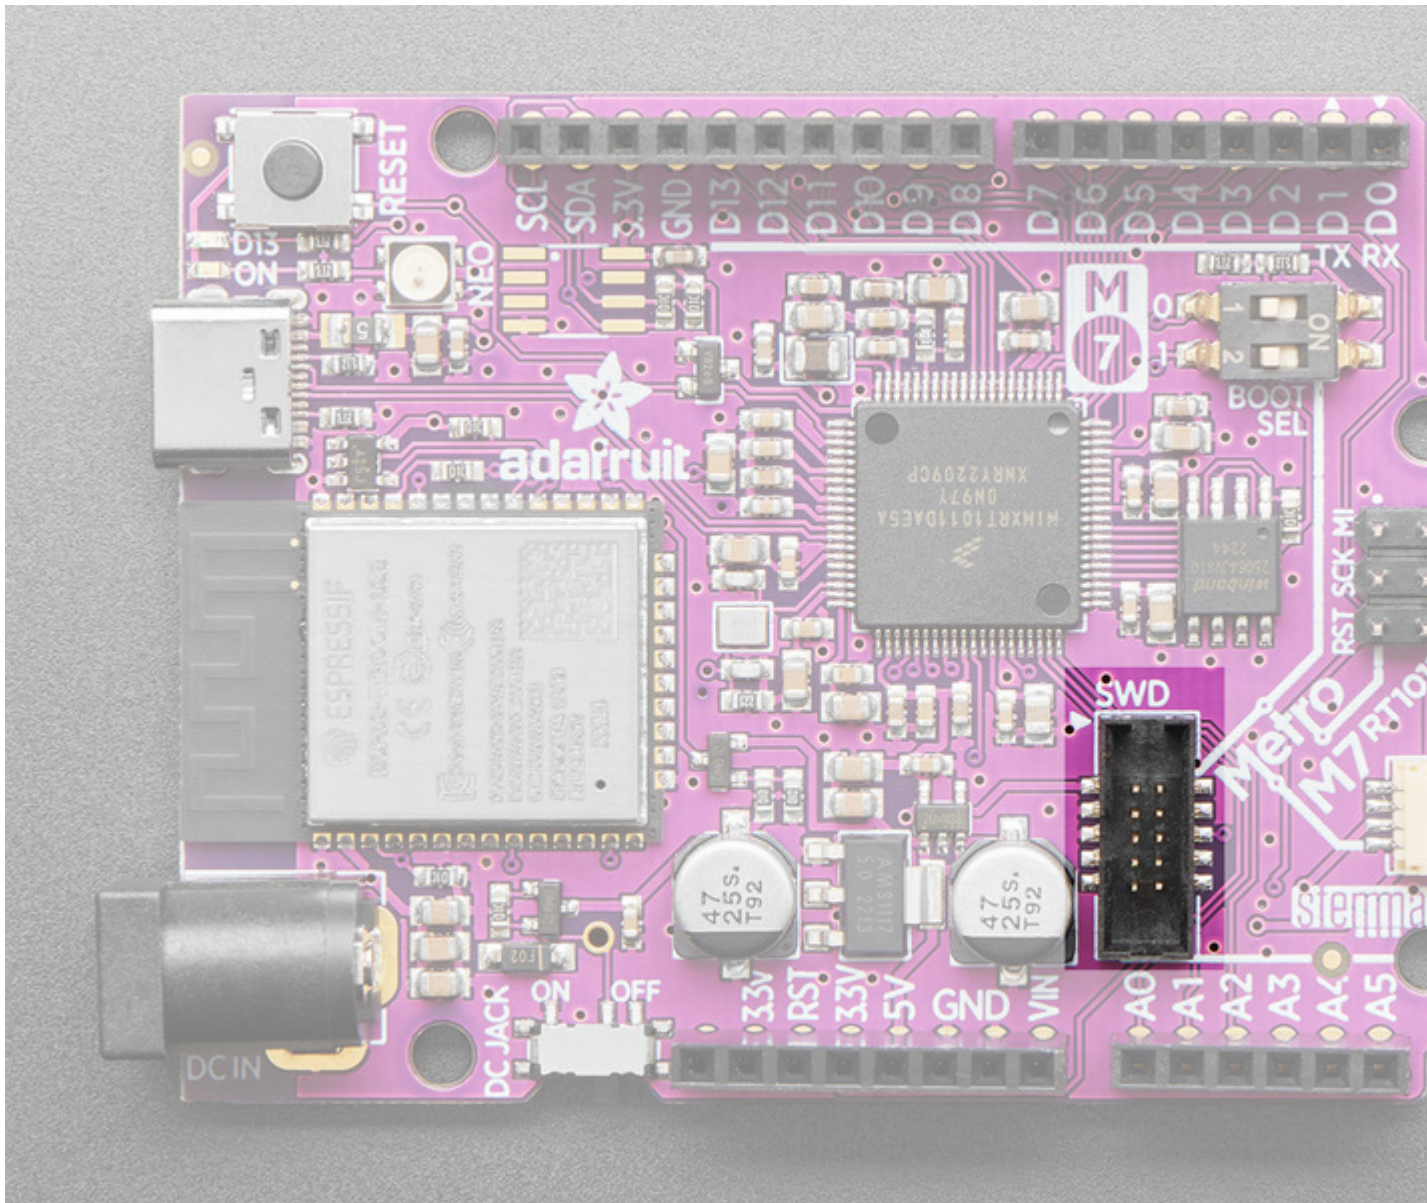


If you'd like to do more advanced development, trace-debugging, or not use the bootloader, we have the SWD interface exposed. You can use any 2x5 0.05" pitch SWD interface to connect. We suggest a J-Link.

[SEGGER J-LINK BASE - J-Link](#)
[Debugging](#)
The SEGGER J-LINK BASE is a cheap and reliable J-Link for the t...
<https://www.adafruit.com/product/2511>



[SEGGER](#)
[EDU Mi](#)
[SWD De](#)
Doing so
serious
develop
any ARM
platform
tired of
plus an
debug?
JTAG/SV
debugge
make de
more of
and...
[https://](https://www.arm.com/products)
[www.ad](https://www.arm.com/products)
[product](https://www.arm.com/products)

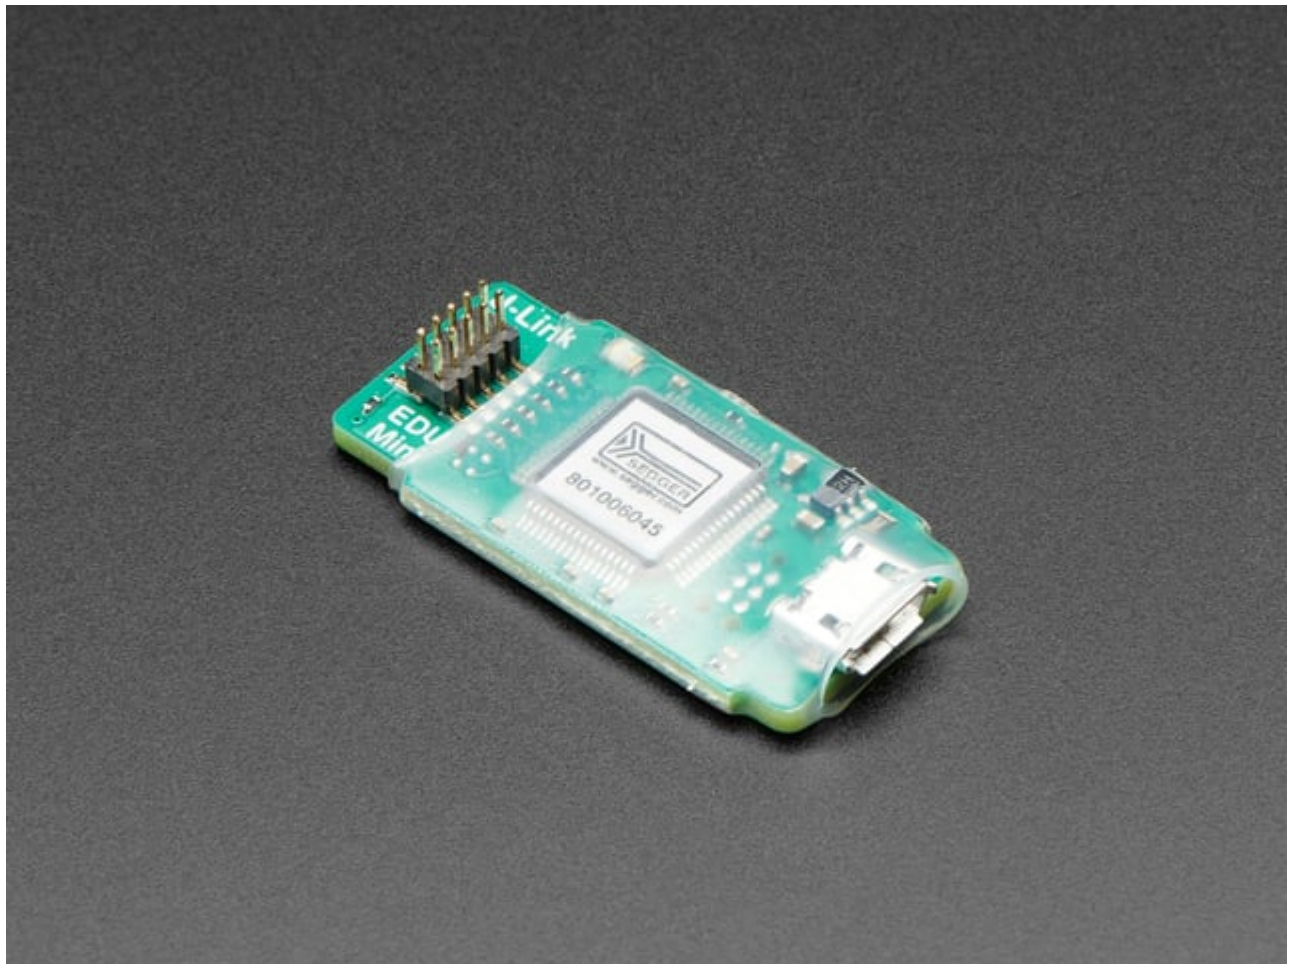


You'll need an adapter and cable to convert the 2x10 JTAG cable to SWD.

[10-pin 2](#)
[Socket 3](#)
[IDC \(SW](#)
[150mm](#)
These li
are hand
program
debuggi
board th
10-pin 1
(0.05") p
program
connect
see thes
connect
on ARM
[https://](https://www.ad)
www.ad
[product](#)



[JTAG \(2x5 1.27mm pitch\) to a slim \(0.05"/1.27mm pitch\) SMD board](#)
This adapter board is for adapting a 'classic' (0.1"/2.54mm pitch) JTAG connector to a slim (0.05"/1.27mm pitch) SMD board. It's helpful for debugging.
<https://www.adamant.com/product/>

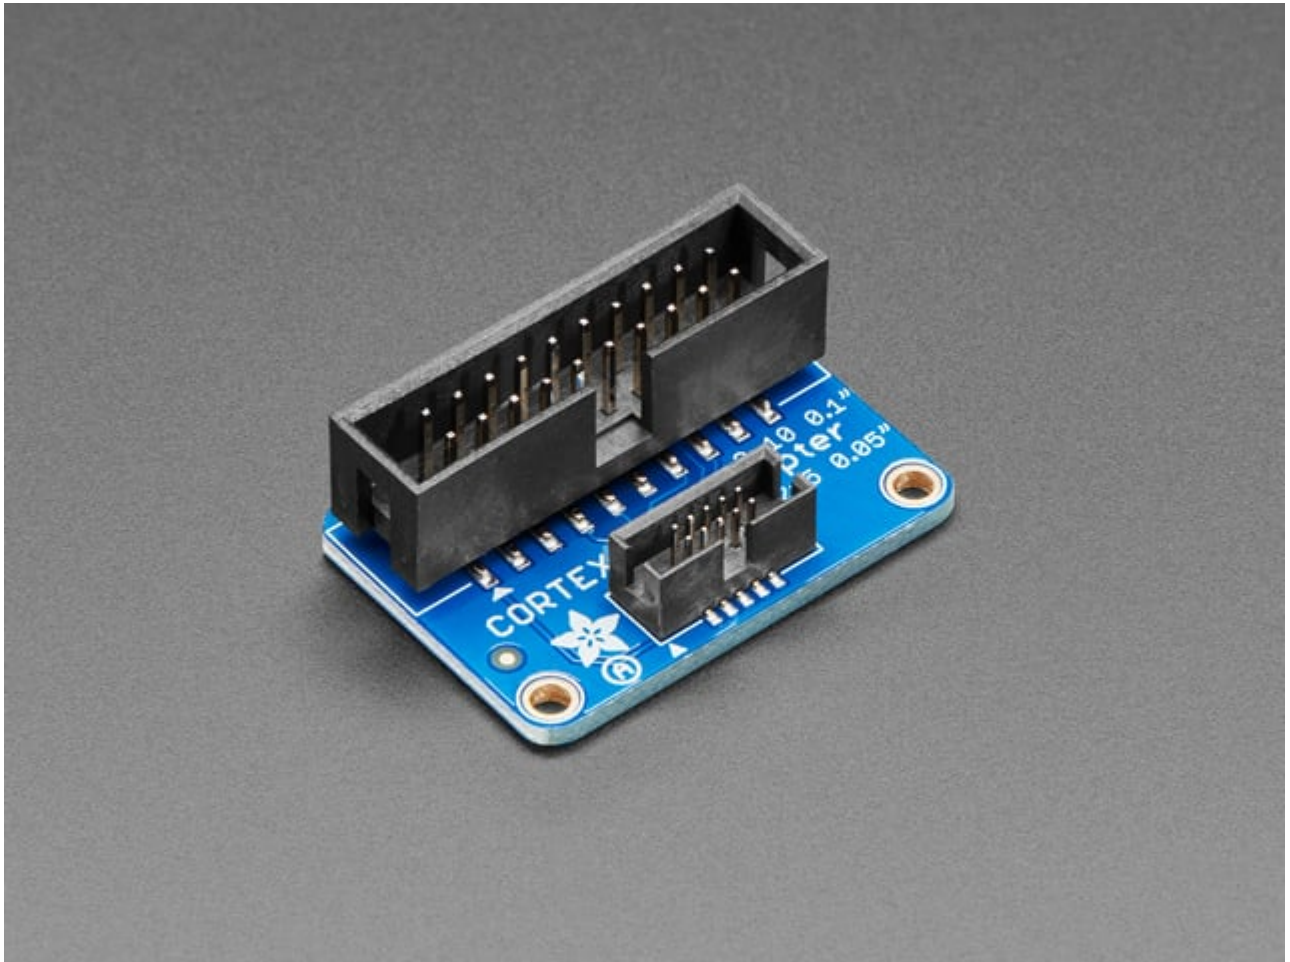

Install CircuitPython

[CircuitPython](https://adafru.it/tB7) (<https://adafru.it/tB7>) is a derivative of [MicroPython](https://adafru.it/BeZ) (<https://adafru.it/BeZ>) designed to simplify experimentation and education on low-cost microcontrollers. It makes it easier than ever to get prototyping by requiring no upfront desktop software downloads. Simply copy and edit files on the **CIRCUITPY** drive to iterate.



CircuitPython Quickstart

Follow this step-by-step to quickly get CircuitPython running on your board.

[Download the latest version of CircuitPython for this board via \[circuitpython.org\]\(https://adafru.it/18tb\)](https://adafru.it/18tb)
<https://adafru.it/18tb>

Click the link above to download the latest CircuitPython UF2 file.

Save it wherever is convenient for you.

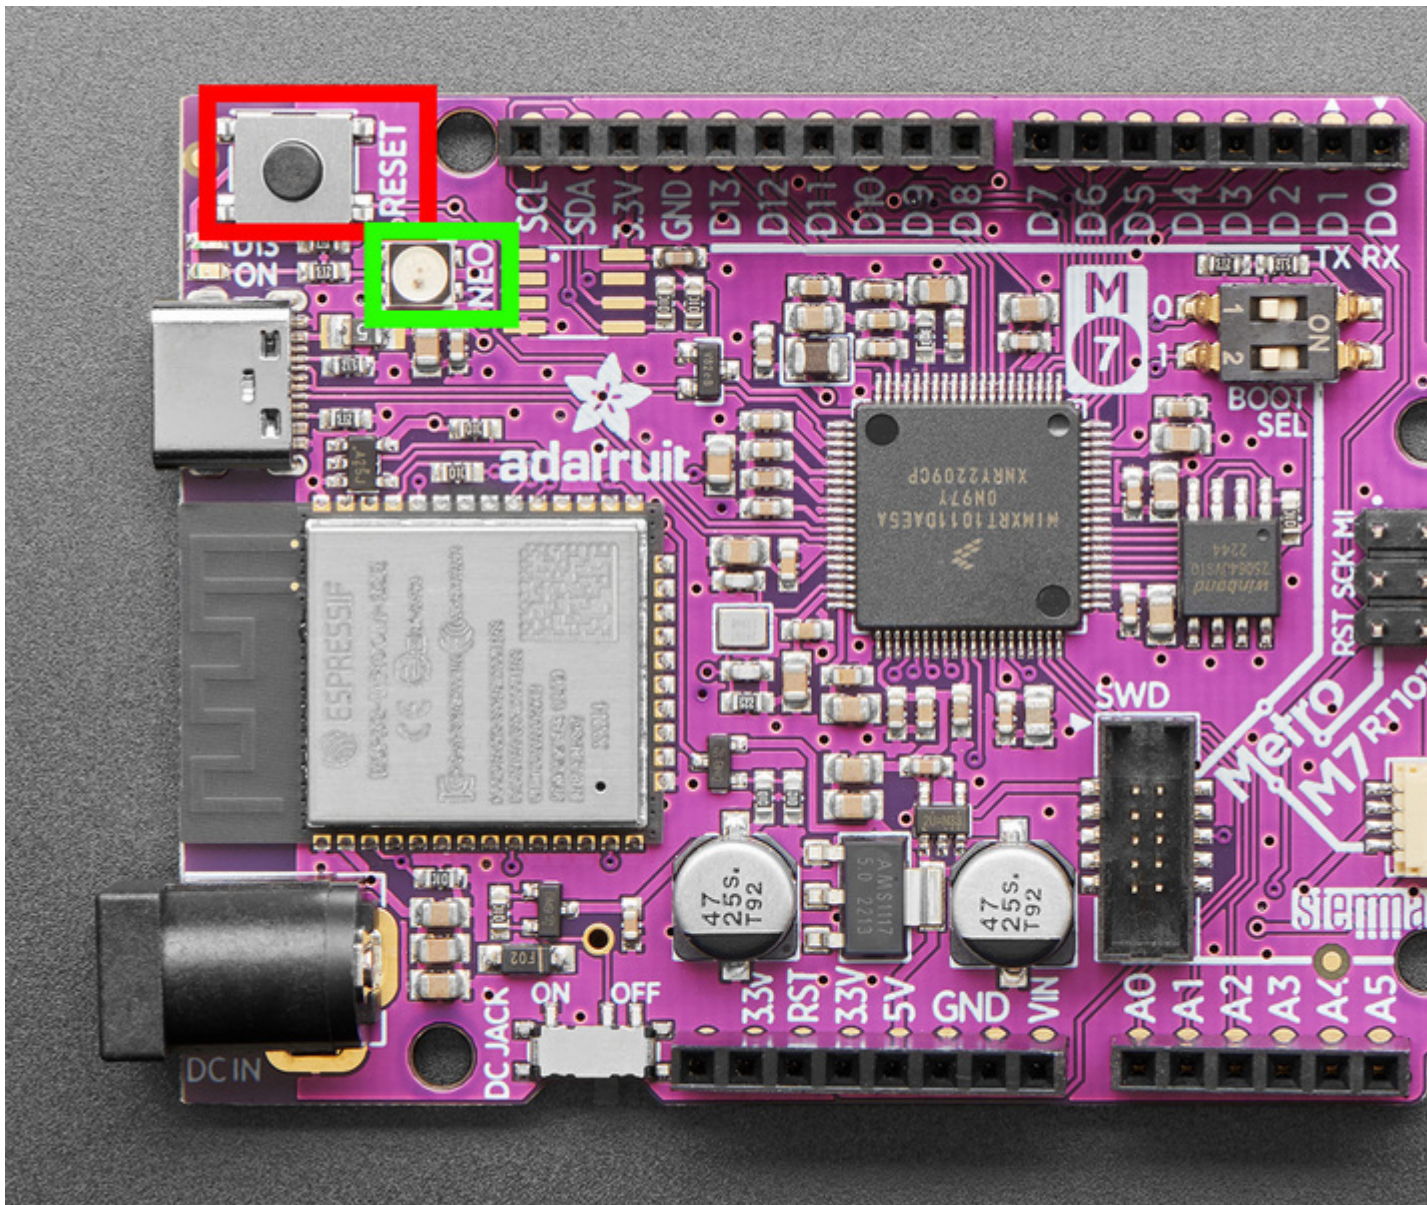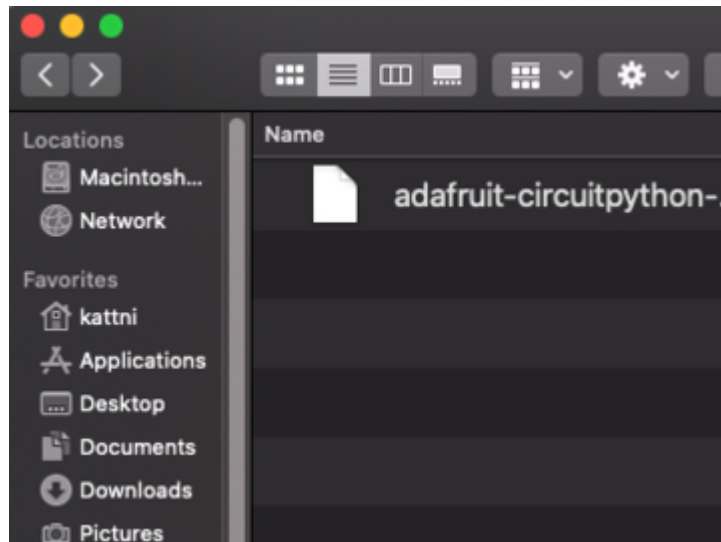

Plug your board into your computer, using a known-good data-sync cable, directly, or via an adapter if needed.

Click the **reset** button once (highlighted in red above), and then click it again when you see the **RGB status LED(s)** (highlighted in green above) turn purple (approximately half a second later). Sometimes it helps to think of it as a "slow double-click" of the reset button.


If you do not see the LED turning purple, you will need to reinstall the UF2 bootloader. See the **Factory Reset** page in this guide for details.

On some very old versions of the UF2 bootloader, the status LED turns red instead of purple.


Once successful, you will see the **RGB status LED(s)** turn green (highlighted in green above). If you see red, try another port, or if you're using an adapter or hub, try without the hub, or different adapter or hub.

If double-clicking doesn't work the first time, try again. Sometimes it can take a few tries to get the rhythm right!


A lot of people end up using charge-only USB cables and it is very frustrating! **Make sure you have a USB cable you know is good for data sync.**

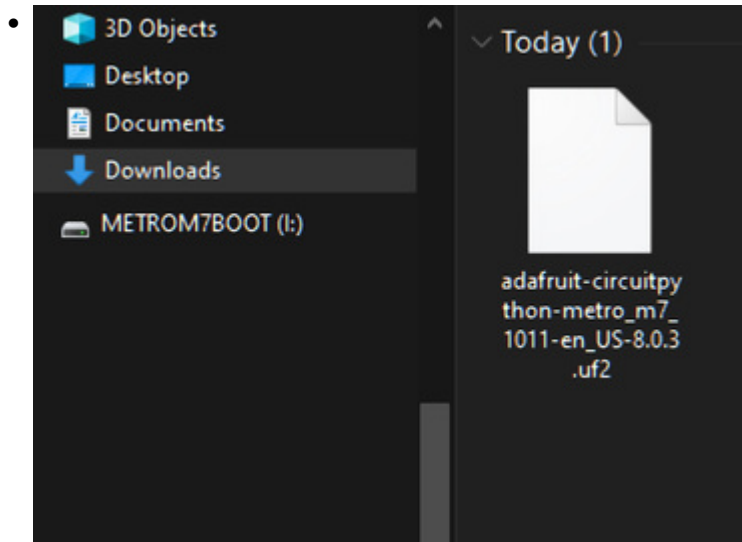

You will see a new disk drive appear called **METROM7BOOT**.

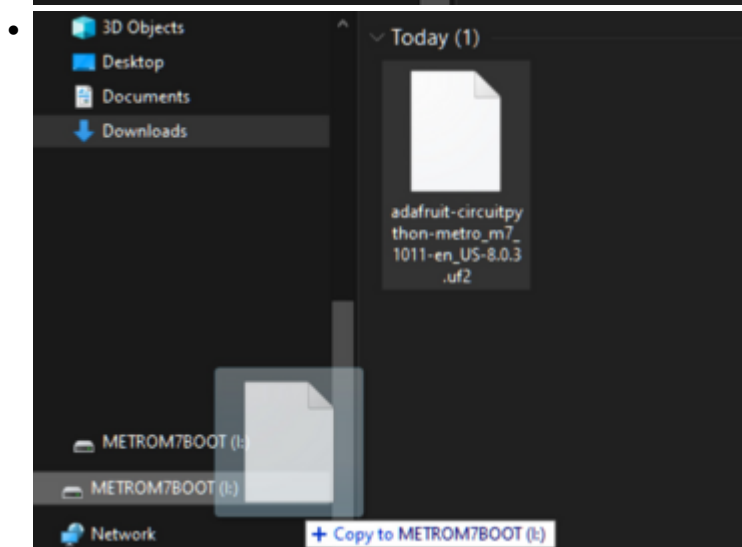

Drag the **adafruit_circuitpython_etc.uf2** to **METROM7BOOT**.

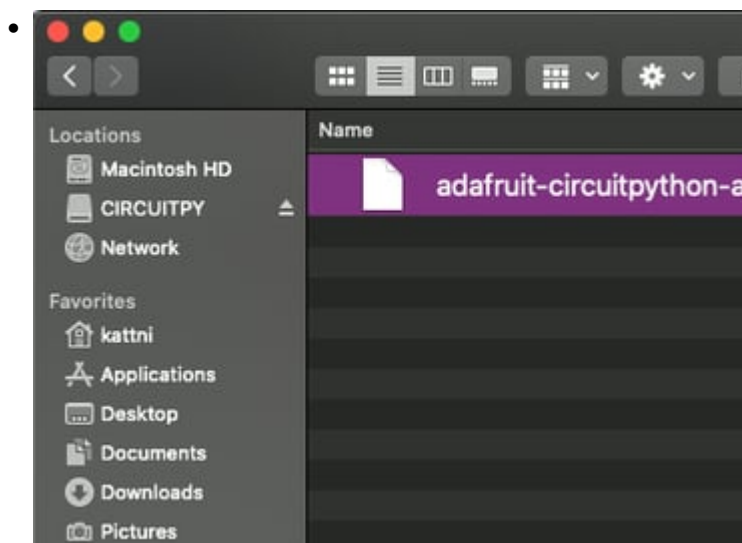

The **BOOT** drive will disappear and a new disk drive called **CIRCUITPY** will appear.

That's it!

Installing the Mu Editor

Mu is a simple code editor that works with the Adafruit CircuitPython boards. It's written in Python and works on Windows, MacOS, Linux and Raspberry Pi. The serial console is built right in so you get immediate feedback from your board's serial output!

Mu is our recommended editor - please use it (unless you are an experienced coder with a favorite editor already!).

Download and Install Mu



Download Mu from <https://codewith.mu> (<https://adafru.it/Be6>).

Click the **Download** link for downloads and installation instructions.


Click **Start Here** to find a wealth of other information, including extensive tutorials and and how-to's.

Windows users: due to the nature of MSI installers, please remove old versions of Mu before installing the latest version.


Starting Up Mu

The first time you start Mu, you will be prompted to select your 'mode' - you can always change your mind later. For now please select **CircuitPython**!

The current mode is displayed in the lower right corner of the window, next to the "gear" icon. If the mode says "Microbit" or something else, click the **Mode**

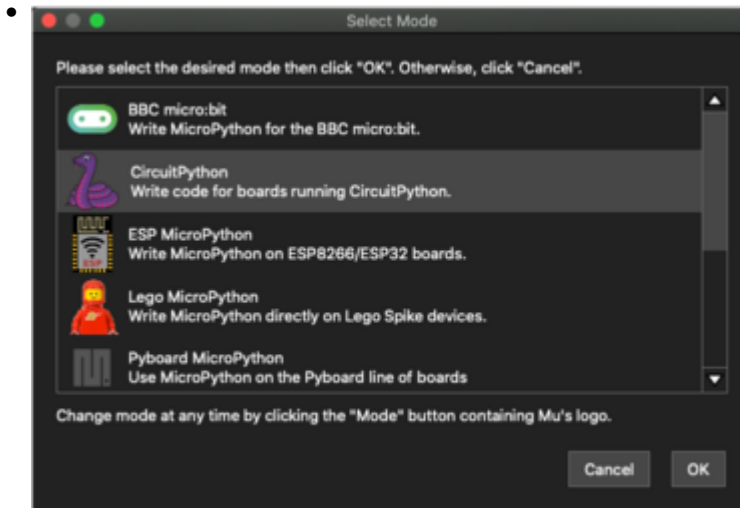

button in the upper left, and then choose "CircuitPython" in the dialog box that appears.

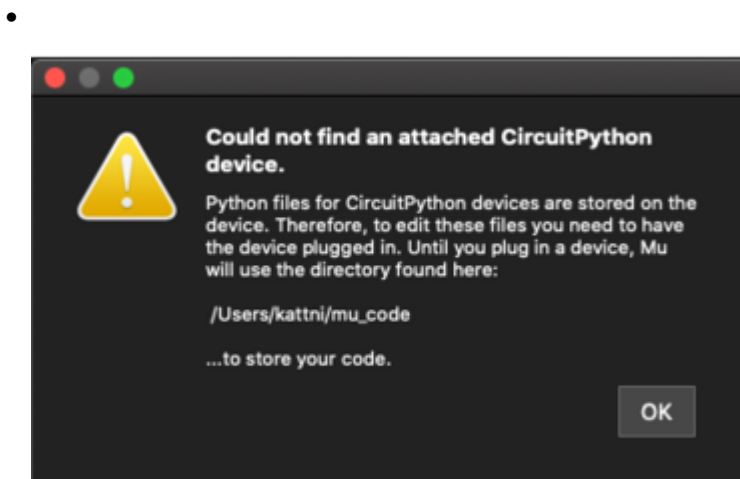


Mu attempts to auto-detect your board on startup, so if you do not have a CircuitPython board plugged in with a **CIRCUITPY** drive available, Mu will inform you where it will store any code you save until you plug in a board.

To avoid this warning, plug in a board and ensure that the **CIRCUITPY** drive is mounted before starting Mu.

Using Mu

You can now explore Mu! The three main sections of the window are labeled below; the button bar, the text editor, and the serial console / REPL.

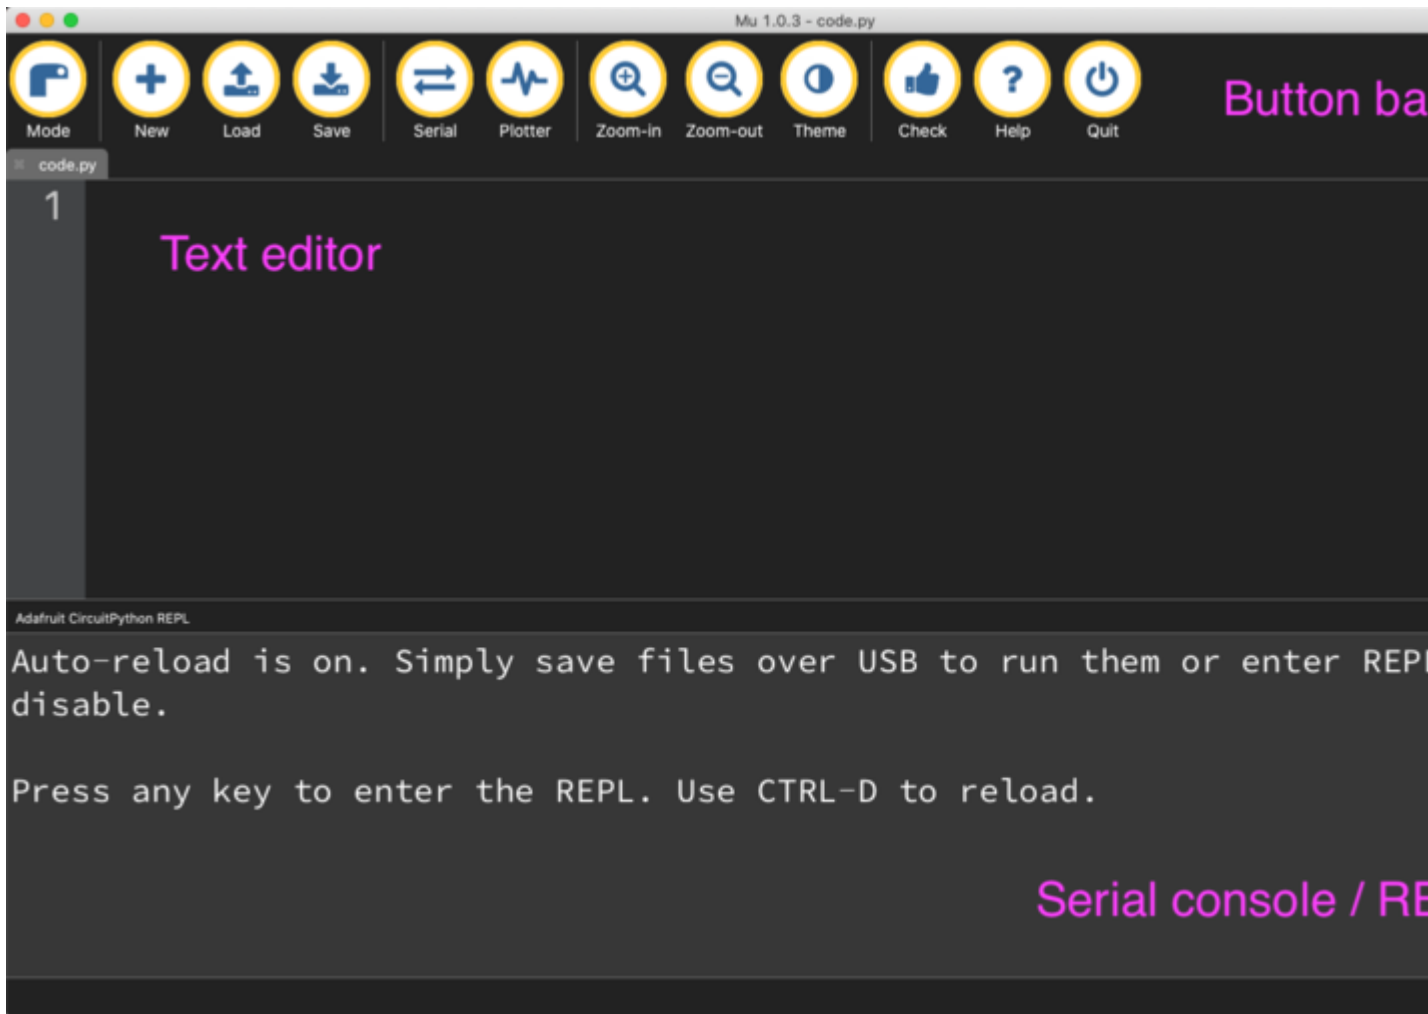

Now you're ready to code! Let's keep going...

The CIRCUITPY Drive


When CircuitPython finishes installing, or you plug a CircuitPython board into your computer with CircuitPython already installed, the board shows up on your computer as a USB drive called **CIRCUITPY**.

The **CIRCUITPY** drive is where your code and the necessary libraries and files will live. You can edit your code directly on this drive and when you save, it will run automatically. When you create and edit code, you'll save your code in a **code.py** file located on the **CIRCUITPY** drive. If you're following along with a Learn guide, you can paste the contents of the tutorial example into **code.py** on the **CIRCUITPY** drive and save it to run the example.

With a fresh CircuitPython install, on your **CIRCUITPY** drive, you'll find a **code.py** file containing `print("Hello World!")` and an empty **lib** folder. If your **CIRCUITPY** drive does not contain a **code.py** file, you can easily create one and save it to the drive. CircuitPython looks for **code.py** and executes the code within the file automatically when the board starts up or resets. Following a change to the contents of **CIRCUITPY**, such as making a

change to the **code.py** file, the board will reset, and the code will be run. You do not need to manually run the code. This is what makes it so easy to get started with your project and update your code!

Note that all changes to the contents of **CIRCUITPY**, such as saving a new file, renaming a current file, or deleting an existing file will trigger a reset of the board.

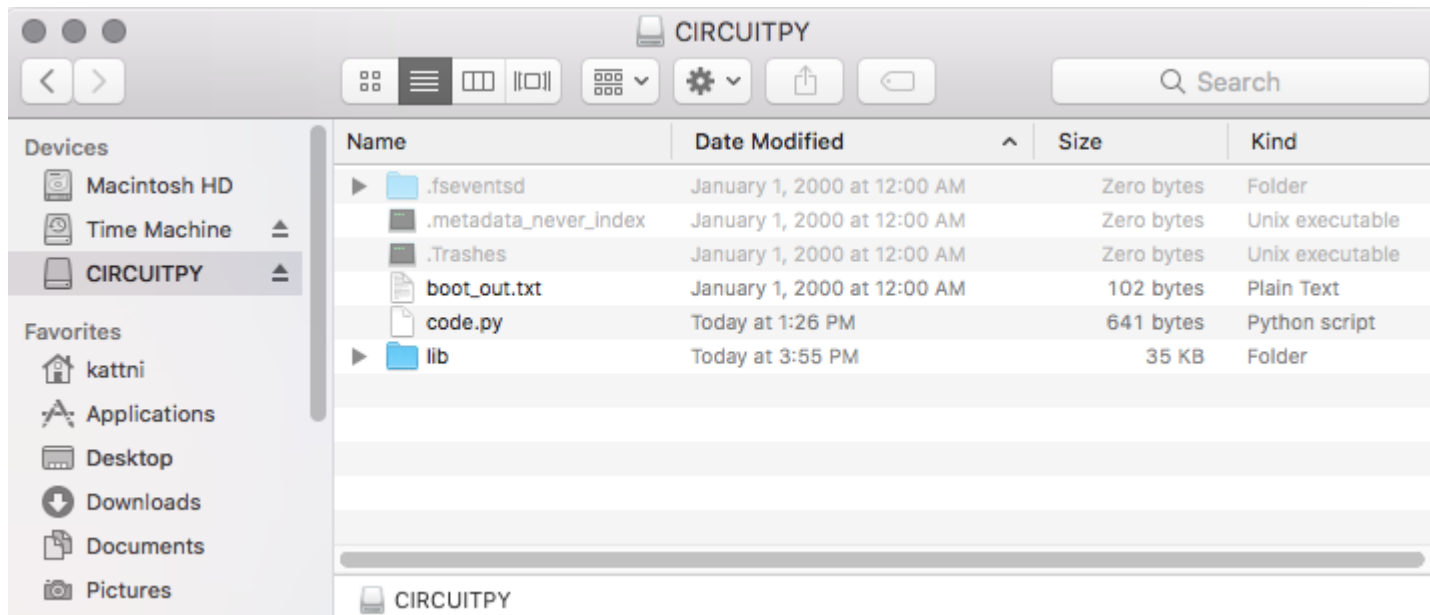

Boards Without CIRCUITPY

CircuitPython is available for some microcontrollers that do not support native USB. Those boards cannot present a **CIRCUITPY** drive. This includes boards using ESP32 or ESP32-C3 microcontrollers.

On these boards, there are alternative ways to transfer and edit files. You can use the [Thonny editor](https://adafru.it/18e7) (https://adafru.it/18e7), which uses hidden commands sent to the REPL to read and write files. Or you can use the CircuitPython web workflow, introduced in Circuitpython 8. The web workflow provides browser-based WiFi access to the CircuitPython filesystem. These guides will help you with the web workflow:

- [CircuitPython on ESP32 Quick Start](https://adafru.it/10JF) (https://adafru.it/10JF)
- [CircuitPython Web Workflow Code Editor Quick Start](https://adafru.it/18e8) (https://adafru.it/18e8)

Creating and Editing Code

One of the best things about CircuitPython is how simple it is to get code up and running. This section covers how to create and edit your first CircuitPython program.


To create and edit code, all you'll need is an editor. There are many options. **Adafruit strongly recommends using Mu! It's designed for**

CircuitPython, and it's really simple and easy to use, with a built in serial console!

If you don't or can't use Mu, there are a number of other editors that work quite well. The [Recommended Editors page](https://adafru.it/Vue) (https://adafru.it/Vue) has more details. Otherwise, make sure you do "Eject" or "Safe Remove" on Windows or "sync" on Linux after writing a file if you aren't using Mu. (This was formerly not a problem on macOS, but see the warning below.)

macOS Sonoma (14.x) introduced a bug that delays writes to small drives such as CIRCUITPY drives. This causes errors when saving files to CIRCUITPY. For a workaround, see <https://learn.adafruit.com/welcome-to-circuitpython/troubleshooting#macos-sonoma-14-dot-x-disk-errors-writing-to-circuitpy-3160304>

Creating Code

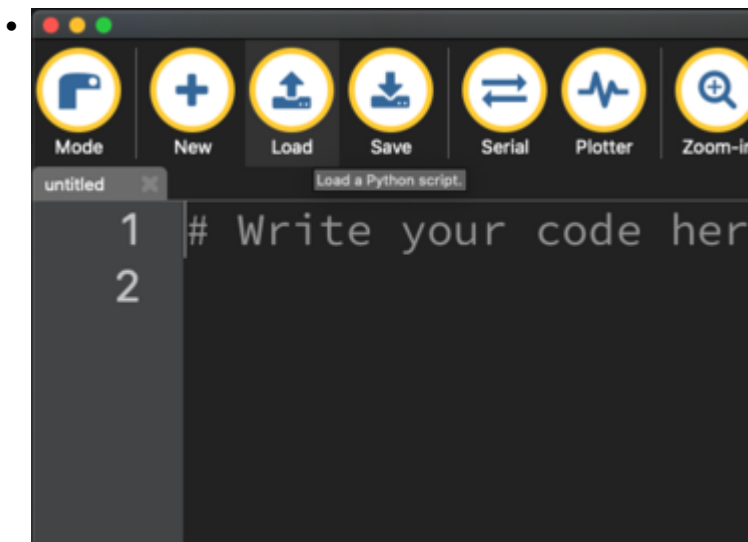

Installing CircuitPython generates a **code.py** file on your **CIRCUITPY** drive. To begin your own program, open your editor, and load the **code.py** file from the **CIRCUITPY** drive.

If you are using Mu, click the **Load** button in the button bar, navigate to the **CIRCUITPY** drive, and choose **code.py**.

Copy and paste the following code into your editor:

```
import board
import digitalio
import time


led = digitalio.DigitalInOut(board.LED)
led.direction = digitalio.Direction.OUTPUT

while True:
    led.value = True
    time.sleep(0.5)
    led.value = False
    time.sleep(0.5)
```


The KB2040, QT Py , Qualia, and the Trinkeys do not have a built-in little red LED! There is an addressable RGB NeoPixel LED. The above example will NOT work on the KB2040, QT Py, Qualia, or the Trinkeys!

If you're using a KB2040, QT Py, Quaila, or a Trinkey, or any other board without a single-color LED that can blink, please download the [NeoPixel blink example](https://adafru.it/UDU) (<https://adafru.it/UDU>).

The NeoPixel blink example uses the onboard NeoPixel, but the time code is the same. You can use the linked NeoPixel Blink example to follow along with this guide page.

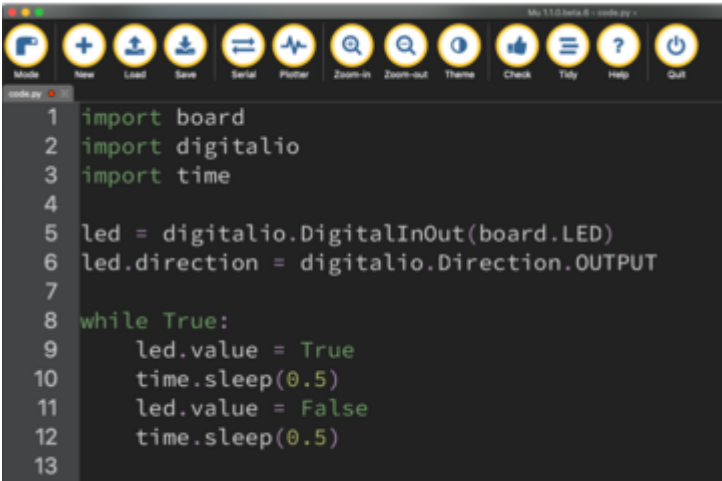- A screenshot of the CircuitPython IDE interface. The top toolbar includes icons for Mode, New, Load, Save, Serial, Plotter, Zoom-in, Zoom-out, Theme, Check, Tidy, Help, and Quit. The code editor shows a Python script for blinking an LED. The script is as follows:

```
1 import board
2 import digitalio
3 import time
4
5 led = digitalio.DigitalInOut(board.LED)
6 led.direction = digitalio.Direction.OUTPUT
7
8 while True:
9     led.value = True
10    time.sleep(0.5)
11    led.value = False
12    time.sleep(0.5)
13
```
- It will look like this. Note that under the while True: line, the next four lines begin with four spaces to indent them, and they're indented exactly the same amount. All the lines before that have no spaces before the text.

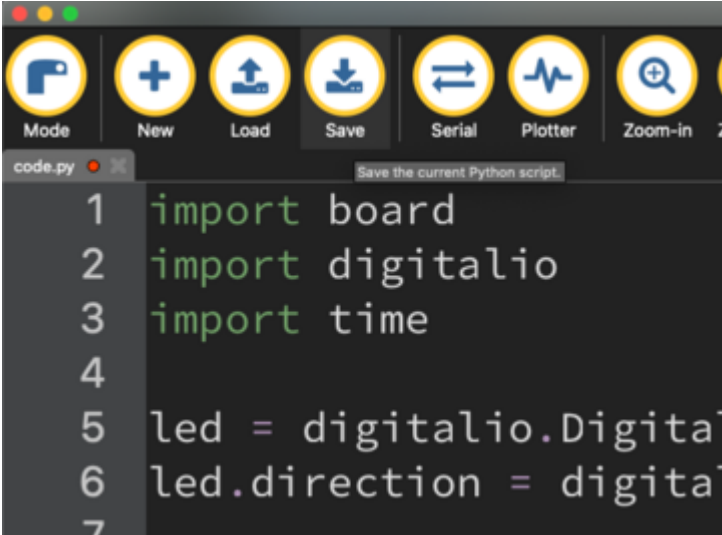- A screenshot of the CircuitPython IDE interface, similar to the previous one. The 'Save' button in the toolbar is highlighted with a yellow box. The code editor shows the same Python script for blinking an LED, but only the first seven lines are visible:


```
1 import board
2 import digitalio
3 import time
4
5 led = digitalio.DigitalIn
6 led.direction = digital
7
```
- Save the **code.py** file on your **CIRCUITPY** drive.

The little LED should now be blinking. Once per half-second.

Congratulations, you've just run your first CircuitPython program!

On most boards you'll find a tiny red LED. On the ItsyBitsy nRF52840, you'll find a tiny blue LED. On QT Py M0, QT Py RP2040, Qualia, and the Trinkey series, you will find only an RGB NeoPixel LED.

Editing Code

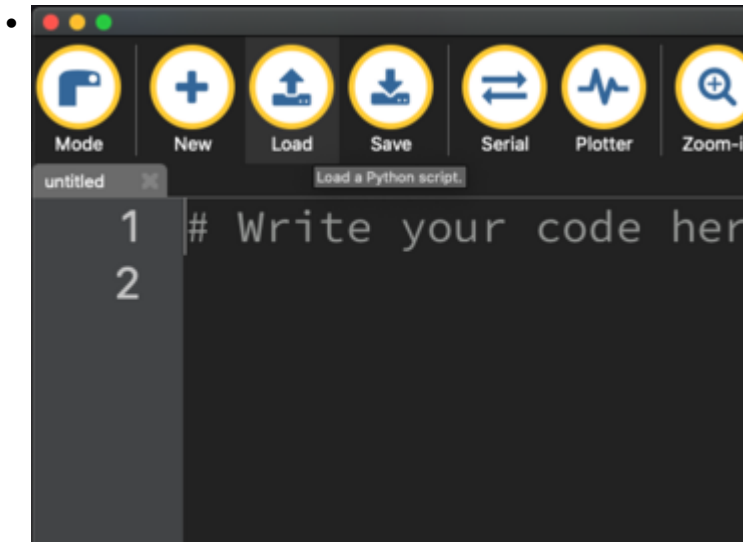

To edit code, open the **code.py** file on your **CIRCUITPY** drive into your editor.

Make the desired changes to your code. Save the file. That's it!

Your code changes are run as soon as the file is done saving.

There's one warning before you continue...

Don't click reset or unplug your board!

The CircuitPython code on your board detects when the files are changed or written and will automatically re-start your code. This makes coding very fast because you save, and it re-runs. If you unplug or reset the board before your computer finishes writing the file to your board, you can corrupt the drive. If this happens, you may lose the code you've written, so it's important to backup your code to your computer regularly.

There are a couple of ways to avoid filesystem corruption.

1. Use an editor that writes out the file completely when you save it.

Check out the [Recommended Editors page](https://adafru.it/Vue) (https://adafru.it/Vue) for details on different editing options.

If you are dragging a file from your host computer onto the CIRCUITPY drive, you still need to do step 2. Eject or Sync (below) to make sure the file is completely written.

2. Eject or Sync the Drive After Writing

If you are using one of our not-recommended-editors, not all is lost! You can still make it work.

On Windows, you can Eject or Safe Remove the **CIRCUITPY** drive. It won't actually eject, but it will force the operating system to save your file to disk. On Linux, use the **sync** command in a terminal to force the write to disk.

You also need to do this if you use Windows Explorer or a Linux graphical file manager to drag a file onto **CIRCUITPY**.

Oh No I Did Something Wrong and Now The CIRCUITPY Drive Doesn't Show Up!!!

Don't worry! Corrupting the drive isn't the end of the world (or your board!). If this happens, follow the steps found on the [Troubleshooting](https://adafru.it/Den) (<https://adafru.it/Den>) page of every board guide to get your board up and running again.

Back to Editing Code...

Now! Let's try editing the program you added to your board. Open your **code.py** file into your editor. You'll make a simple change. Change the first 0.5 to 0.1. The code should look like this:

```
import board
import digitalio
import time

led = digitalio.DigitalInOut(board.LED)
led.direction = digitalio.Direction.OUTPUT

while True:
    led.value = True
    time.sleep(0.1)
    led.value = False
    time.sleep(0.5)
```

Leave the rest of the code as-is. Save your file. See what happens to the LED on your board? Something changed! Do you know why?

You don't have to stop there! Let's keep going. Change the second 0.5 to 0.1 so it looks like this:

```
while True:
    led.value = True
    time.sleep(0.1)
```

```
led.value = False
time.sleep(0.1)
```

Now it blinks really fast! You decreased the both time that the code leaves the LED on and off!

Now try increasing both of the 0.1 to 1. Your LED will blink much more slowly because you've increased the amount of time that the LED is turned on and off.

Well done! You're doing great! You're ready to start into new examples and edit them to see what happens! These were simple changes, but major changes are done using the same process. Make your desired change, save it, and get the results. That's really all there is to it!

Naming Your Program File

CircuitPython looks for a code file on the board to run. There are four options: **code.txt**, **code.py**, **main.txt** and **main.py**. CircuitPython looks for those files, in that order, and then runs the first one it finds. While **code.py** is the recommended name for your code file, it is important to know that the other options exist. If your program doesn't seem to be updating as you work, make sure you haven't created another code file that's being read instead of the one you're working on.

Exploring Your First CircuitPython Program

First, you'll take a look at the code you're editing.

Here is the original code again for the LED blink example (if your board doesn't have a single-color LED to blink, look instead at the NeoPixel blink example):

```
import board
import digitalio
import time

led = digitalio.DigitalInOut(board.LED)
led.direction = digitalio.Direction.OUTPUT

while True:
    led.value = True
    time.sleep(0.5)
    led.value = False
    time.sleep(0.5)
```

Imports & Libraries

Each CircuitPython program you run needs to have a lot of information to work. The reason CircuitPython is so simple to use is that most of that information is stored in other files and works in the background. The files built into CircuitPython are called **modules**, and the files you load separately are called **libraries**. Modules are built into CircuitPython. Libraries are stored on your **CIRCUITPY** drive in a folder called **lib**.

```
import board
import digitalio
import time
```

The import statements tell the board that you're going to use a particular library or module in your code. In this example, you imported three modules: `board`, `digitalio`, and `time`. All three of these modules are built into CircuitPython, so no separate library files are needed. That's one of the things that makes this an excellent first example. You don't need anything extra to make it work!

These three modules each have a purpose. The first one, `board`, gives you access to the hardware on your board. The second, `digitalio`, lets you access that hardware as inputs/outputs. The third, `time`, lets you control the flow of your code in multiple ways, including passing time by 'sleeping'.

Setting Up The LED

The next two lines setup the code to use the LED.

```
led = digitalio.DigitalInOut(board.LED)
led.direction = digitalio.Direction.OUTPUT
```

Your board knows the red LED as `LED`. So, you initialise that pin, and you set it to output. You set `led` to equal the rest of that information so you don't have to type it all out again later in our code.

Loop-de-loops

The third section starts with a `while` statement. `while True:` essentially means, "forever do the following:". `while True:` creates a loop. Code will loop "while" the condition is "true" (vs. false), and as `True` is never False, the code will loop forever. All code that is indented under `while True:` is "inside" the loop.

Inside our loop, you have four items:

```
while True:
    led.value = True
    time.sleep(0.5)
    led.value = False
    time.sleep(0.5)
```

First, you have `led.value = True`. This line tells the LED to turn on. On the next line, you have `time.sleep(0.5)`. This line is telling CircuitPython to pause running code for 0.5 seconds. Since this is between turning the led on and off, the led will be on for 0.5 seconds.

The next two lines are similar. `led.value = False` tells the LED to turn off, and `time.sleep(0.5)` tells CircuitPython to pause for another 0.5 seconds. This occurs between turning the led off and back on so the LED will be off for 0.5 seconds too.

Then the loop will begin again, and continue to do so as long as the code is running!

So, when you changed the first `0.5` to `0.1`, you decreased the amount of time that the code leaves the LED on. So it blinks on really quickly before turning off!

Great job! You've edited code in a CircuitPython program!

What Happens When My Code Finishes Running?

When your code finishes running, CircuitPython resets your microcontroller board to prepare it for the next run of code. That means any set up you did earlier no longer applies, and the pin states are reset.

For example, try reducing the code snippet above by eliminating the loop entirely, and replacing it with `led.value = True`. The LED will flash almost too quickly to see, and turn off. This is because the code finishes running and resets the pin state, and the LED is no longer receiving a signal.

To that end, most CircuitPython programs involve some kind of loop, infinite or otherwise.

What if I Don't Have the Loop?

If you don't have the loop, the code will run to the end and exit. This can lead to some unexpected behavior in simple programs like this since the "exit" also resets the state of the hardware. This is a different behavior than running commands via REPL. So if you are writing a simple program that doesn't seem to work, you may need to add a loop to the end so the program doesn't exit.

The simplest loop would be:

```
while True:
    pass
```

And remember - you can press CTRL+C to exit the loop.

See also the [Behavior section in the docs](https://adafru.it/Bvz) (<https://adafru.it/Bvz>).

Connecting to the Serial Console

One of the staples of CircuitPython (and programming in general!) is something called a "print statement". This is a line you include in your code that causes your code to output text. A print statement in CircuitPython (and Python) looks like this:

```
print("Hello, world!")
```

This line in your code.py would result in:

```
Hello, world!
```

However, these print statements need somewhere to display. That's where the serial console comes in!


The serial console receives output from your CircuitPython board sent over USB and displays it so you can see it. This is necessary when you've included a print statement in your code and you'd like to see what you printed. It is also helpful for troubleshooting errors, because your board will send errors and the serial console will display those too.

The serial console requires an editor that has a built in terminal, or a separate terminal program. A terminal is a program that gives you a text-based interface to perform various tasks.

Are you using Mu?

If so, good news! The serial console **is built into Mu** and will **autodetect your board** making using the serial console really really easy.


First, make sure your CircuitPython board is plugged in.

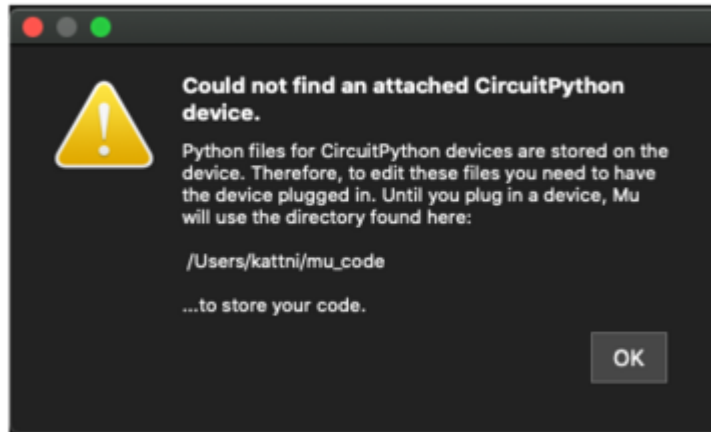

If you open Mu without a board plugged in, you may encounter the error seen here, letting you know no CircuitPython board was found and indicating where your code will be stored until you plug in a board.

[If you are using Windows 7, make sure you installed the drivers](https://adafru.it/VuB) (<https://adafru.it/VuB>).

Once you've opened Mu with your board plugged in, look for the **Serial** button in the button bar and click it.

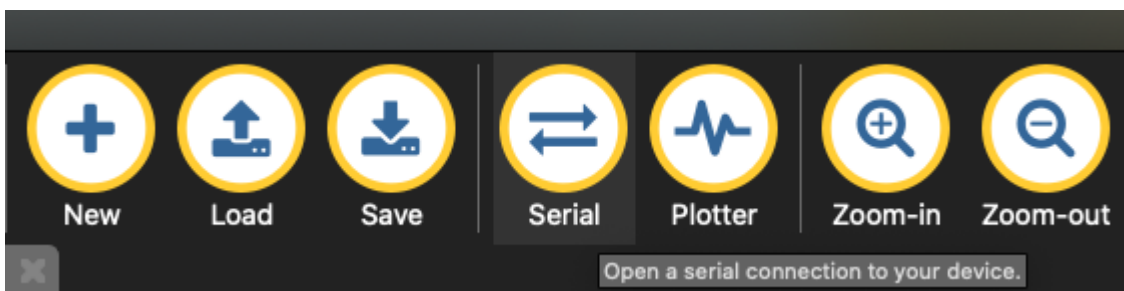

The Mu window will split in two, horizontally, and display the serial console at the bottom.



If nothing appears in the serial console, it may mean your code is done running or has no print statements in it. Click into the serial console part of Mu, and press CTRL+D to reload.

Serial Console Issues or Delays on Linux

If you're on Linux, and are seeing multi-second delays connecting to the serial console, or are seeing "AT" and other gibberish when you connect, then the `modemmanager` service might be interfering. Just remove it; it doesn't have much use unless you're still using dial-up modems.

To remove `modemmanager`, type the following command at a shell:

```
sudo apt purge modemmanager
```

Setting Permissions on Linux

On Linux, if you see an error box something like the one below when you press the **Serial** button, you need to add yourself to a user group to have permission to connect to the serial console.



On Ubuntu and Debian, add yourself to the **dialout** group by doing:

```
sudo adduser $USER dialout
```

After running the command above, reboot your machine to gain access to the group. On other Linux distributions, the group you need may be different. See the [Advanced Serial Console on Linux](https://adafru.it/VAO) (<https://adafru.it/VAO>) for details on how to add yourself to the right group.

Using Something Else?

If you're not using Mu to edit, are using or if for some reason you are not a fan of its built in serial console, you can run the serial console from a separate program.

Windows requires you to download a terminal program. [Check out the Advanced Serial Console on Windows page for more details.](https://adafru.it/AAH) (<https://adafru.it/AAH>)

MacOS has Terminal built in, though there are other options available for download. [Check the Advanced Serial Console on Mac page for more details.](https://adafru.it/AAI) (<https://adafru.it/AAI>)

Linux has a terminal program built in, though other options are available for download. [Check the Advanced Serial Console on Linux page for more details.](https://adafru.it/VAO) (<https://adafru.it/VAO>)

Once connected, you'll see something like the following.

```
Auto-reload is on. Simply save files over USB to run them or enter REPL to
le.
code.py output:
Hello, world!

Code done running.

Press any key to enter the REPL. Use CTRL-D to reload.
```

Interacting with the Serial Console

Once you've successfully connected to the serial console, it's time to start using it.

The code you wrote earlier has no output to the serial console. So, you're going to edit it to create some output.

Open your code.py file into your editor, and include a print statement. You can print anything you like! Just include your phrase between the quotation marks inside the parentheses. For example:


```
import board
import digitalio
import time

led = digitalio.DigitalInOut(board.LED)
led.direction = digitalio.Direction.OUTPUT

while True:
    print("Hello, CircuitPython!")
    led.value = True
    time.sleep(1)
    led.value = False
    time.sleep(1)
```

Save your file.

Now, let's go take a look at the window with our connection to the serial console.

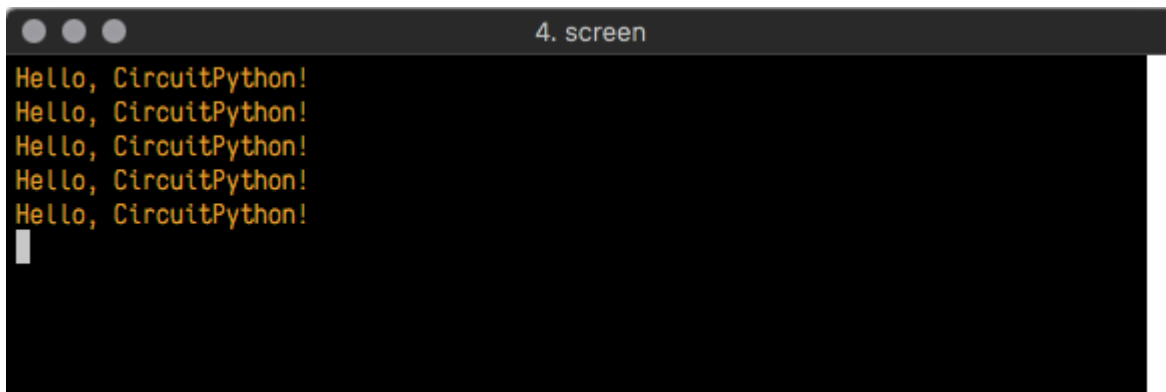

```
4. screen
Hello, CircuitPython!
Hello, CircuitPython!
Hello, CircuitPython!
Hello, CircuitPython!
Hello, CircuitPython!
```


Excellent! Our print statement is showing up in our console! Try changing the printed text to something else.

```
import board
import digitalio
import time

led = digitalio.DigitalInOut(board.LED)
led.direction = digitalio.Direction.OUTPUT

while True:
    print("Hello back to you!")
    led.value = True
    time.sleep(1)
    led.value = False
    time.sleep(1)
```

Keep your serial console window where you can see it. Save your file. You'll see what the serial console displays when the board reboots. Then you'll see your new change!

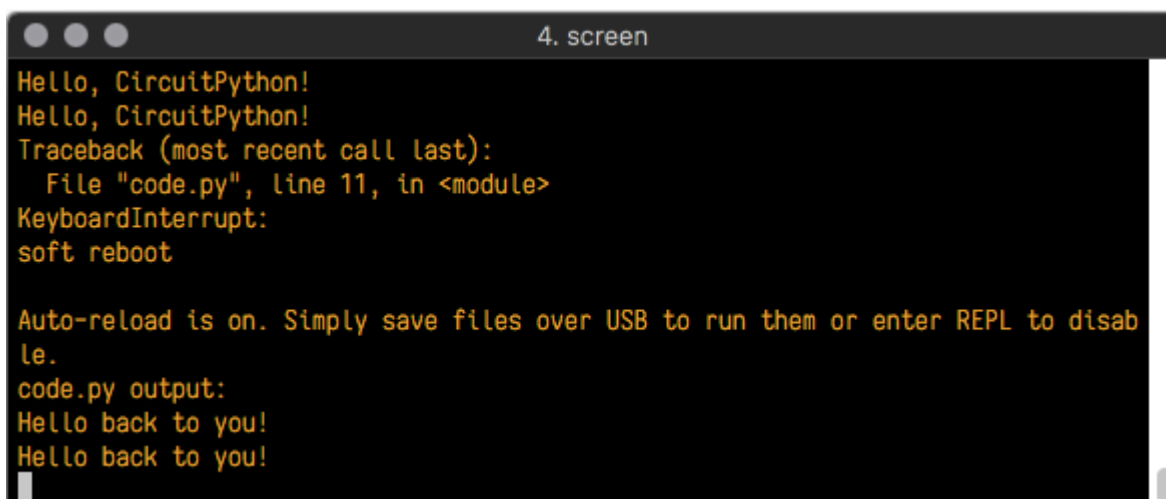

```
4. screen
Hello, CircuitPython!
Hello, CircuitPython!
Traceback (most recent call last):
  File "code.py", line 11, in <module>
KeyboardInterrupt:
soft reboot

Auto-reload is on. Simply save files over USB to run them or enter REPL to disable.
code.py output:
Hello back to you!
Hello back to you!
```

The `Traceback (most recent call last):` is telling you the last thing your board was doing before you saved your file. This is normal behavior and will happen every time the board resets. This is really handy for troubleshooting. Let's introduce an error so you can see how it is used.

Delete the e at the end of True from the line `led.value = True` so that it says `led.value = Tru`


```
import board
import digitalio
import time

led = digitalio.DigitalInOut(board.LED)
led.direction = digitalio.Direction.OUTPUT

while True:
    print("Hello back to you!")
    led.value = Tru
    time.sleep(1)
    led.value = False
    time.sleep(1)
```

Save your file. You will notice that your red LED will stop blinking, and you may have a colored status LED blinking at you. This is because the code is no longer correct and can no longer run properly. You need to fix it!

Usually when you run into errors, it's not because you introduced them on purpose. You may have 200 lines of code, and have no idea where your error could be hiding. This is where the serial console can help. Let's take a look!

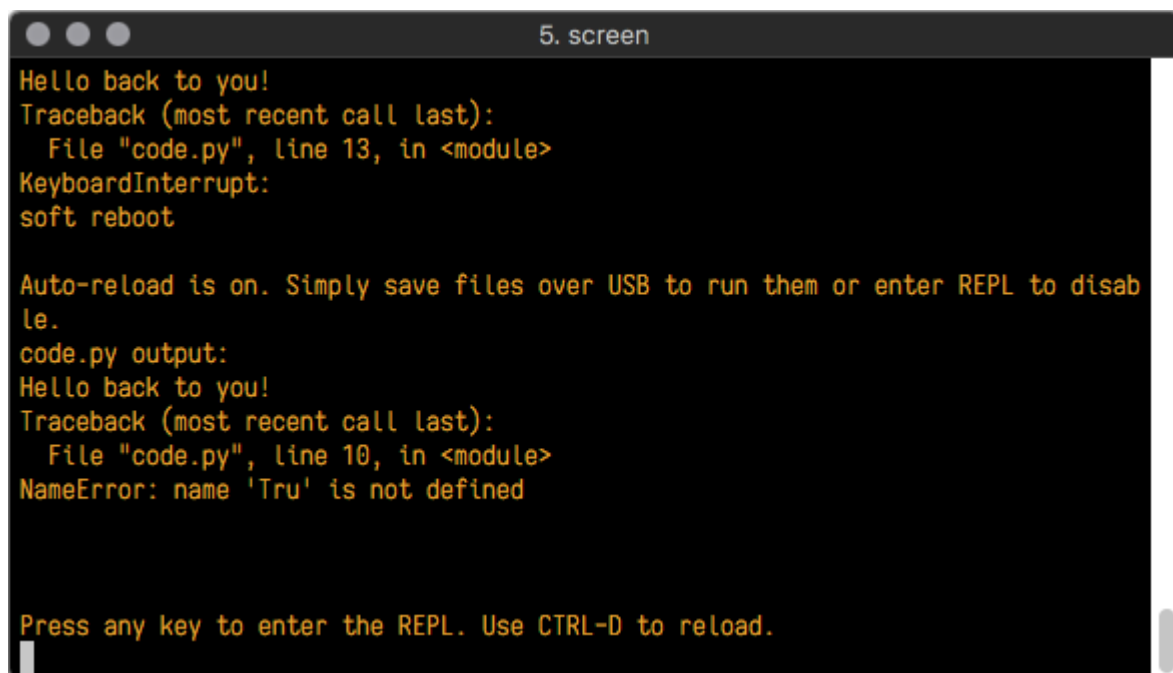

```
5. screen
Hello back to you!
Traceback (most recent call last):
  File "code.py", line 13, in <module>
KeyboardInterrupt:
soft reboot


Auto-reload is on. Simply save files over USB to run them or enter REPL to disable.
code.py output:
Hello back to you!
Traceback (most recent call last):
  File "code.py", line 10, in <module>
NameError: name 'Tru' is not defined

Press any key to enter the REPL. Use CTRL-D to reload.
```

The `Traceback (most recent call last):` is telling you that the last thing it was able to run was line 10 in your code. The next line is your error: `NameError: name 'Tru' is not defined`. This error might not mean a lot to you, but combined with knowing the issue is on line 10, it gives you a great place to start!

Go back to your code, and take a look at line 10. Obviously, you know what the problem is already. But if you didn't, you'd want to look at line 10 and

see if you could figure it out. If you're still unsure, try googling the error to get some help. In this case, you know what to look for. You spelled True wrong. Fix the typo and save your file.

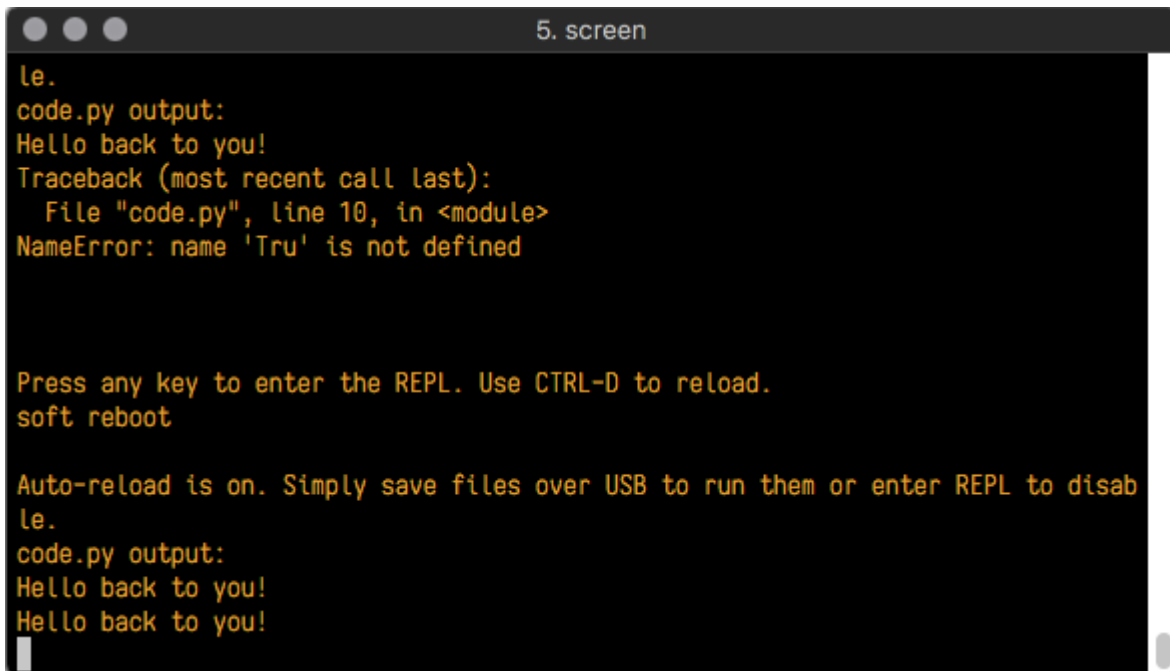

```
le.  
code.py output:  
Hello back to you!  
Traceback (most recent call last):  
  File "code.py", line 10, in <module>  
NameError: name 'Tru' is not defined  
  
Press any key to enter the REPL. Use CTRL-D to reload.  
soft reboot  
  
Auto-reload is on. Simply save files over USB to run them or enter REPL to disab  
le.  
code.py output:  
Hello back to you!  
Hello back to you!
```

Nice job fixing the error! Your serial console is streaming and your red LED is blinking again.

The serial console will display any output generated by your code. Some sensors, such as a humidity sensor or a thermistor, receive data and you can use print statements to display that information. You can also use print statements for troubleshooting, which is called "print debugging". Essentially, if your code isn't working, and you want to know where it's failing, you can put print statements in various places to see where it stops printing.

The serial console has many uses, and is an amazing tool overall for learning and programming!

The REPL


The other feature of the serial connection is the **Read-Evaluate-Print-Loop**, or REPL. The REPL allows you to enter individual lines of code and have them run immediately. It's really handy if you're running into trouble with a particular program and can't figure out why. It's interactive so it's great for testing new ideas.

Entering the REPL

To use the REPL, you first need to be connected to the serial console. Once that connection has been established, you'll want to press **CTRL+C**.

If there is code running, in this case code measuring distance, it will stop and you'll see Press any key to enter the REPL. Use CTRL-D to reload. Follow those instructions, and press any key on your keyboard.

The Traceback (most recent call last): is telling you the last thing your board was doing before you pressed Ctrl + C and interrupted it. The KeyboardInterrupt is you pressing CTRL+C. This information can be handy when troubleshooting, but for now, don't worry about it. Just note that it is expected behavior.

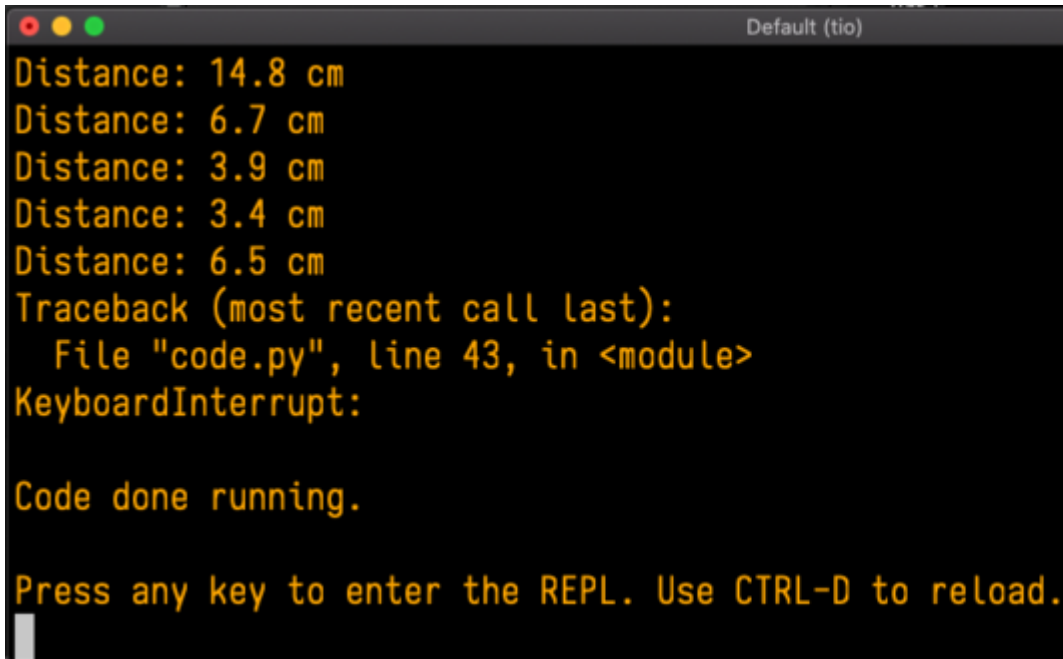
A screenshot of a terminal window titled "Default (tio)". The output shows five distance measurements: "Distance: 14.8 cm", "Distance: 6.7 cm", "Distance: 3.9 cm", "Distance: 3.4 cm", and "Distance: 6.5 cm". This is followed by a "Traceback (most recent call last):" section indicating a "File \"code.py\", line 43, in <module> KeyboardInterrupt:". Below the traceback, it says "Code done running." and "Press any key to enter the REPL. Use CTRL-D to reload." with a cursor on the next line.

```
Distance: 14.8 cm
Distance: 6.7 cm
Distance: 3.9 cm
Distance: 3.4 cm
Distance: 6.5 cm
Traceback (most recent call last):
  File "code.py", line 43, in <module>
KeyboardInterrupt:

Code done running.

Press any key to enter the REPL. Use CTRL-D to reload.
█
```


If your **code.py** file is empty or does not contain a loop, it will show an empty output and Code done running.. There is no information about what your board was doing before you interrupted it because there is no code running.

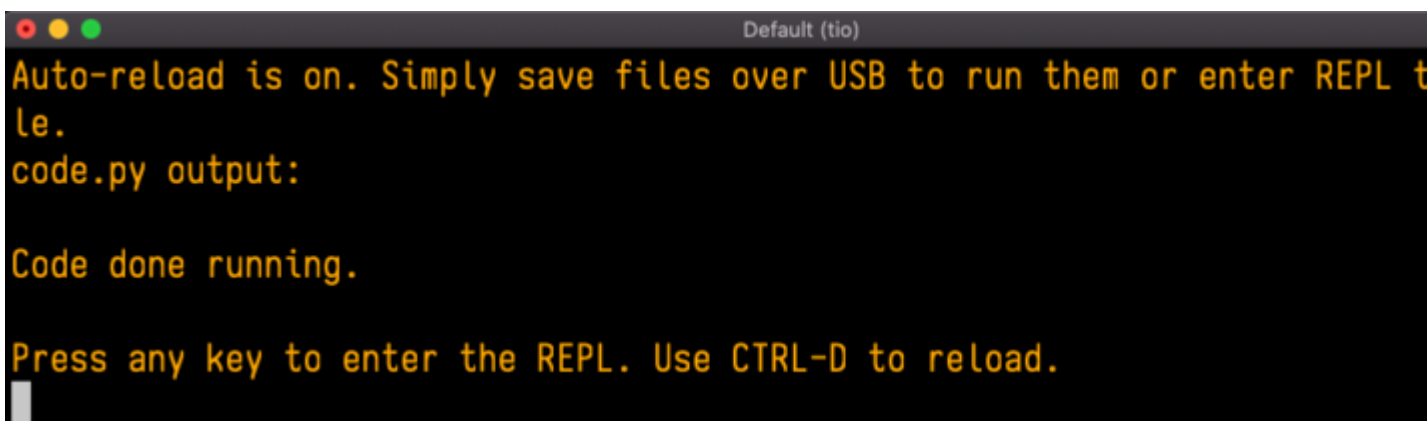A screenshot of a terminal window titled "Default (tio)". The output shows "Auto-reload is on. Simply save files over USB to run them or enter REPL to reload." followed by "code.py output:" and "Code done running.". It ends with "Press any key to enter the REPL. Use CTRL-D to reload." and a cursor on the next line.

```
Auto-reload is on. Simply save files over USB to run them or enter REPL to reload.
code.py output:
Code done running.

Press any key to enter the REPL. Use CTRL-D to reload.
█
```

If you have no **code.py** on your **CIRCUITPY** drive, you will enter the REPL immediately after pressing CTRL+C. Again, there is no information about what your board was doing before you interrupted it because there is no code running.

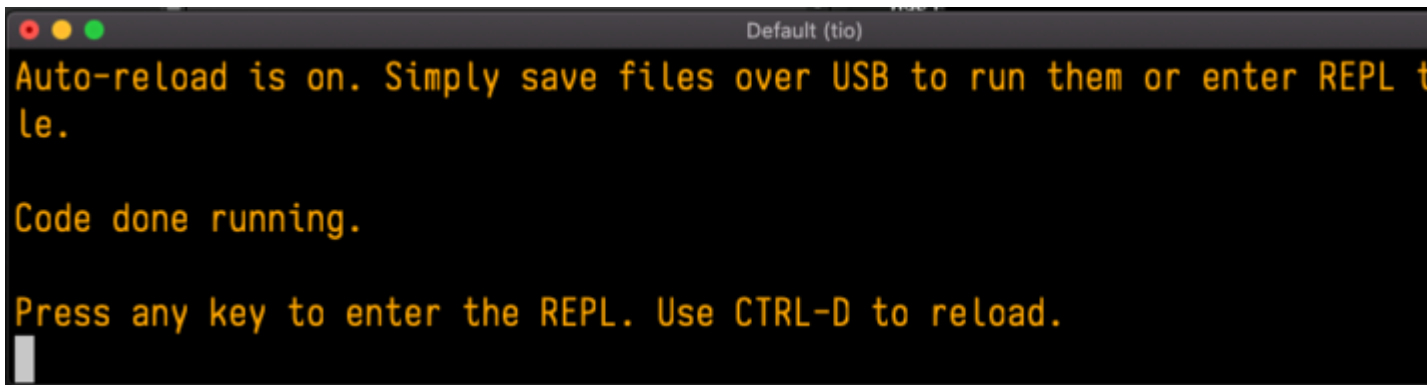A terminal window titled "Default (tio)" with a dark background and orange text. It displays three lines of text: "Auto-reload is on. Simply save files over USB to run them or enter REPL to reload.", "Code done running.", and "Press any key to enter the REPL. Use CTRL-D to reload." A white cursor is visible at the end of the third line.


```
Auto-reload is on. Simply save files over USB to run them or enter REPL to reload.

Code done running.

Press any key to enter the REPL. Use CTRL-D to reload.

```

Regardless, once you press a key you'll see a `>>>` prompt welcoming you to the REPL!

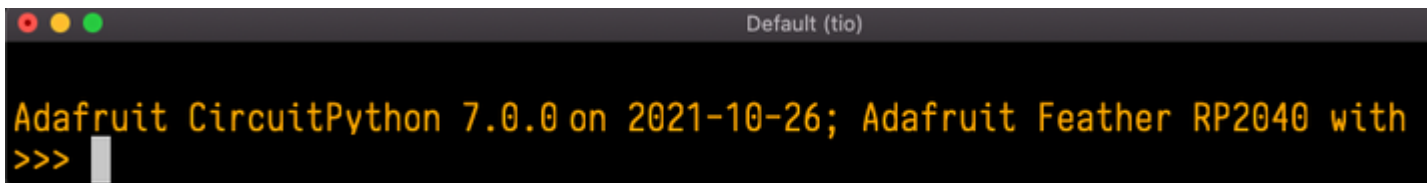
A terminal window titled "Default (tio)" with a dark background and orange text. It displays a single line of text: "Adafruit CircuitPython 7.0.0 on 2021-10-26; Adafruit Feather RP2040 with >>>". A white cursor is visible at the end of the line.

```
Adafruit CircuitPython 7.0.0 on 2021-10-26; Adafruit Feather RP2040 with >>>

```

If you have trouble getting to the `>>>` prompt, try pressing `Ctrl + C` a few more times.

The first thing you get from the REPL is information about your board.

A terminal window titled "Default (tio)" with a dark background and orange text. It displays a single line of text: "Adafruit CircuitPython 7.0.0 on 2021-10-26; Adafruit Feather RP2040 with".

```
Adafruit CircuitPython 7.0.0 on 2021-10-26; Adafruit Feather RP2040 with

```

This line tells you the version of CircuitPython you're using and when it was released. Next, it gives you the type of board you're using and the type of microcontroller the board uses. Each part of this may be different for your board depending on the versions you're working with.

This is followed by the CircuitPython prompt.

A terminal window titled "Default (tio)" with a dark background and orange text. It displays a single line of text: ">>>".


```
>>>

```

Interacting with the REPL

From this prompt you can run all sorts of commands and code. The first thing you'll do is run `help()`. This will tell you where to start exploring the REPL. To run code in the REPL, type it in next to the REPL prompt.

Type `help()` next to the prompt in the REPL.

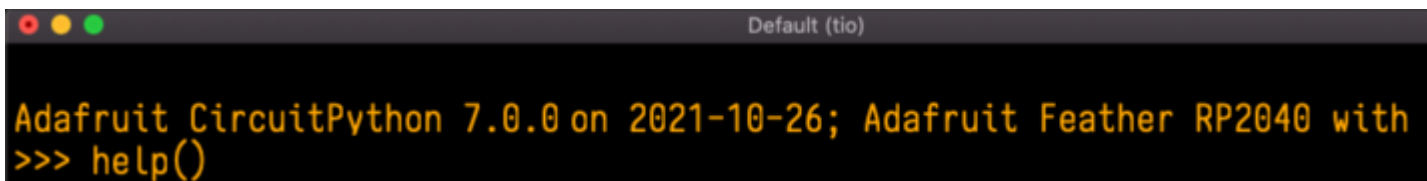A terminal window titled "Default (tio)" with a dark background and orange text. It displays a single line of text: "Adafruit CircuitPython 7.0.0 on 2021-10-26; Adafruit Feather RP2040 with >>> help()". A white cursor is visible at the end of the line.

```
Adafruit CircuitPython 7.0.0 on 2021-10-26; Adafruit Feather RP2040 with >>> help()

```

Then press enter. You should then see a message.

```

Default (tio)

Adafruit CircuitPython 7.0.0 on 2021-10-26; Adafruit Feather RP2040 with
>>> help()
Welcome to Adafruit CircuitPython 7.0.0!

Visit circuitpython.org for more information.

To list built-in modules type `help("modules")`.
>>>

```

First part of the message is another reference to the version of CircuitPython you're using. Second, a URL for the CircuitPython related project guides. Then... wait. What's this? To list built-in modules type ``help("modules")``. Remember the modules you learned about while going through creating code? That's exactly what this is talking about! This is a perfect place to start. Let's take a look!

Type `help("modules")` into the REPL next to the prompt, and press enter.

```

>>> help("modules")
__main__          board          micropython      storage
_bleio            builtins        msgpack          struct
adafruit_bus_device busio          neopixel_write  supervisor
adafruit_pixelbuf collections    onewireio       synthio
aesio             countio        os              sys
alarm            digitalio     paralleldisplay terminalio
analogio          displayio     pulseio         time
array            errno         pwmio           touchio
atexit           fontio        qrio            traceback
audiobusio       framebufferio rainbowio        ulab
audiocore        gc            random          usb_cdc
audiomixer       getpass       re              usb_hid
audiomp3         imagecapture  rgbmatrix       usb_midi
audiopwmio       io            rotaryio        vectorio
binascii         json          rp2pio          watchdog
bitbangio        keypad        rtc
bitmaptools      math          sdcardio
bitops           microcontroller sharpdisplay
Plus any modules on the filesystem
>>>

```

This is a list of all the core modules built into CircuitPython, including `board`. Remember, `board` contains all of the pins on the board that you can use in your code. From the REPL, you are able to see that list!

Type `import board` into the REPL and press enter. It'll go to a new prompt. It might look like nothing happened, but that's not the case! If you recall, the `import` statement simply tells the code to expect to do something with that module. In this case, it's telling the REPL that you plan to do something with that module.

```
>>> import board
>>>
```

Next, type `dir(board)` into the REPL and press enter.

```
>>> dir(board)
['__class__', '__name__', 'A0', 'A1', 'A2', 'A3', 'D0', 'D1', 'D10', 'D11', 'D12', 'D24', 'D25', 'D4', 'D5', 'D6', 'D9', 'I2C', 'LED', 'MISO', 'MOSI', 'NEOPIXEL', 'SCL', 'SDA', 'SPI', 'TX', 'UART', 'board_id']
>>>
```

This is a list of all of the pins on your board that are available for you to use in your code. Each board's list will differ slightly depending on the number of pins available. Do you see `LED`? That's the pin you used to blink the red LED!

The REPL can also be used to run code. Be aware that **any code you enter into the REPL isn't saved** anywhere. If you're testing something new that you'd like to keep, make sure you have it saved somewhere on your computer as well!

Every programmer in every programming language starts with a piece of code that says, "Hello, World." You're going to say hello to something else. Type into the REPL:

```
print("Hello, CircuitPython!")
```

Then press enter.

```
>>> print("Hello, CircuitPython")
Hello, CircuitPython
>>>
```

That's all there is to running code in the REPL! Nice job!

You can write single lines of code that run stand-alone. You can also write entire programs into the REPL to test them. Remember that nothing typed into the REPL is saved.

There's a lot the REPL can do for you. It's great for testing new ideas if you want to see if a few new lines of code will work. It's fantastic for troubleshooting code by entering it one line at a time and finding out where it fails. It lets you see what modules are available and explore those modules.


Try typing more into the REPL to see what happens!

Everything typed into the REPL is ephemeral. Once you reload the REPL or return to the serial console, nothing you typed will be retained in any memory space. So be sure to save any desired code you wrote somewhere else, or you'll lose it when you leave the current REPL instance!

Returning to the Serial Console

When you're ready to leave the REPL and return to the serial console, simply press **CTRL+D**. This will reload your board and reenter the serial console. You will restart the program you had running before entering the REPL. In the console window, you'll see any output from the program you had running. And if your program was affecting anything visual on the board, you'll see that start up again as well.

You can return to the REPL at any time!

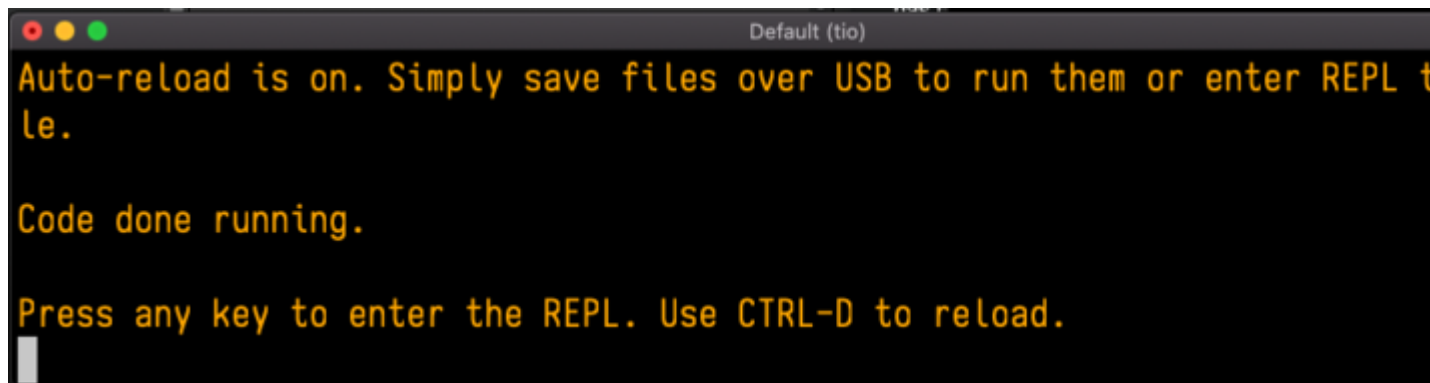A screenshot of a terminal window titled "Default (tio)". The text inside the terminal is yellow on a black background. It reads: "Auto-reload is on. Simply save files over USB to run them or enter REPL t le.", "Code done running.", and "Press any key to enter the REPL. Use CTRL-D to reload." There is a white cursor at the end of the last line.

```
Default (tio)
Auto-reload is on. Simply save files over USB to run them or enter REPL t
le.
Code done running.
Press any key to enter the REPL. Use CTRL-D to reload.
```

CircuitPython Libraries

As CircuitPython development continues and there are new releases, Adafruit will stop supporting older releases. Visit <https://circuitpython.org/downloads> to download the latest version of CircuitPython for your board. You must download the CircuitPython Library Bundle that matches your version of CircuitPython. Please update CircuitPython and then visit <https://circuitpython.org/libraries> to download the latest Library Bundle.

Each CircuitPython program you run needs to have a lot of information to work. The reason CircuitPython is so simple to use is that most of that information is stored in other files and works in the background. These files are called libraries. Some of them are built into CircuitPython. Others are stored on your **CIRCUITPY** drive in a folder called **lib**. Part of what makes CircuitPython so great is its ability to store code separately from the firmware itself. Storing code separately from the firmware makes it easier to update both the code you write and the libraries you depend.

Your board may ship with a **lib** folder already, it's in the base directory of the drive. If not, simply create the folder yourself. When you first install CircuitPython, an empty **lib** directory will be created for you.



CircuitPython libraries work in the same way as regular Python modules so the [Python docs](https://adafru.it/rar) (<https://adafru.it/rar>) are an excellent reference for how it all should work. In Python terms, you can place our library files in the **lib** directory because it's part of the Python path by default.

One downside of this approach of separate libraries is that they are not built in. To use them, one needs to copy them to the **CIRCUITPY** drive before they can be used. Fortunately, there is a library bundle.

The bundle and the library releases on GitHub also feature optimized versions of the libraries with the **.mpy** file extension. These files take less space on the drive and have a smaller memory footprint as they are loaded.

Due to the regular updates and space constraints, Adafruit does not ship boards with the entire bundle. Therefore, you will need to load the libraries you need when you begin working with your board. You can find example code in the guides for your board that depends on external libraries.

Either way, as you start to explore CircuitPython, you'll want to know how to get libraries on board.

The Adafruit Learn Guide Project Bundle

The quickest and easiest way to get going with a project from the Adafruit Learn System is by utilising the Project Bundle. Most guides now have a **Download Project Bundle** button available at the top of the full code example embed. This button downloads all the necessary files, including images, etc., to get the guide project up and running. Simply click, open the resulting zip, copy over the right files, and you're good to go!

The first step is to find the Download Project Bundle button in the guide you're working on.

The Download Project Bundle button is only available on full demo code embedded from GitHub in a Learn guide. Code snippets will NOT have the button available.

[Home](#) > [Circuit Playground Express: Piano in the Key of Lime](#) > Piano in the Key of Lime



Piano in the Key of Lime

EN

Save

Now we'll take everything we learned and put it together!

Be sure to save your current code.py if you've changed anything you want to keep. Download the following file. Rename it to code.py and save it to your Circuit Playground Express.

Circuit Playground Express: Piano in the Key of Lime

By [Kattni Rembor](#)

Create a full scale tone piano using CircuitPython, capacitive touch and some cute little fruits.

Download Project Bundle


```
# SPDX-FileCopyrightText: 2017 Kattni Rembor for Adafruit Industries
#
# SPDX-License-Identifier: MIT

from adafruit_circuitplayground import cp

while True:
    if cp.switch:
        print("Slide switch off!")
        cp.pixels.fill((0, 0, 0))
```

When you copy the contents of the Project Bundle to your CIRCUITPY drive, it will replace all the existing content! If you don't want to lose anything, ensure you copy your current code to your computer before you copy over the new Project Bundle content!

The Download Project Bundle button downloads a zip file. This zip contains a series of directories, nested within which is the **code.py**, any applicable assets like images or audio, and the **lib/** folder containing all the necessary libraries. The following zip was downloaded from the Piano in the Key of Lime guide.

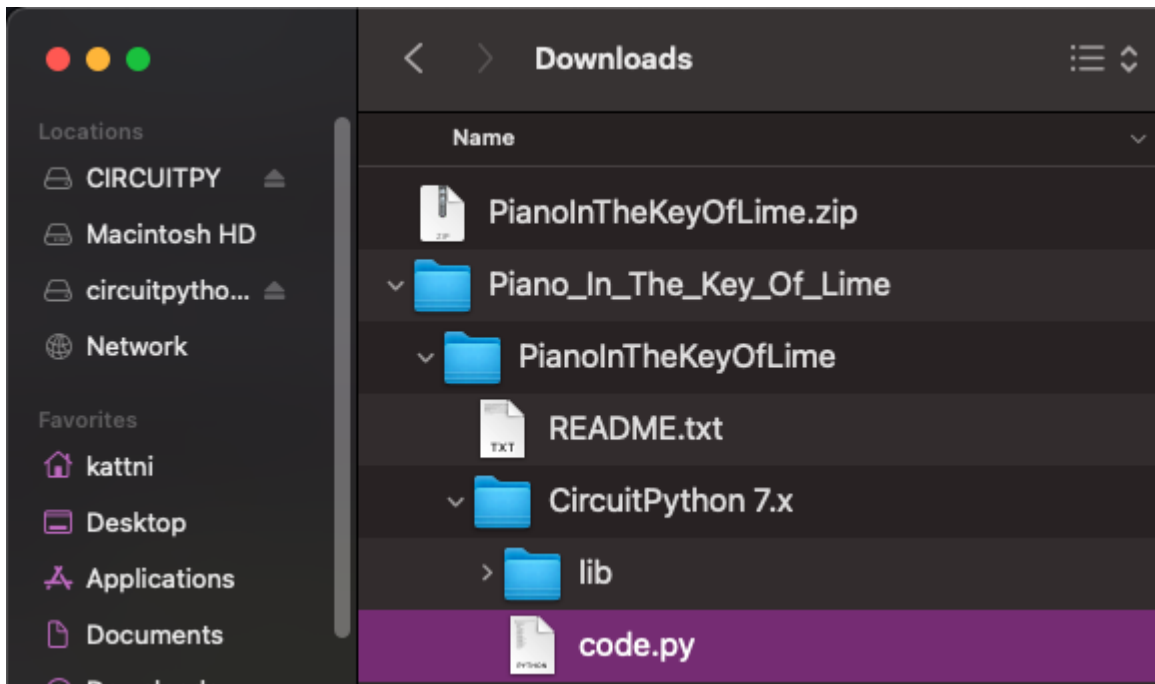

The Piano in the Key of Lime guide was chosen as an example. That guide is specific to Circuit Playground Express, and cannot be used on all boards. Do not expect to download that exact bundle and have it work on your non-CPX microcontroller.

When you open the zip, you'll find some nested directories. Navigate through them until you find what you need. You'll eventually find a directory for your CircuitPython version (in this case, 7.x). In the version directory, you'll find the file and directory you need: **code.py** and **lib/**. Once you find the content you need, you can copy it all over to your **CIRCUITPY** drive, replacing any files already on the drive with the files from the freshly downloaded zip.

In some cases, there will be other files such as audio or images in the same directory as **code.py** and **lib/**. Make sure you include all the files when you copy things over!

Once you copy over all the relevant files, the project should begin running! If you find that the project is not running as expected, make sure you've copied ALL of the project files onto your microcontroller board.

That's all there is to using the Project Bundle!

The Adafruit CircuitPython Library Bundle

Adafruit provides CircuitPython libraries for much of the hardware they provide, including sensors, breakouts and more. To eliminate the need for searching for each library individually, the libraries are available together in the Adafruit CircuitPython Library Bundle. The bundle contains all the files needed to use each library.

Downloading the Adafruit CircuitPython Library Bundle

You can download the latest Adafruit CircuitPython Library Bundle release by clicking the button below. The libraries are being constantly updated and improved, so you'll always want to download the latest bundle.

Match up the bundle version with the version of CircuitPython you are running. For example, you would download the 6.x library bundle if you're running any version of CircuitPython 6, or the 7.x library bundle if you're running any version of CircuitPython 7, etc. If you mix libraries with major CircuitPython versions, you will get incompatible mpy errors due to changes in library interfaces possible during major version changes.

[Click to visit `circuitpython.org` for the latest Adafruit CircuitPython Library Bundle](https://adafru.it/ENC)

`https://adafru.it/ENC`

Download the bundle version that matches your CircuitPython firmware version. If you don't know the version, check the version info in `boot_out.txt` file on the **CIRCUITPY** drive, or the initial prompt in the CircuitPython REPL. For example, if you're running v7.0.0, download the 7.x library bundle.

There's also a **py** bundle which contains the uncompressed python files, you probably don't want that unless you are doing advanced work on libraries.

The CircuitPython Community Library Bundle

The CircuitPython Community Library Bundle is made up of libraries written and provided by members of the CircuitPython community. These libraries are often written when community members encountered hardware not supported in the Adafruit Bundle, or to support a personal project. The authors all chose to submit these libraries to the Community Bundle make them available to the community.

These libraries are maintained by their authors and are not supported by Adafruit. As you would with any library, if you run into problems, feel free to file an issue on the GitHub repo for the library. Bear in mind, though, that most of these libraries are supported by a single person and you should be patient about receiving a response. Remember, these folks are not paid by Adafruit, and are volunteering their personal time when possible to provide support.

Downloading the CircuitPython Community Library Bundle


You can download the latest CircuitPython Community Library Bundle release by clicking the button below. The libraries are being constantly updated and improved, so you'll always want to download the latest bundle.

[Click for the latest CircuitPython Community Library Bundle release](https://adafru.it/VCn)
<https://adafru.it/VCn>


The link takes you to the latest release of the CircuitPython Community Library Bundle on GitHub. There are multiple versions of the bundle available. **Download the bundle version that matches your CircuitPython firmware version.** If you don't know the version, check the version info in **boot_out.txt** file on the **CIRCUITPY** drive, or the initial prompt in the CircuitPython REPL. For example, if you're running v7.0.0, download the 7.x library bundle.

Understanding the Bundle


After downloading the zip, extract its contents. This is usually done by double clicking on the zip. On Mac OSX, it places the file in the same directory as the zip.

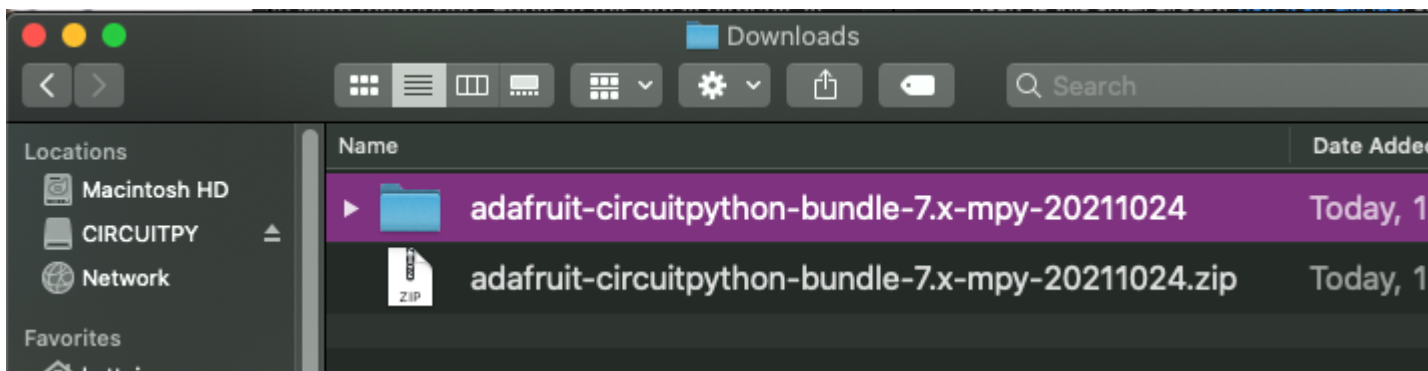

Open the bundle folder. Inside you'll find two information files, and two folders. One folder is the lib bundle, and the other folder is the examples bundle.

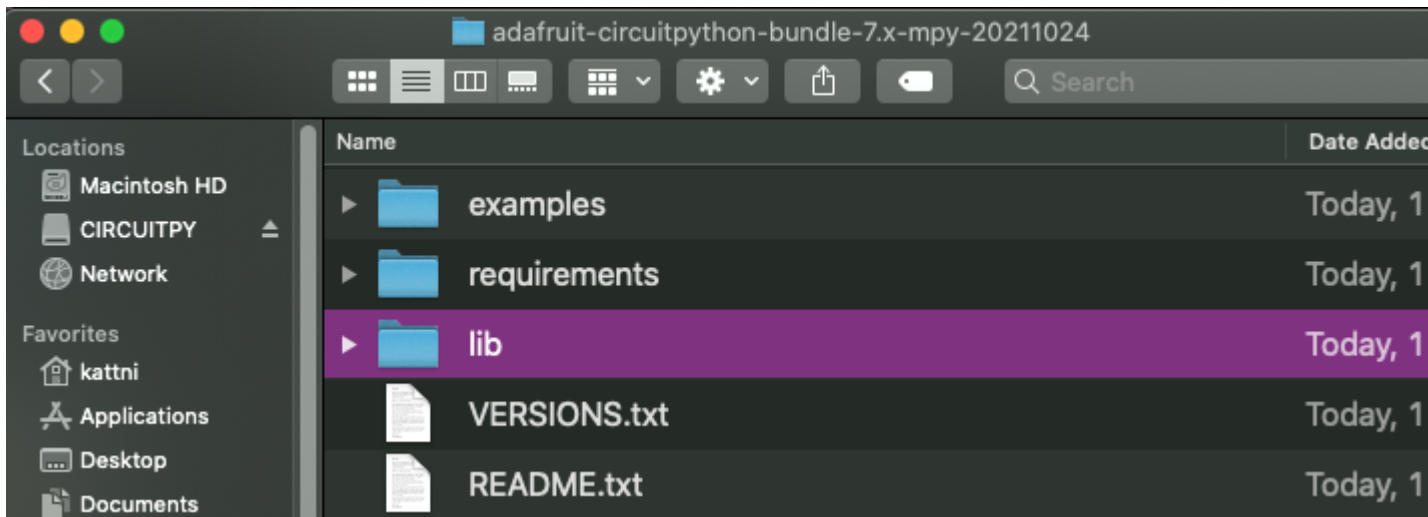


Now open the lib folder. When you open the folder, you'll see a large number of **.mpy** files, and folders.

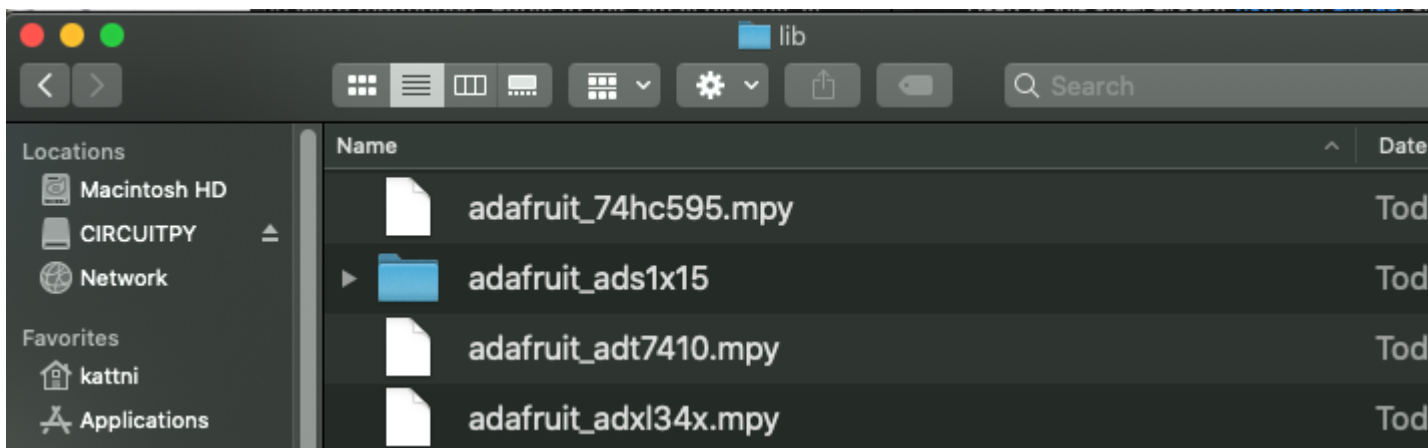

Example Files

All example files from each library are now included in the bundles in an **examples** directory (as seen above), as well as an examples-only bundle. These are included for two main reasons:

- Allow for quick testing of devices.
- Provide an example base of code, that is easily built upon for individualized purposes.

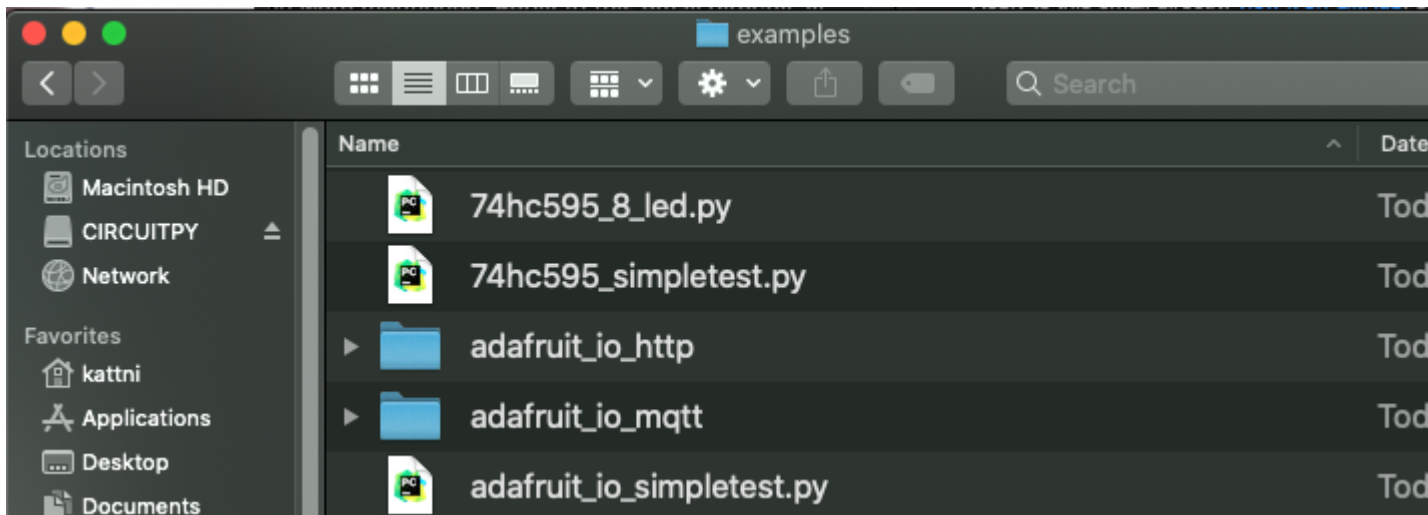

Copying Libraries to Your Board

First open the **lib** folder on your **CIRCUITPY** drive. Then, open the **lib** folder you extracted from the downloaded zip. Inside you'll find a number of folders and **.mpy** files. Find the library you'd like to use, and copy it to the **lib** folder on **CIRCUITPY**.

If the library is a directory with multiple **.mpy** files in it, be sure to **copy the entire folder to CIRCUITPY/lib**.

This also applies to example files. Open the **examples** folder you extracted from the downloaded zip, and copy the applicable file to your **CIRCUITPY** drive. Then, rename it to **code.py** to run it.

If a library has multiple **.mpy** files contained in a folder, be sure to copy the entire folder to **CIRCUITPY/lib**.

Understanding Which Libraries to Install

You now know how to load libraries on to your CircuitPython-compatible microcontroller board. You may now be wondering, how do you know which libraries you need to install? Unfortunately, it's not always straightforward. Fortunately, there is an obvious place to start, and a relatively simple way to figure out the rest. First up: the best place to start.

When you look at most CircuitPython examples, you'll see they begin with one or more import statements. These typically look like the following:

- `import library_or_module`

However, import statements can also sometimes look like the following:

- `from library_or_module import name`
- `from library_or_module.subpackage import name`

- `from library_or_module import name as local_name`

They can also have more complicated formats, such as including a `try / except` block, etc.

The important thing to know is that **an import statement will always include the name of the module or library that you're importing.**

Therefore, the best place to start is by reading through the import statements.

Here is an example import list for you to work with in this section. There is no setup or other code shown here, as the purpose of this section involves only the import list.

```
import time
import board
import neopixel
import adafruit_lis3dh
import usb_hid
from adafruit_hid.consumer_control import ConsumerControl
from adafruit_hid.consumer_control_code import ConsumerControlCode
```

Keep in mind, not all imported items are libraries. Some of them are almost always built-in CircuitPython modules. How do you know the difference? Time to visit the REPL.

In the [Interacting with the REPL section](https://adafru.it/Awz) (<https://adafru.it/Awz>) on [The REPL page](https://adafru.it/Awz) (<https://adafru.it/Awz>) in this guide, the `help("modules")` command is discussed. This command provides a list of all of the built-in modules available in CircuitPython for your board. So, if you connect to the serial console on your board, and enter the REPL, you can run `help("modules")` to see what modules are available for your board. Then, as you read through the import statements, you can, for the purposes of figuring out which libraries to load, ignore the statement that import modules.

The following is the list of modules built into CircuitPython for the Feather RP2040. Your list may look similar or be anything down to a significant subset of this list for smaller boards.

```
>>> help("modules")
__main__      board      micropython   storage
_bleio        builtins    msgpack       struct
adafruit_bus_device collections busio         neopixel_write  supervis
adafruit_pixelbuf onewireio   synthio
aesio         countio    os            sys
alarm         digitalio  paralleldisplay terminalio
analogio      displayio  pulseio      time
array         errno      pwmio        touchio
atexit        fontio     qrio         traceback
audiobusio    framebufferio rainbowio     ulab
audiocore     gc         random       usb_cdc
audiomixer    getpass    re           usb_hid
audiomp3      imagecapture rgbmatrix    usb_midi
audiopwmio    io         rotaryio     vectorio
binascii      json       rp2pio       watchdog
bitbangio     keypad     rtc
bitmaptools   math       sdcardio
bitops        microcontroller sharpdisplay
```

Now that you know what you're looking for, it's time to read through the import statements. The first two, `time` and `board`, are on the modules list above, so they're built-in.

The next one, `neopixel`, is not on the module list. That means it's your first library! So, you would head over to the bundle zip you downloaded, and search for **neopixel**. There is a **neopixel.mpy** file in the bundle zip. Copy it over to the **lib** folder on your **CIRCUITPY** drive. The following one, `adafruit_lis3dh`, is also not on the module list. Follow the same process for **adafruit_lis3dh**, where you'll find **adafruit_lis3dh.mpy**, and copy that over.

The fifth one is `usb_hid`, and it is in the modules list, so it is built in. Often all of the built-in modules come first in the import list, but sometimes they don't! Don't assume that everything after the first library is also a library, and verify each import with the modules list to be sure. Otherwise, you'll search the bundle and come up empty!

The final two imports are not as clear. Remember, when import statements are formatted like this, the first thing after the `from` is the library name. In this case, the library name is `adafruit_hid`. A search of the bundle will find an **adafruit_hid folder**. When a library is a folder, you must copy the **entire folder and its contents as it is in the bundle** to the **lib** folder on your **CIRCUITPY** drive. In this case, you would copy the entire **adafruit_hid** folder to your **CIRCUITPY/lib** folder.

Notice that there are two imports that begin with `adafruit_hid`. Sometimes you will need to import more than one thing from the same library.

Regardless of how many times you import the same library, you only need to load the library by copying over the **adafruit_hid** folder once.

That is how you can use your example code to figure out what libraries to load on your CircuitPython-compatible board!

There are cases, however, where libraries require other libraries internally. The internally required library is called a dependency. In the event of library dependencies, the easiest way to figure out what other libraries are required is to connect to the serial console and follow along with the `ImportError` printed there. The following is a very simple example of an `ImportError`, but the concept is the same for any missing library.

Example: ImportError Due to Missing Library

If you choose to load libraries as you need them, or you're starting fresh with an existing example, you may end up with code that tries to use a library you haven't yet loaded. This section will demonstrate what happens when you try to utilise a library that you don't have loaded on your board, and cover the steps required to resolve the issue.

This demonstration will only return an error if you do not have the required library loaded into the **lib** folder on your **CIRCUITPY** drive.


Let's use a modified version of the Blink example.

```
import board
import time
import simpleio

led = simpleio.DigitalOut(board.LED)

while True:
    led.value = True
    time.sleep(0.5)
    led.value = False
    time.sleep(0.5)
```

Save this file. Nothing happens to your board. Let's check the serial console to see what's going on.

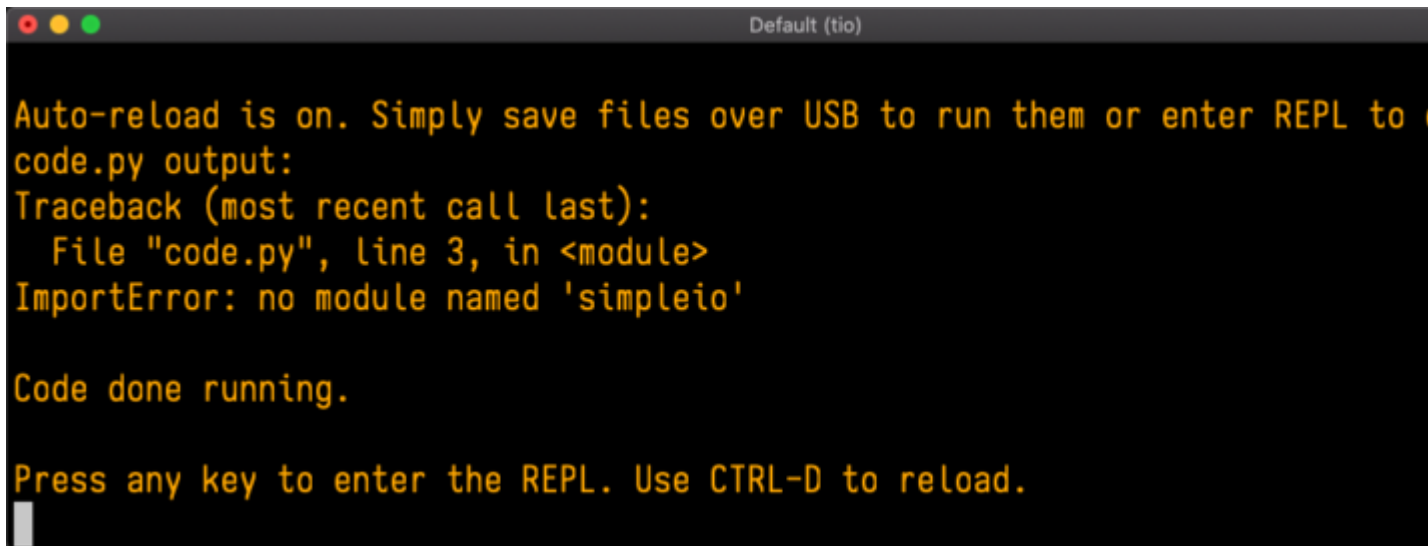

```
Auto-reload is on. Simply save files over USB to run them or enter REPL to
code.py output:
Traceback (most recent call last):
  File "code.py", line 3, in <module>
ImportError: no module named 'simpleio'


Code done running.

Press any key to enter the REPL. Use CTRL-D to reload.
```

You have an ImportError. It says there is no module named 'simpleio'. That's the one you just included in your code!

Click the link above to download the correct bundle. Extract the lib folder from the downloaded bundle file. Scroll down to find **simpleio.mpy**. This is the library file you're looking for! Follow the steps above to load an individual library file.

The LED starts blinking again! Let's check the serial console.

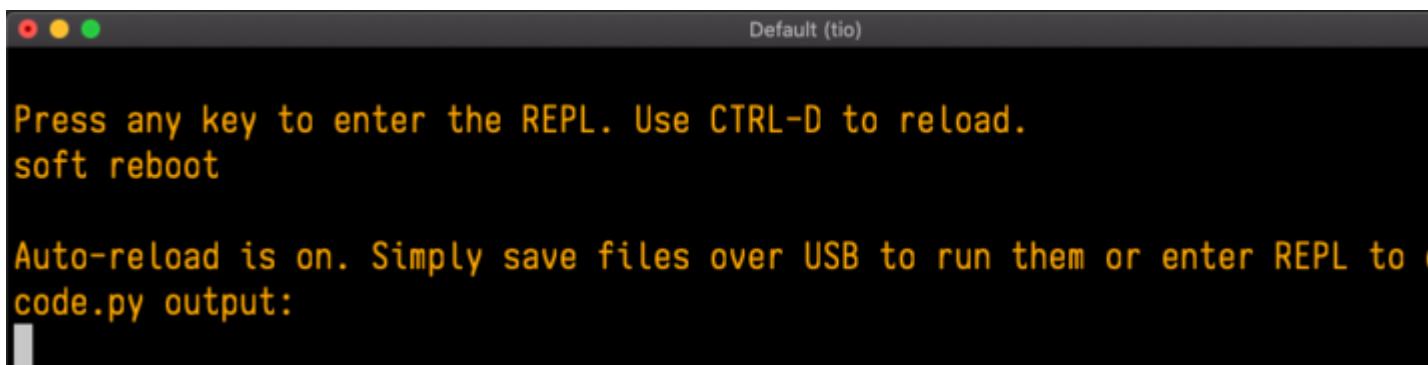

```
Press any key to enter the REPL. Use CTRL-D to reload.
soft reboot

Auto-reload is on. Simply save files over USB to run them or enter REPL to
code.py output:
```

No errors! Excellent. You've successfully resolved an ImportError!

If you run into this error in the future, follow along with the steps above and choose the library that matches the one you're missing.

Library Install on Non-Express Boards

If you have an M0 non-Express board such as Trinket M0, Gemma M0, QT Py M0, or one of the M0 Trinkeys, you'll want to follow the same steps in the example above to install libraries as you need them. Remember, you don't need to wait for an ImportError if you know what library you added to your code. Open the library bundle you downloaded, find the library you need, and drag it to the **lib** folder on your **CIRCUITPY** drive.

You can still end up running out of space on your M0 non-Express board even if you only load libraries as you need them. There are a number of steps you can use to try to resolve this issue. You'll find suggestions on the [Troubleshooting page](https://adafru.it/Den) (<https://adafru.it/Den>).

Updating CircuitPython Libraries and Examples

Libraries and examples are updated from time to time, and it's important to update the files you have on your **CIRCUITPY** drive.

To update a single library or example, follow the same steps above. When you drag the library file to your lib folder, it will ask if you want to replace it. Say yes. That's it!

A new library bundle is released every time there's an update to a library. Updates include things like bug fixes and new features. It's important to check in every so often to see if the libraries you're using have been updated.

CircUp CLI Tool

There is a command line interface (CLI) utility called [CircUp](https://adafru.it/Tfi) (<https://adafru.it/Tfi>) that can be used to easily install and update libraries on your device. Follow the directions on the [install page within the CircUp learn guide](https://adafru.it/-Ad) (<https://adafru.it/-Ad>). Once you've got it installed you run the command `circup update` in a terminal to interactively update all libraries on the connected CircuitPython device. See the [usage page in the CircUp guide](https://adafru.it/-Ah) (<https://adafru.it/-Ah>) for a full list of functionality


CircuitPython Documentation

You've learned about the CircuitPython built-in modules and external libraries. You know that you can find the modules in CircuitPython, and the libraries in the Library Bundles. There are guides available that explain the basics of many of the modules and libraries. However, there's sometimes more capabilities than are necessarily showcased in the guides, and often more to learn about a module or library. So, where can you find more detailed information? That's when you want to look at the API documentation.

The entire CircuitPython project comes with extensive documentation available on Read the Docs. This includes both the [CircuitPython core](https://adafru.it/Beg) (<https://adafru.it/Beg>) and the [Adafruit CircuitPython libraries](https://adafru.it/Tra) (<https://adafru.it/Tra>).

CircuitPython Core Documentation

The [CircuitPython core documentation](https://adafru.it/Beg) (https://adafru.it/Beg) covers many of the details you might want to know about the CircuitPython core and related topics. It includes API and usage info, a design guide and information about porting CircuitPython to new boards, MicroPython info with relation to CircuitPython, and general information about the project.

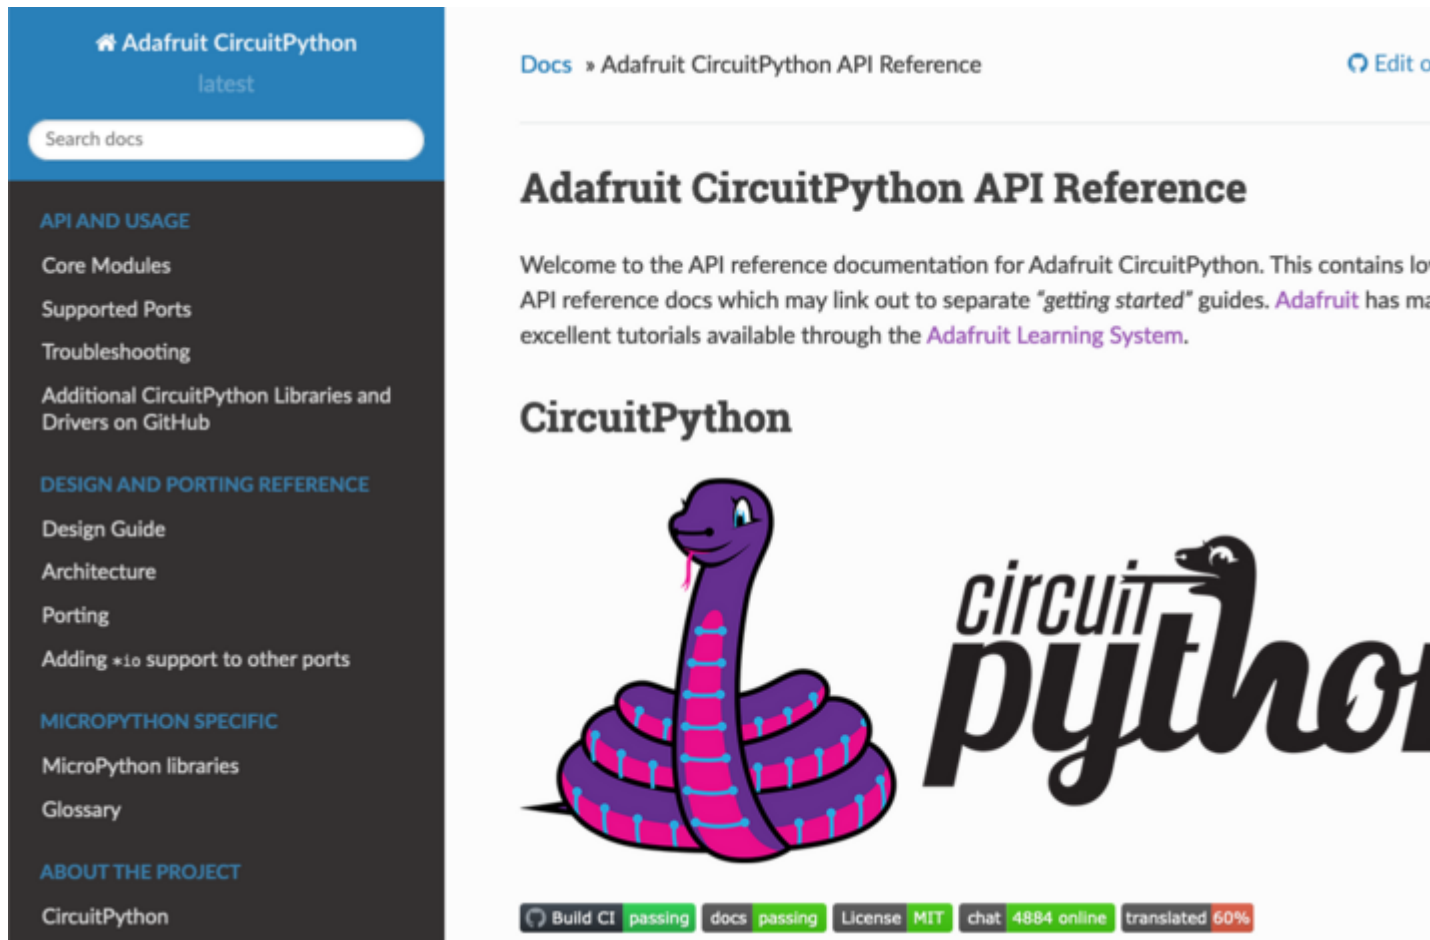

The main page covers the basics including where to **download CircuitPython**, how to **contribute**, **differences from MicroPython**, information about the **project structure**, and a **full table of contents** for the rest of the documentation.

The list along the left side leads to more information about specific topics.

The first section is **API and Usage**. This is where you can find information about how to use individual built-in **core modules**, such as time and digitalio, details about the **supported ports**, suggestions for **troubleshooting**, and basic info and links to the **library bundles**. The **Core Modules** section also includes the **Support Matrix**, which is a table of which core modules are available on which boards.

The second section is **Design and Porting Reference**. It includes a **design guide**, **architecture** information, details on **porting**, and **adding module support** to other ports.

The third section is **MicroPython Specific**. It includes information on **MicroPython and related libraries**, and a **glossary** of terms.


The fourth and final section is **About the Project**. It includes further information including details on **building, testing, and debugging CircuitPython**, along with various other useful links including the **Adafruit Community Code of Conduct**.

Whether you're a seasoned pro or new to electronics and programming, you'll find a wealth of information to help you along your CircuitPython journey in the documentation!


CircuitPython Library Documentation

The Adafruit CircuitPython libraries are documented in a very similar fashion. Each library has its own page on Read the Docs. There is a comprehensive list available [here](https://adafru.it/Tra) (<https://adafru.it/Tra>). Otherwise, to view the documentation for a specific library, you can visit the GitHub repository for the library, and find the link in the README.

For the purposes of this page, the [LED Animation library](https://adafru.it/O2d) (<https://adafru.it/O2d>) documentation will be featured. There are two links to the documentation in each library GitHub repo. The first one is the **docs badge** near the top of the README.

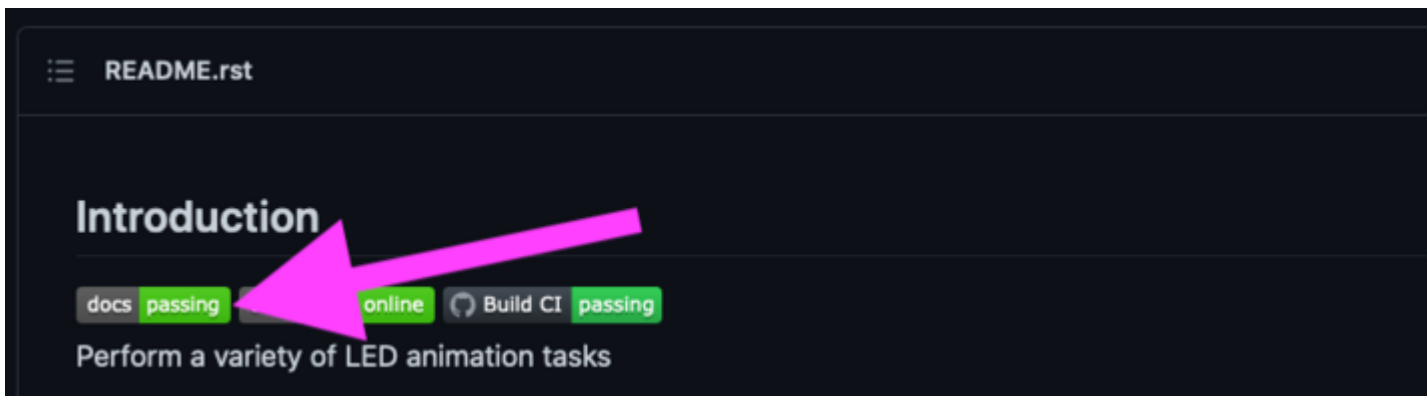


The second place is the **Documentation section** of the README. Scroll down to find it, and click on Read the Docs to get to the documentation.

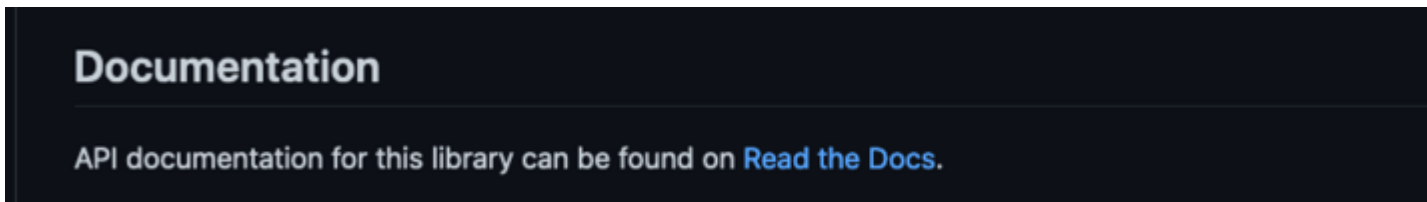

Now that you know how to find it, it's time to take a look at what to expect.

Not all library documentation will look exactly the same, but this will give you some idea of what to expect from library docs.

The **Introduction** page is generated from the README, so it includes all the same info, such as PyPI installation instructions, a quick demo, and some build details. It also includes a full table of contents for the rest of the documentation (which is not part of the GitHub README). The page should look something like the following.

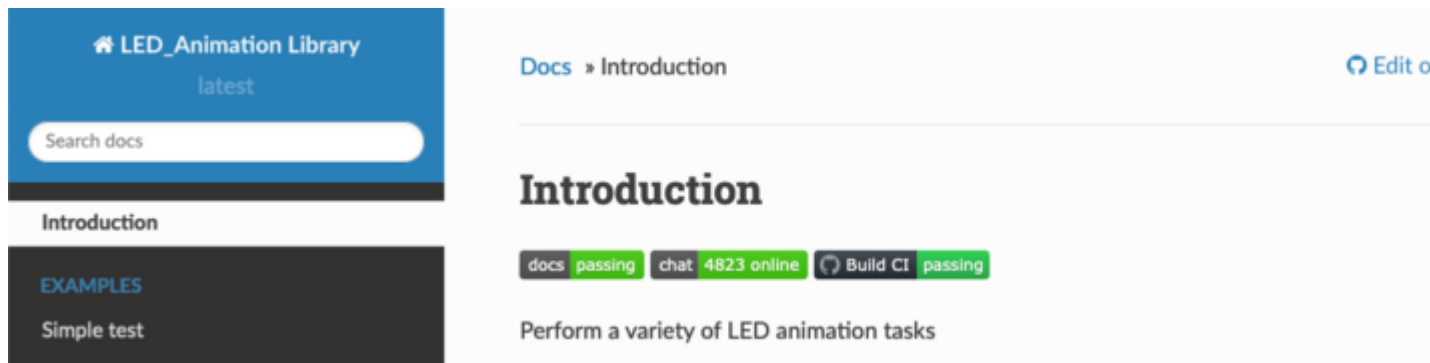

The left side contains links to the rest of the documentation, divided into three separate sections: **Examples**, **API Reference**, and **Other Links**.

Examples

The [Examples section](https://adafru.it/VFD) (<https://adafru.it/VFD>) is a list of library examples. This list contains anywhere from a small selection to the full list of the examples available for the library.

This section will always contain at least one example - the **simple test** example.



The simple test example is usually a basic example designed to show your setup is working. It may require other libraries to run. Keep in mind, it's simple - it won't showcase a comprehensive use of all the library features.

The LED Animation simple test demonstrates the Blink animation.


Simple test

Ensure your device works with this simple test.

examples/led_animation_simpletest.py

```
1 # SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
2 # SPDX-License-Identifier: MIT
3
4 """
5 This simpletest example displays the Blink animation.
6
7 For NeoPixel FeatherWing. Update pixel_pin and pixel_num to match your wiring if us
8 a different form of NeoPixels.
9 """
10 import board
11 import neopixel
12 from adafruit_led_animation.animation.blink import Blink
13 from adafruit_led_animation.color import RED
14
15 # Update to match the pin connected to your NeoPixels
16 pixel_pin = board.D6
17 # Update to match the number of NeoPixels you have connected
18 pixel_num = 32
19
20 pixels = neopixel.NeoPixel(pixel_pin, pixel_num, brightness=0.5, auto_write=False)
21
22 blink = Blink(pixels, speed=0.5, color=RED)
23
24 while True:
25     blink.animate()
```

In some cases, you'll find a longer list, that may include examples that explore other features in the library. The LED Animation documentation includes a series of examples, all of which are available in the library. These examples include demonstrations of both basic and more complex features. Simply click on the example that interests you to view the associated code.

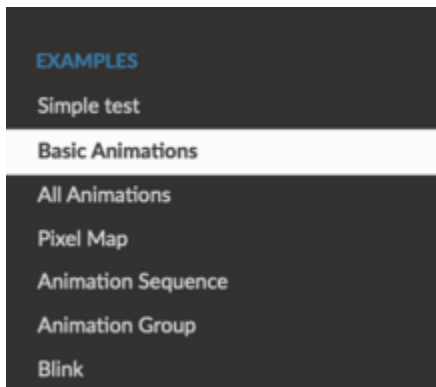

Basic Animations

Demonstrates the basic animations.

`examples/led_animation_basic_animations.py`

```
1 # SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
2 # SPDX-License-Identifier: MIT
3
4 """
5 This example displays the basic animations in sequence, at a five second interval.
6 """
```

When there are multiple links in the Examples section, all of the example content is, in actuality, on the same page. Each link after the first is an anchor link to the specified section of the page. Therefore, you can also view all the available examples by scrolling down the page.


You can view the rest of the examples by clicking through the list or scrolling down the page. These examples are fully working code. Which is to say, while they may rely on other libraries as well as the library for which you are viewing the documentation, they should not require modification to otherwise work.

API Reference

The [API Reference section](https://adafru.it/Rqa) (<https://adafru.it/Rqa>) includes a list of the library functions and classes. The API (Application Programming Interface) of a library is the set of functions and classes the library provides. Essentially, the API defines how your program interfaces with the functions and classes that you call in your code to use the library.

There is always at least one list item included. Libraries for which the code is included in a single Python (**.py**) file, will only have one item. Libraries for which the code is multiple Python files in a directory (called subpackages) will have multiple items in this list. The LED Animation library has a series of subpackages, and therefore, multiple items in this list.

Click on the first item in the list to begin viewing the API Reference section.

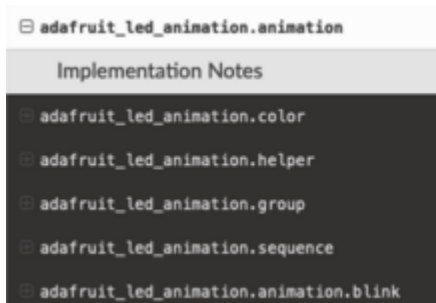

[Docs](#) » `adafruit_led_animation.animation`

[Edit on GitHub](#)

`adafruit_led_animation.animation`

Animation base class for CircuitPython helper library for LED animations.

As with the Examples section, all of the API Reference content is on a single page, and the links under API Reference are anchor links to the specified section of the page.

When you click on an item in the API Reference section, you'll find details about the classes and functions in the library. In the case of only one item in

this section, all the available functionality of the library will be contained within that first and only subsection. However, in the case of a library that has subpackages, each item will contain the features of the particular subpackage indicated by the link. The documentation will cover all of the available functions of the library, including more complex ones that may not interest you.

The first list item is the animation subpackage. If you scroll down, you'll begin to see the available features of animation. They are listed alphabetically. Each of these things can be called in your code. It includes the name and a description of the specific function you would call, and if any parameters are necessary, lists those with a description as well.

```
class adafruit_led_animation.animation.Animation(pixel_object, speed, color, peers=None, paused=False, name=None)
```

Base class for animations.

```
add_cycle_complete_receiver(callback)
```

Adds an additional callback when the cycle completes.

Parameters

callback – Additional callback to trigger when a cycle completes. The callback is called with the animation object instance.

```
after_draw()
```

Animation subclasses may implement after_draw() to do operations after the main draw() is called.

You can view the other subpackages by clicking the link on the left or scrolling down the page. You may be interested in something a little more practical. Here is an example. To use the LED Animation library Comet animation, you would run the following example.

```
# SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
# SPDX-License-Identifier: MIT
```

```
"""
```

This example animates a jade comet that bounces from end to end of the strip.

For QT Py Haxpress and a NeoPixel strip. Update pixel_pin and pixel_num to match your board using a different board or form of NeoPixels.

This example will run on SAMD21 (M0) Express boards (such as Circuit Playground Express, Haxpress), but not on SAMD21 non-Express boards (such as QT Py or Trinket).

```

"""
import board
import neopixel

from adafruit_led_animation.animation.comet import Comet
from adafruit_led_animation.color import JADE

# Update to match the pin connected to your NeoPixels
pixel_pin = board.A3
# Update to match the number of NeoPixels you have connected
pixel_num = 30

pixels = neopixel.NeoPixel(pixel_pin, pixel_num, brightness=0.5, auto_write=False)

comet = Comet(pixels, speed=0.02, color=JADE, tail_length=10, bounce=True)

while True:
    comet.animate()

```

Note the line where you create the comet object. There are a number of items inside the parentheses. In this case, you're provided with a fully working example. But what if you want to change how the comet works? The code alone does not explain what the options mean.

So, in the API Reference documentation list, click the `adafruit_led_animation.animation.comet` link and scroll down a bit until you see the following.


```
class adafruit_led_animation.animation.comet.Comet(pixel_object, speed, color, tail_length=0, reverse=False, bounce=False, name=None, ring=False)
```

A comet animation.

Parameters

pixel_object – The initialised LED object.

speed (*float*) – Animation speed in seconds, e.g. `0.1`.

color – Animation color in `(r, g, b)` tuple, or `0x000000` hex format.

tail_length (*int*) – The length of the comet. Defaults to 25% of the length of the `pixel_object`. Automatically compensates for a minimum of 2 and a maximum of the `pixel_object`.

reverse (*bool*) – Animates the comet in the reverse order. Defaults to `False`.

bounce (*bool*) – Comet will bounce back and forth. Defaults to `True`.

ring (*bool*) – Ring mode. Defaults to `False`.

Look familiar? It is! This is the documentation for setting up the comet object. It explains what each argument provided in the comet setup in the code meant, as well as the other available features. For example, the code includes `speed=0.02`. The documentation clarifies that this is the "Animation speed in seconds". The code doesn't include `ring`. The documentation indicates this is an available setting that enables "Ring mode".

This type of information is available for any function you would set up in your code. If you need clarification on something, wonder whether there's more options available, or are simply interested in the details involved in the code you're writing, check out the documentation for the CircuitPython libraries!

Other Links

This section is the same for every library. It includes a list of links to external sites, which you can visit for more information about the CircuitPython Project and Adafruit.

That covers the CircuitPython library documentation! When you are ready to go beyond the basic library features covered in a guide, or you're interested in understanding those features better, the library documentation on Read the Docs has you covered!

Recommended Editors

The CircuitPython code on your board detects when the files are changed or written and will automatically re-start your code. This makes coding very fast because you save, and it re-runs.

However, you must wait until the file is done being saved before unplugging or resetting your board! On Windows using some editors this can sometimes take up to 90 seconds, on Linux it can take 30 seconds to complete because the text editor does not save the file completely. Mac OS does not seem to have this delay, which is nice!

This is really important to be aware of. If you unplug or reset the board before your computer finishes writing the file to your board, you can corrupt the drive. If this happens, you may lose the code you've written, so it's important to backup your code to your computer regularly.

To avoid the likelihood of filesystem corruption, use an editor that writes out the file completely when you save it. Check out the list of recommended editors below.

Recommended editors

- [mu](https://adafru.it/ANO) (<https://adafru.it/ANO>) is an editor that safely writes all changes (it's also our recommended editor!)
- [emacs](https://adafru.it/xNA) (<https://adafru.it/xNA>) is also an editor that will [fully write files on save](https://adafru.it/Be7) (<https://adafru.it/Be7>)
- [Sublime Text](https://adafru.it/xNB) (<https://adafru.it/xNB>) safely writes all changes
- [Visual Studio Code](https://adafru.it/Be9) (<https://adafru.it/Be9>) appears to safely write all changes
- [gedit](#) on Linux appears to safely write all changes
- [IDLE](https://adafru.it/IWB) (<https://adafru.it/IWB>), in Python 3.8.1 or later, [was fixed](https://adafru.it/IWD) (<https://adafru.it/IWD>) to write all changes immediately
- [Thonny](https://adafru.it/Qb6) (<https://adafru.it/Qb6>) fully writes files on save

Recommended only with particular settings or add-ons

- [vim](https://adafru.it/ek9) (<https://adafru.it/ek9>) / [vi](#) safely writes all changes. But set up [vim](#) to not write [swapfiles](https://adafru.it/ELO) (<https://adafru.it/ELO>) (.swp files: temporary records of your edits) to **CIRCUITPY**. Run vim with `vim -n`, set the `no swapfile` option, or set the `directory` option to write swapfiles elsewhere. Otherwise the swapfile writes trigger restarts of your program.
- The [PyCharm IDE](https://adafru.it/xNC) (<https://adafru.it/xNC>) is safe if "Safe Write" is turned on in Settings->System Settings->Synchronization (true by default).
- If you are using [Atom](https://adafru.it/fMG) (<https://adafru.it/fMG>), install the [fsync-on-save package](https://adafru.it/E9m) (<https://adafru.it/E9m>) or the [language-circuitpython](#)

- [package](https://adafru.it/Vuf) (https://adafru.it/Vuf) so that it will always write out all changes to files on **CIRCUITPY**.
- **SlickEdit** (https://adafru.it/DdP) works only if you [add a macro to flush the disk](https://adafru.it/ven) (https://adafru.it/ven).

The editors listed below are specifically NOT recommended!

Editors that are NOT recommended

- **notepad** (the default Windows editor) and **Notepad++** can be slow to write, so the editors above are recommended! If you are using notepad, be sure to eject the drive.
- **IDLE** in Python 3.8.0 or earlier does not force out changes immediately.
- **nano** (on Linux) does not force out changes.
- **geany** (on Linux) does not force out changes.
- **Anything else** - Other editors have not been tested so please use a recommended one!

Advanced Serial Console on Windows

Windows 7 and 8.1


If you're using Windows 7 (or 8 or 8.1), you'll need to install drivers. See the [Windows 7 and 8.1 Drivers page](https://adafru.it/VuB) (https://adafru.it/VuB) for details. You will not need to install drivers on Mac, Linux or Windows 10.

You are strongly encouraged to upgrade to Windows 10 if you are still using Windows 7 or Windows 8 or 8.1. Windows 7 has reached end-of-life and no longer receives security updates. A free upgrade to Windows 10 is [still available](https://adafru.it/RWc) (https://adafru.it/RWc).


What's the COM?

First, you'll want to find out which serial port your board is using. When you plug your board in to USB on your computer, it connects to a serial port. The port is like a door through which your board can communicate with your computer using USB.

You'll use Windows Device Manager to determine which port the board is using. The easiest way to determine which port the board is using is to first check **without** the board plugged in. Open Device Manager. Click on Ports (COM & LPT). You should find something already in that list with (COM#) after it where # is a number.

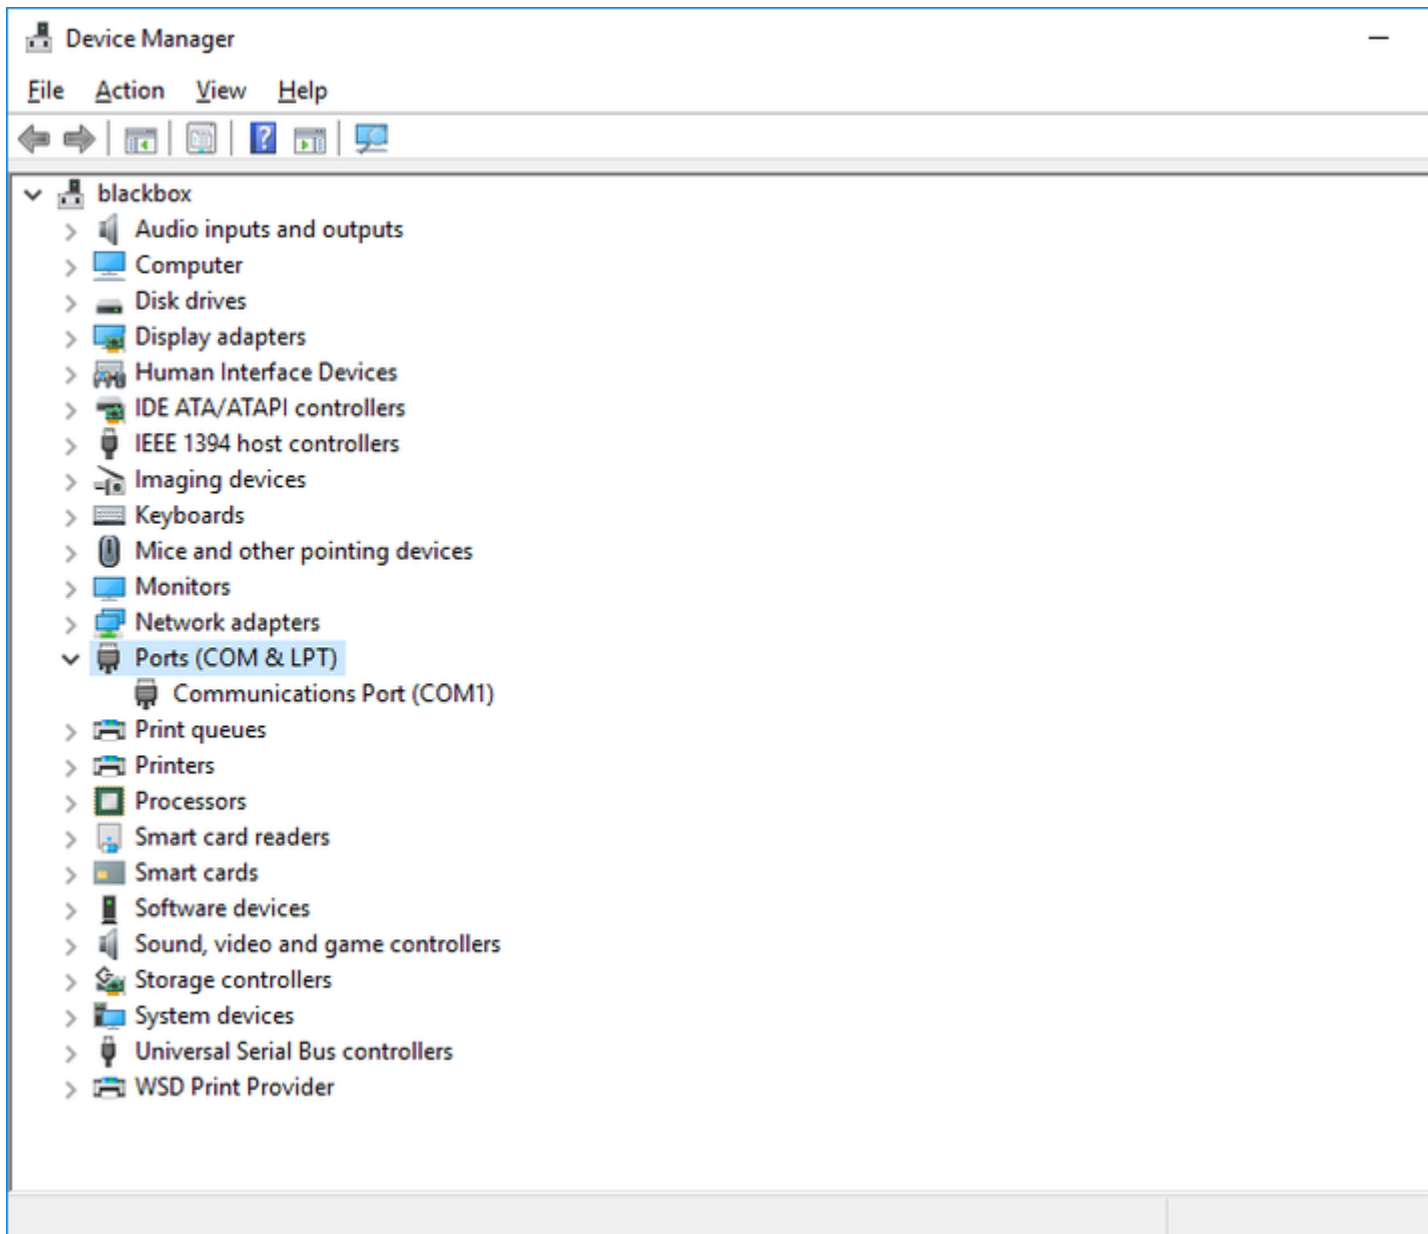

Now plug in your board. The Device Manager list will refresh and a new item will appear under Ports (COM & LPT). You'll find a different (COM#) after this item in the list.

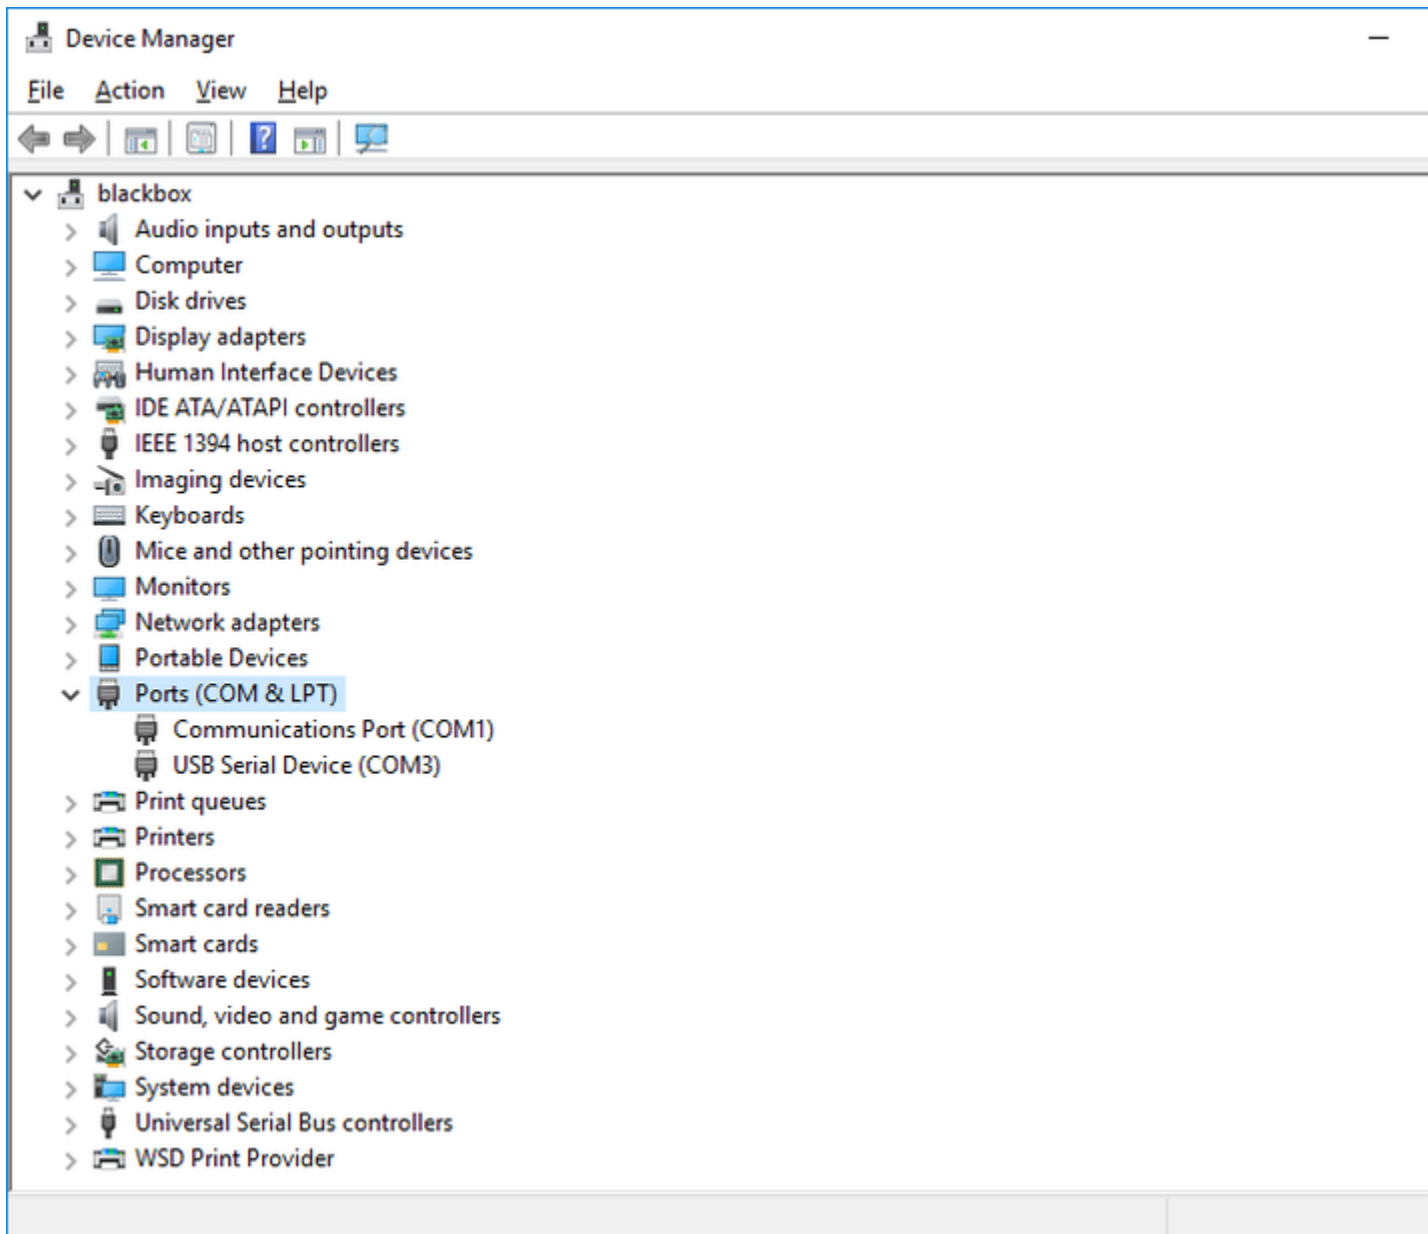

Sometimes the item will refer to the name of the board. Other times it may be called something like USB Serial Device, as seen in the image above. Either way, there is a new (COM#) following the name. This is the port your board is using.

Install Putty


If you're using Windows, you'll need to download a terminal program. You're going to use PuTTY.

The first thing to do is download the [latest version of PuTTY](https://adafruit.com/Bf1) (<https://adafruit.com/Bf1>). You'll want to download the Windows installer file. It is most likely that you'll need the 64-bit version. Download the file and install the program on your machine. If you run into issues, you can try downloading the 32-bit version instead. However, the 64-bit version will work on most PCs.


Now you need to open PuTTY.

- Under **Connection type**: choose the button next to **Serial**.
- In the box under **Serial line**, enter the serial port you found that your board is using.
- In the box under **Speed**, enter 115200. This called the baud rate, which is the speed in bits per second that data is sent over the serial connection. For boards with built in USB it doesn't matter so much but for ESP8266 and other board with a separate chip, the speed required by the board is 115200 bits per second. So you might as well just use 115200!

If you want to save those settings for later, use the options under **Load, save or delete a stored session**. Enter a name in the box under **Saved Sessions**, and click the **Save** button on the right.

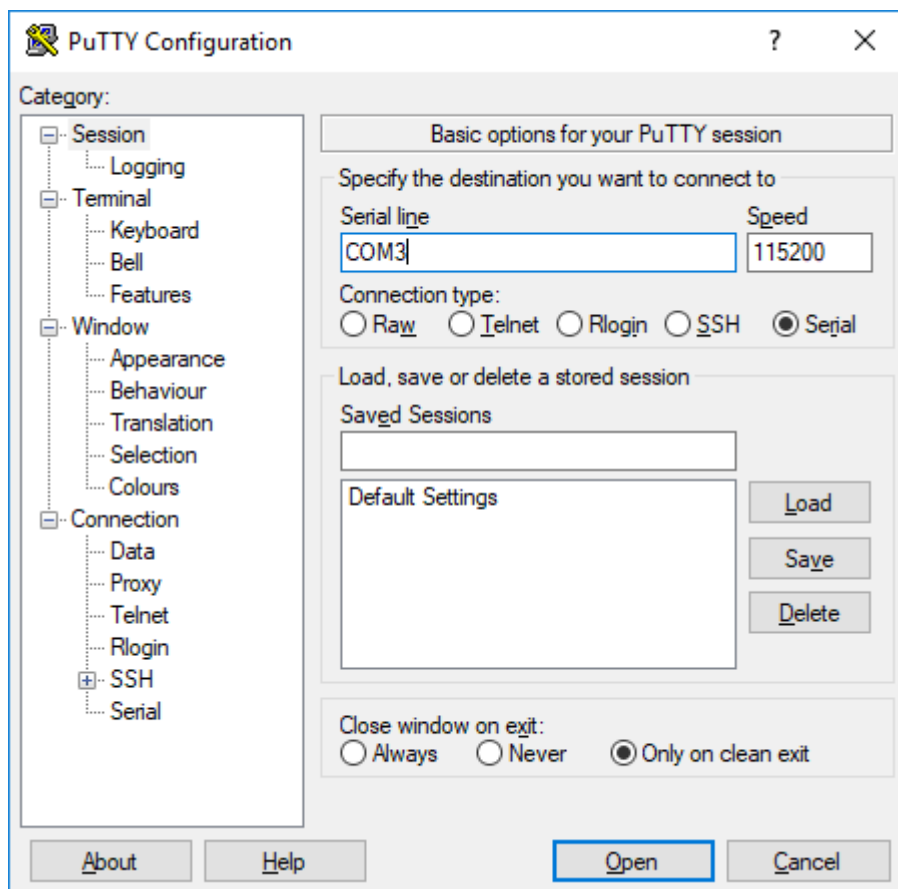

Once your settings are entered, you're ready to connect to the serial console. Click "Open" at the bottom of the window. A new window will open.

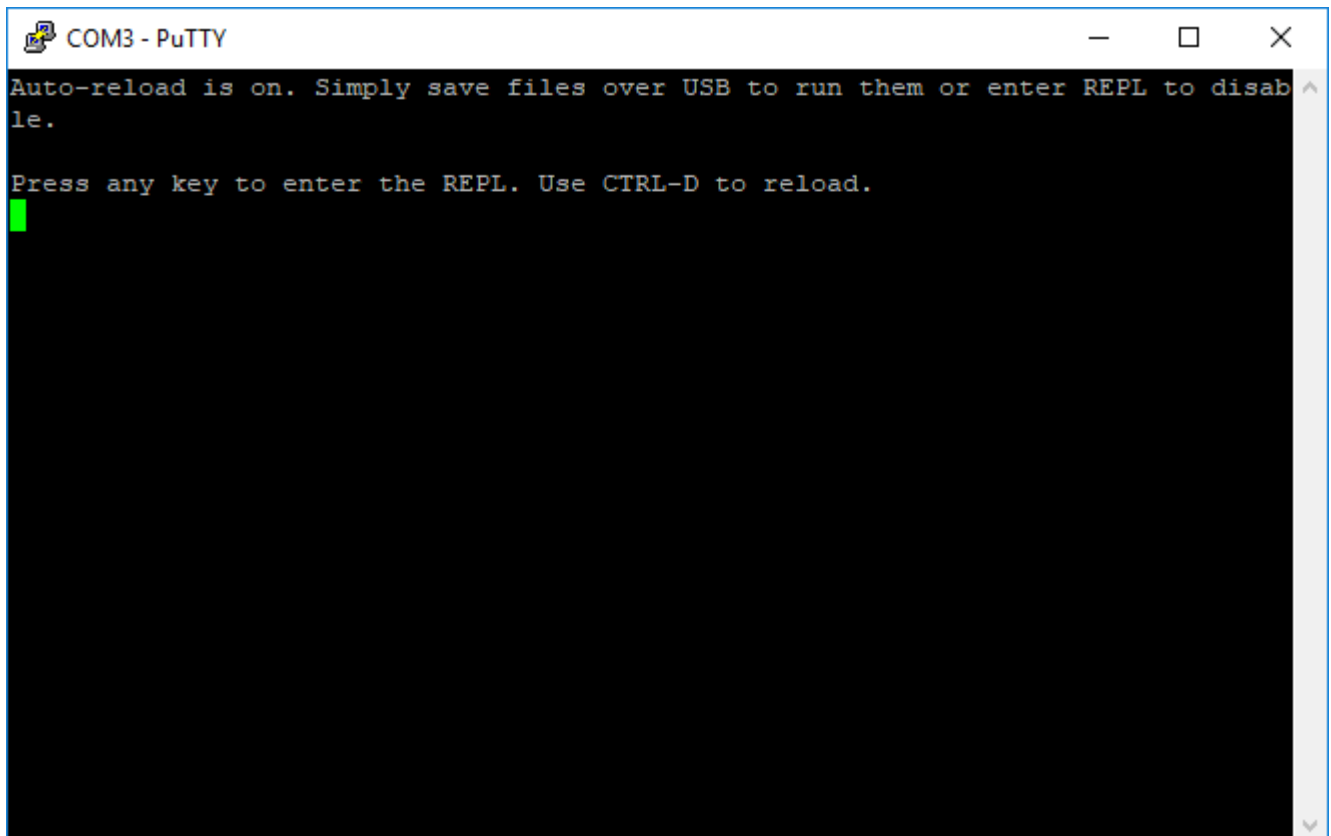

If no code is running, the window will either be blank or will look like the window above. Now you're ready to see the results of your code.

Great job! You've connected to the serial console!

Advanced Serial Console on Mac

Connecting to the serial console on Mac does not require installing any drivers or extra software. You'll use a terminal program to find your board, and screen to connect to it. Terminal and screen both come installed by default.

What's the Port?


First you'll want to find out which serial port your board is using. When you plug your board in to USB on your computer, it connects to a serial port. The port is like a door through which your board can communicate with your computer using USB.

The easiest way to determine which port the board is using is to first check **without** the board plugged in. Open Terminal and type the following:

```
ls /dev/tty.*
```

Each serial connection shows up in the /dev/ directory. It has a name that starts with tty.. The command `ls` shows you a list of items in a directory. You can use `*` as a wildcard, to search for files that start with the same

letters but end in something different. In this case, you're asking to see all of the listings in /dev/ that start with tty. and end in anything. This will show us the current serial connections.

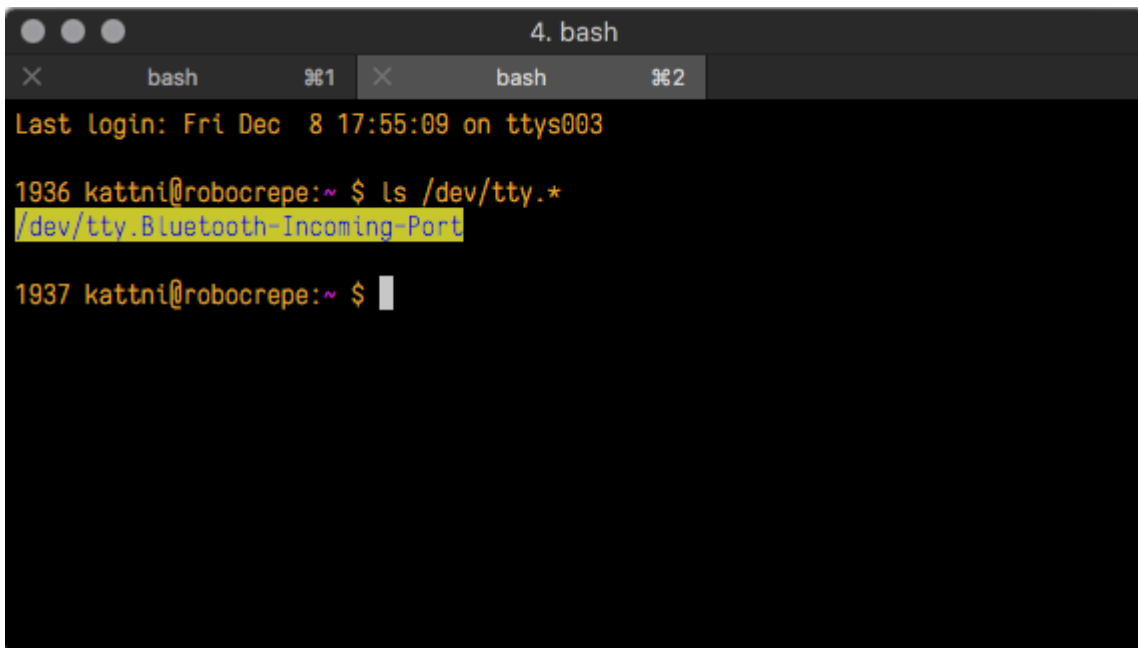


```
4. bash
bash %1 bash %2
Last login: Fri Dec  8 17:55:09 on ttys003
1936 kattni@robocrepe:~ $ ls /dev/tty.*
/dev/tty.Bluetooth-Incoming-Port
1937 kattni@robocrepe:~ $
```

Now, plug your board. In Terminal, type:

```
ls /dev/tty.*
```

This will show you the current serial connections, which will now include your board.

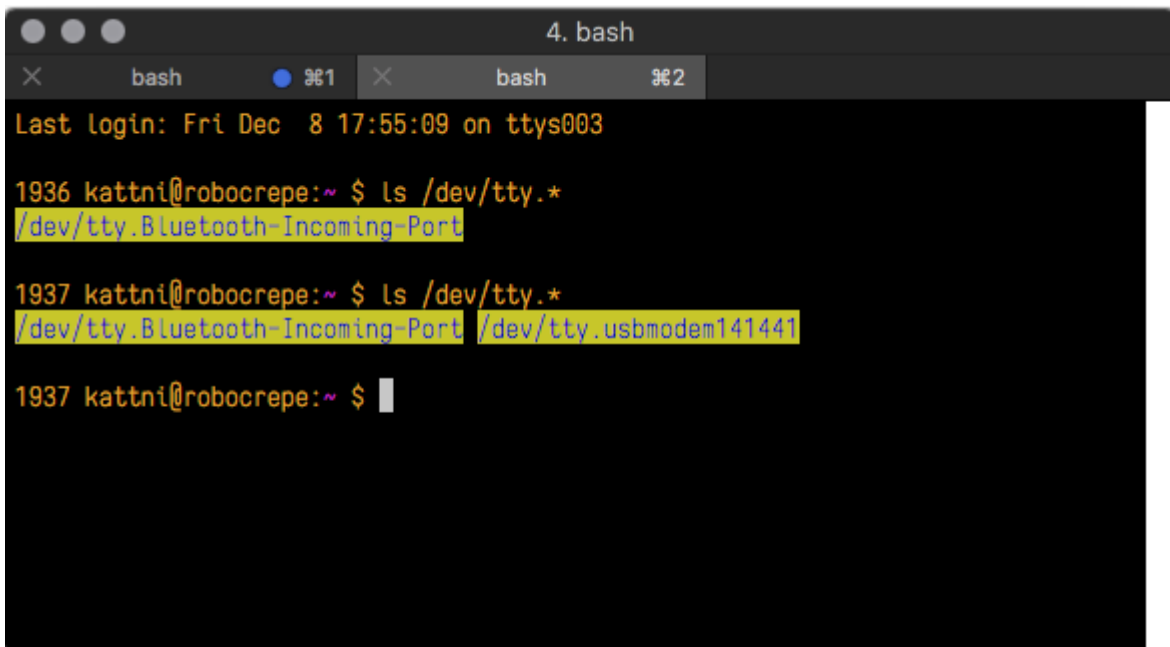

```
4. bash
bash %1 bash %2
Last login: Fri Dec  8 17:55:09 on ttys003
1936 kattni@robocrepe:~ $ ls /dev/tty.*
/dev/tty.Bluetooth-Incoming-Port
1937 kattni@robocrepe:~ $ ls /dev/tty.*
/dev/tty.Bluetooth-Incoming-Port /dev/tty.usbmodem141441
1937 kattni@robocrepe:~ $
```

A new listing has appeared called /dev/tty.usbmodem141441. The tty.usbmodem141441 part of this listing is the name the example board is using. Yours will be called something similar.


Using Linux, a new listing has appeared called `/dev/ttyACM0`. The `ttyACM0` part of this listing is the name the example board is using. Yours will be called something similar.

Connect with screen

Now that you know the name your board is using, you're ready connect to the serial console. You're going to use a command called `screen`. The `screen` command is included with MacOS. To connect to the serial console, use Terminal. Type the following command, replacing `board_name` with the name you found your board is using:

```
screen /dev/tty.board_name 115200
```

The first part of this establishes using the `screen` command. The second part tells `screen` the name of the board you're trying to use. The third part tells `screen` what baud rate to use for the serial connection. The baud rate is the speed in bits per second that data is sent over the serial connection. In this case, the speed required by the board is 115200 bits per second.

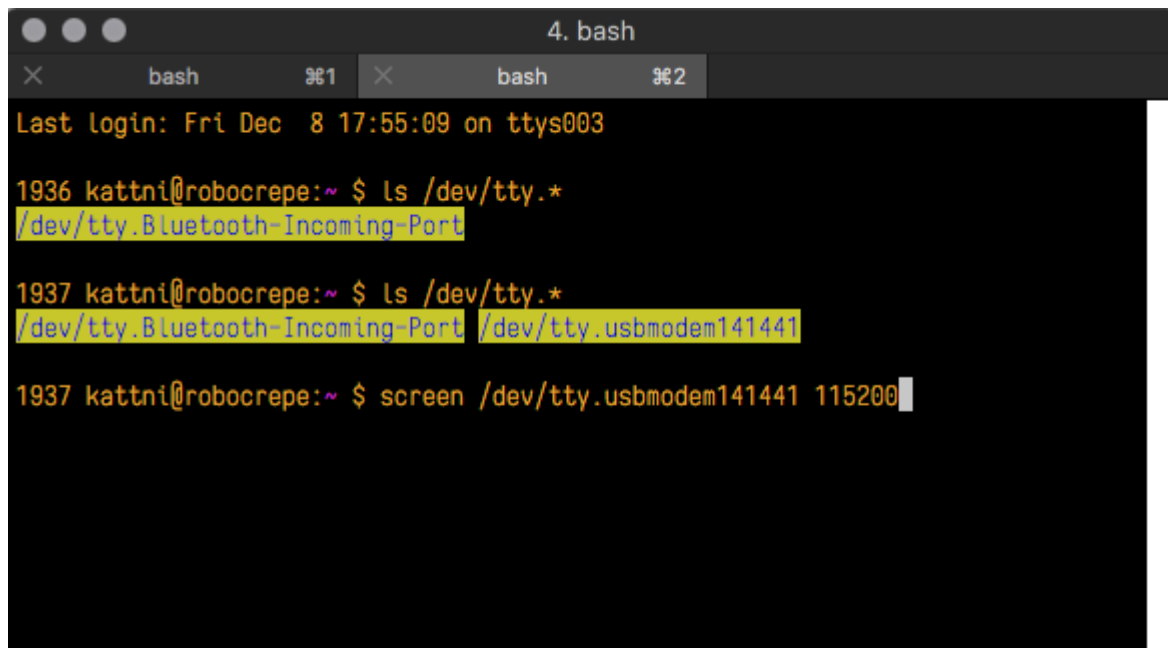A screenshot of a macOS Terminal window titled "4. bash". It shows two tabs: "bash" (active) and "bash". The terminal output shows the user's login history, followed by two `ls /dev/tty.*` commands. The first command shows `/dev/tty.Bluetooth-Incoming-Port`. The second command shows `/dev/tty.Bluetooth-Incoming-Port` and `/dev/tty.usbmodem141441`. The user then runs the `screen /dev/tty.usbmodem141441 115200` command, and the cursor is positioned at the end of the command line.

```
4. bash
bash 1
bash 2
Last login: Fri Dec 8 17:55:09 on ttys003
1936 kattni@robocrepe:~ $ ls /dev/tty.*
/dev/tty.Bluetooth-Incoming-Port
1937 kattni@robocrepe:~ $ ls /dev/tty.*
/dev/tty.Bluetooth-Incoming-Port /dev/tty.usbmodem141441
1937 kattni@robocrepe:~ $ screen /dev/tty.usbmodem141441 115200
```

Press enter to run the command. It will open in the same window. If no code is running, the window will be blank. Otherwise, you'll see the output of your code.

Great job! You've connected to the serial console!

Advanced Serial Console on Linux

Connecting to the serial console on Linux does not require installing any drivers, but you may need to install `screen` using your package manager. You'll use a terminal program to find your board, and `screen` to connect to

it. There are a variety of terminal programs such as gnome-terminal (called Terminal) or Konsole on KDE.

The `tio` program works as well to connect to your board, and has the benefit of automatically reconnecting. You would need to install it using your package manager.

What's the Port?


First you'll want to find out which serial port your board is using. When you plug your board in to USB on your computer, it connects to a serial port. The port is like a door through which your board can communicate with your computer using USB.

The easiest way to determine which port the board is using is to first check **without** the board plugged in. Open your terminal program and type the following:

```
ls /dev/ttyACM*
```

Each serial connection shows up in the `/dev/` directory. It has a name that starts with `ttyACM`. The command `ls` shows you a list of items in a directory. You can use `*` as a wildcard, to search for files that start with the same letters but end in something different. In this case, You're asking to see all of the listings in `/dev/` that start with `ttyACM` and end in anything. This will show us the current serial connections.

In the example below, the error is indicating that are no current serial connections starting with `ttyACM`.

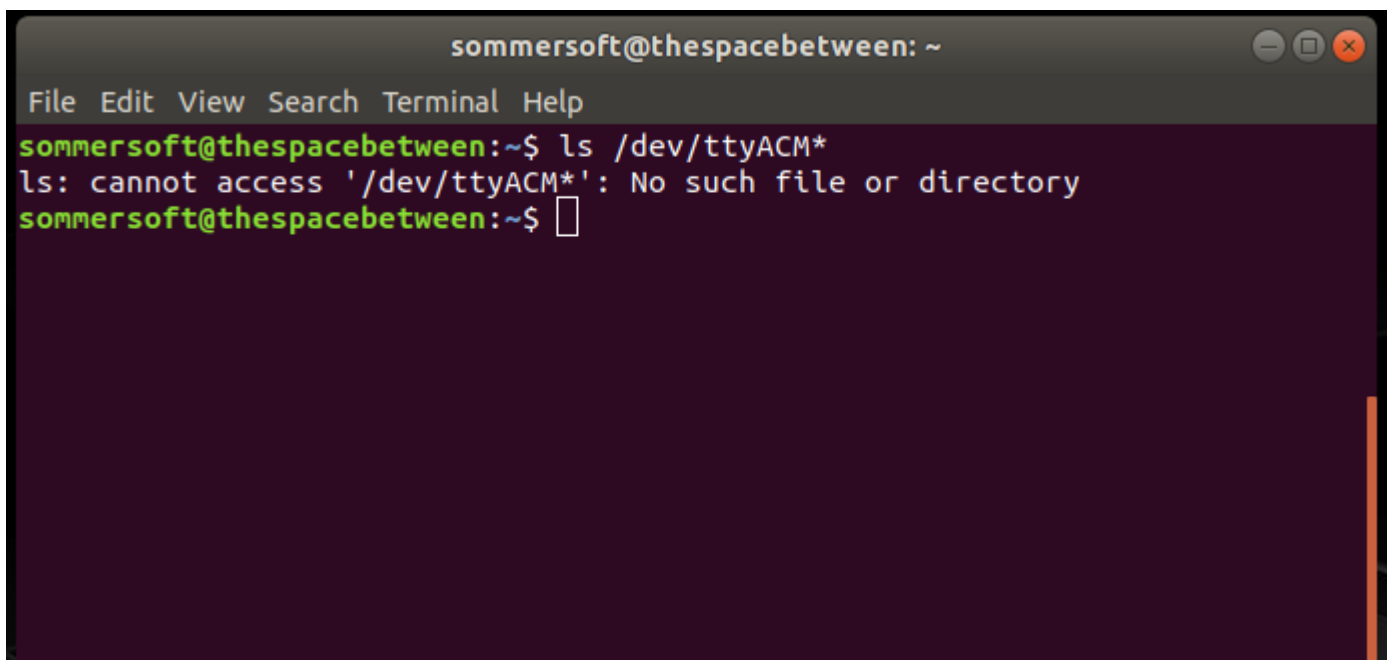
A screenshot of a terminal window titled "sommersoft@thespacebetween: ~". The window has a menu bar with "File", "Edit", "View", "Search", "Terminal", and "Help". The terminal text shows the command "ls /dev/ttyACM*" being entered, followed by the error message "ls: cannot access '/dev/ttyACM*': No such file or directory". The prompt "sommersoft@thespacebetween:~\$" is shown again with a cursor.

```
sommersoft@thespacebetween: ~  
File Edit View Search Terminal Help  
sommersoft@thespacebetween:~$ ls /dev/ttyACM*  
ls: cannot access '/dev/ttyACM*': No such file or directory  
sommersoft@thespacebetween:~$
```

Now plug in your board. In your terminal program, type:

```
ls /dev/ttyACM*
```

This will show you the current serial connections, which will now include your board.

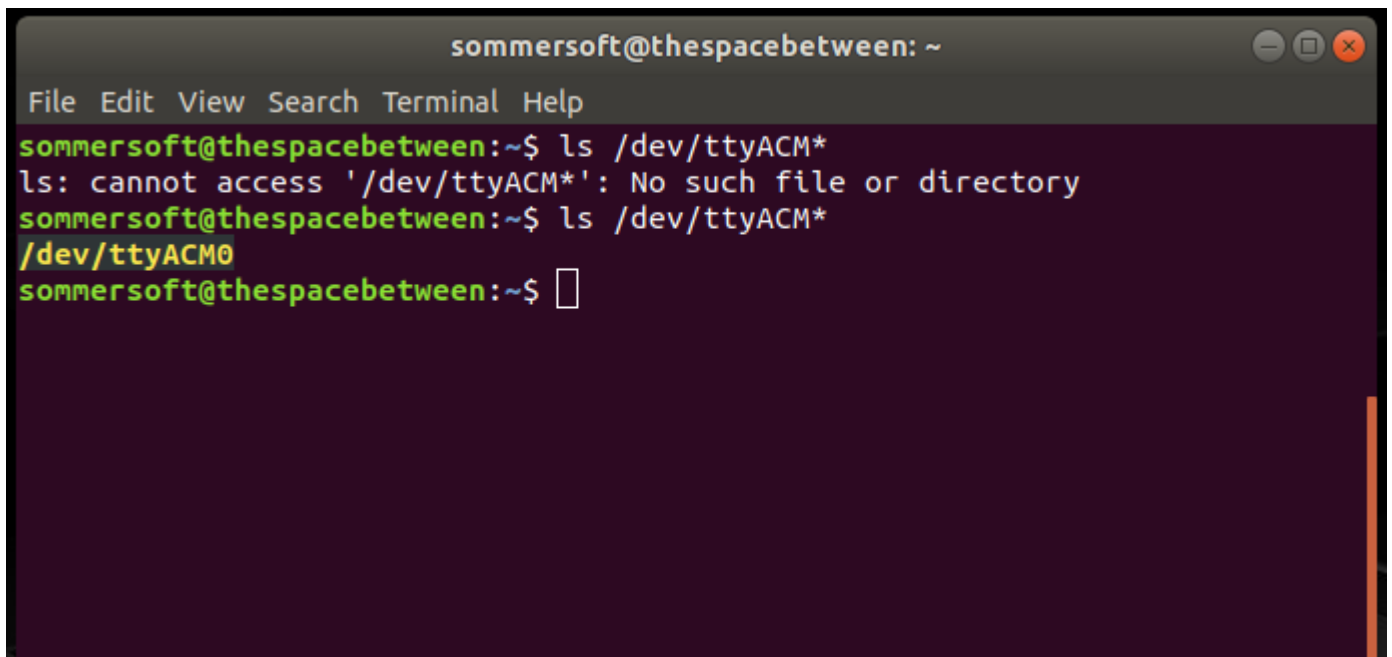A terminal window titled 'sommersoft@thespacebetween: ~' with a menu bar (File, Edit, View, Search, Terminal, Help). The prompt is 'sommersoft@thespacebetween:~\$'. The user enters 'ls /dev/ttyACM*'. The output is 'ls: cannot access '/dev/ttyACM*': No such file or directory'. The user enters 'ls /dev/ttyACM*' again. The output is '/dev/ttyACM0'. The prompt is 'sommersoft@thespacebetween:~\$' with a cursor.

```
sommersoft@thespacebetween: ~  
File Edit View Search Terminal Help  
sommersoft@thespacebetween:~$ ls /dev/ttyACM*  
ls: cannot access '/dev/ttyACM*': No such file or directory  
sommersoft@thespacebetween:~$ ls /dev/ttyACM*  
/dev/ttyACM0  
sommersoft@thespacebetween:~$
```

A new listing has appeared called **/dev/ttyACM0**. The **ttyACM0** part of this listing is the name the example board is using. Yours will be called something similar.


Connect with screen

Now that you know the name your board is using, you're ready connect to the serial console. You'll use a command called `screen`. You may need to install it using the package manager.

To connect to the serial console, use your terminal program. Type the following command, replacing `board_name` with the name you found your board is using:

```
screen /dev/tty.board_name 115200
```

The first part of this establishes using the `screen` command. The second part tells `screen` the name of the board you're trying to use. The third part tells `screen` what baud rate to use for the serial connection. The baud rate is the speed in bits per second that data is sent over the serial connection. In this case, the speed required by the board is 115200 bits per second.

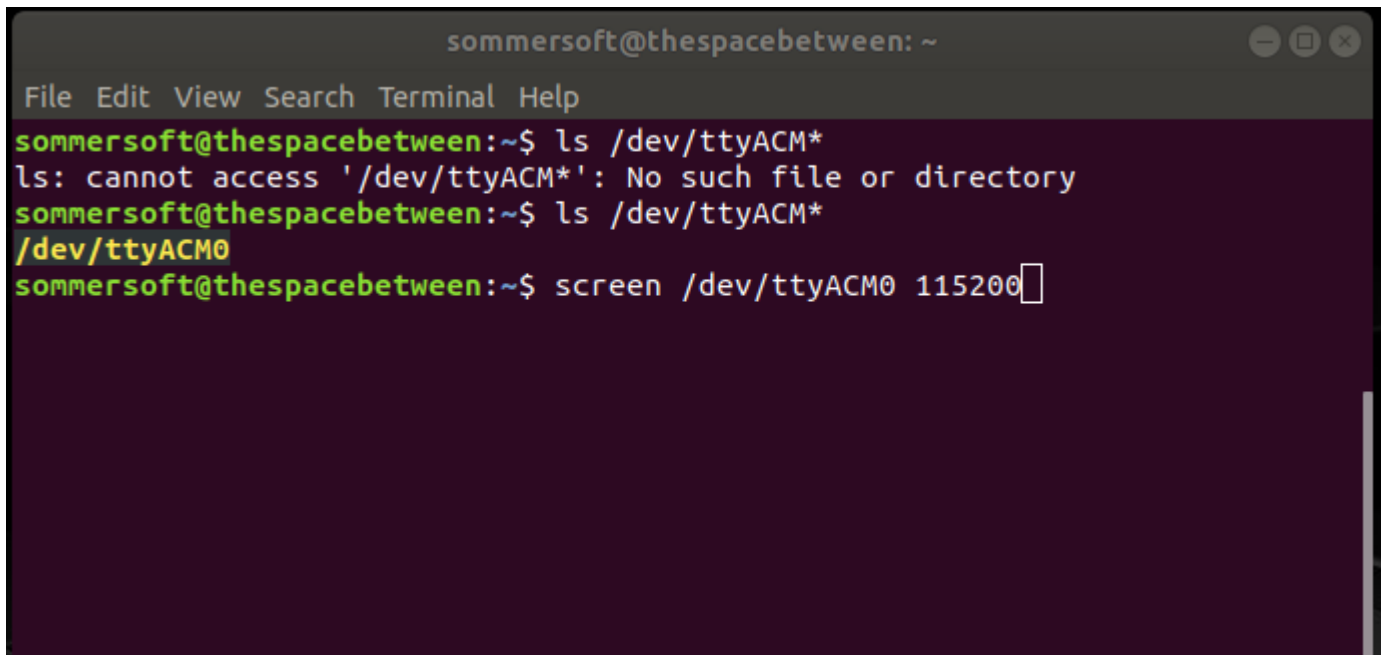A terminal window titled 'sommersoft@thespacebetween: ~' with a menu bar (File, Edit, View, Search, Terminal, Help). The user runs 'ls /dev/ttyACM*' and receives an error. Then they run 'ls /dev/ttyACM0' and see the path. Finally, they run 'screen /dev/ttyACM0 115200' and a cursor appears.


```
sommersoft@thespacebetween: ~  
File Edit View Search Terminal Help  
sommersoft@thespacebetween:~$ ls /dev/ttyACM*  
ls: cannot access '/dev/ttyACM*': No such file or directory  
sommersoft@thespacebetween:~$ ls /dev/ttyACM*  
/dev/ttyACM0  
sommersoft@thespacebetween:~$ screen /dev/ttyACM0 115200
```

Press enter to run the command. It will open in the same window. If no code is running, the window will be blank. Otherwise, you'll see the output of your code.

Great job! You've connected to the serial console!

Permissions on Linux

If you try to run screen and it doesn't work, then you may be running into an issue with permissions. Linux keeps track of users and groups and what they are allowed to do and not do, like access the hardware associated with the serial connection for running screen. So if you see something like this:

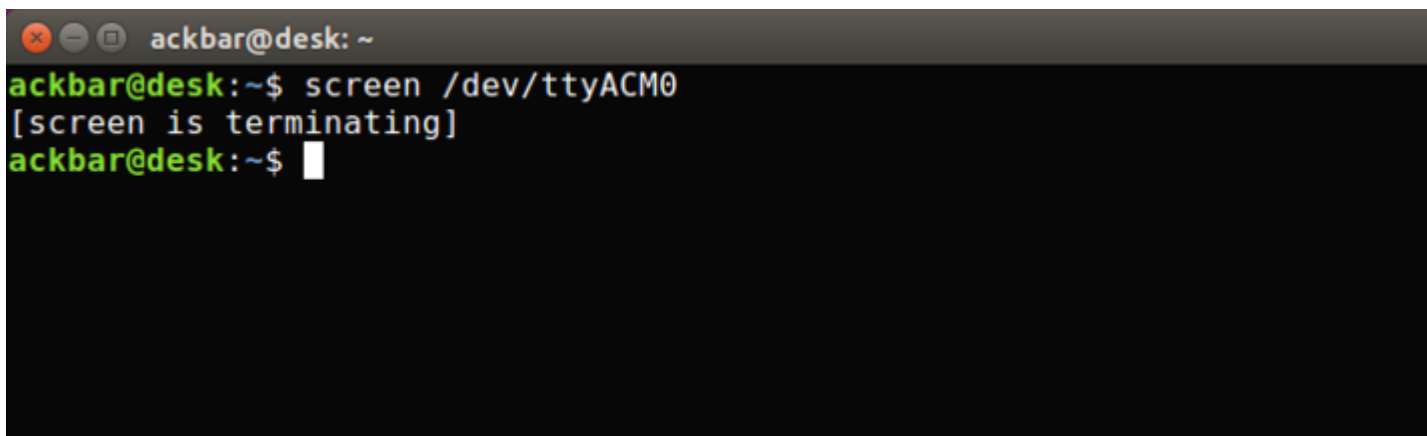A terminal window titled 'ackbar@desk: ~' with a menu bar (x, -, □). The user runs 'screen /dev/ttyACM0' and receives the message '[screen is terminating]'.

```
ackbar@desk: ~  
ackbar@desk:~$ screen /dev/ttyACM0  
[screen is terminating]  
ackbar@desk:~$
```

then you may need to grant yourself access. There are generally two ways you can do this. The first is to just run screen using the sudo command, which temporarily gives you elevated privileges.

```
ackbar@desk: ~
ackbar@desk:~$ screen /dev/ttyACM0
[screen is terminating]
ackbar@desk:~$ sudo screen /dev/ttyACM0
[sudo] password for ackbar: █
```

Once you enter your password, you should be in:

```
ackbar@desk: ~
Auto-reload is on. Simply save files over USB to run them or enter REPL
le.

Press any key to enter the REPL. Use CTRL-D to reload.

Adafruit CircuitPython 2.1.0 on 2017-10-17; Adafruit Trinket M0 with sam
>>> █
```

The second way is to add yourself to the group associated with the hardware. To figure out what that group is, use the command `ls -l` as shown below. The group name is circled in red.

Then use the command `adduser` to add yourself to that group. You need elevated privileges to do this, so you'll need to use `sudo`. In the example below, the group is **adm** and the user is **ackbar**.

```
ackbar@desk: ~
ackbar@desk:~$ ls -l /dev/ttyACM0
crw-rw---- 1 root adm 166, 0 Dec 21 08:29 /dev/ttyACM0
ackbar@desk:~$ sudo adduser ackbar adm
Adding user `ackbar' to group `adm' ...
Adding user ackbar to group adm
Done.
ackbar@desk:~$ █
```

After you add yourself to the group, you'll need to logout and log back in, or in some cases, reboot your machine. After you log in again, verify that you have been added to the group using the command `groups`. If you are still not in the group, reboot and check again.

```
ackbar@desk: ~  
ackbar@desk:~$ groups  
ackbar adm sudo  
ackbar@desk:~$
```

And now you should be able to run screen without using sudo.

```
ackbar@desk: ~  
ackbar@desk:~$ groups  
ackbar adm sudo  
ackbar@desk:~$ screen /dev/ttyACM0 115200
```

And you're in:

```
ackbar@desk: ~  
  
Auto-reload is on. Simply save files over USB to run them or enter REPL  
le.  
  
Press any key to enter the REPL. Use CTRL-D to reload.  
  
Adafruit CircuitPython 2.1.0 on 2017-10-17; Adafruit Trinket M0 with sam  
>>>
```

The examples above use screen, but you can also use other programs, such as putty or picocom, if you prefer.

Frequently Asked Questions

These are some of the common questions regarding CircuitPython and CircuitPython microcontrollers.

What are some common acronyms to know?

CP or CPy = [CircuitPython](https://adafru.it/KJD) (<https://adafru.it/KJD>)

CPC = [Circuit Playground Classic](http://adafru.it/3000) (<http://adafru.it/3000>) (does not run CircuitPython)

CPX = [Circuit Playground Express](http://adafru.it/3333) (<http://adafru.it/3333>)

CPB = [Circuit Playground Bluefruit](http://adafru.it/4333) (<http://adafru.it/4333>)

Using Older Versions

As CircuitPython development continues and there are new releases, Adafruit will stop supporting older releases. Visit <https://circuitpython.org/downloads> to download the latest version of CircuitPython for your board. You must download the CircuitPython Library Bundle that matches your version of CircuitPython. Please update CircuitPython and then visit <https://circuitpython.org/libraries> to download the latest Library Bundle.

I have to continue using CircuitPython 7.x or earlier. Where can I find compatible libraries?

We are no longer building or supporting the CircuitPython 7.x or earlier library bundles. We highly encourage you to [update CircuitPython to the latest version](https://adafru.it/Em8) and use [the current version of the libraries](https://adafru.it/ENC). However, if for some reason you cannot update, here are the last available library bundles for older versions:

- [2.x bundle](https://adafru.it/FJA) (<https://adafru.it/FJA>)
- [3.x bundle](https://adafru.it/FJB) (<https://adafru.it/FJB>)
- [4.x bundle](https://adafru.it/QDL) (<https://adafru.it/QDL>)
- [5.x bundle](https://adafru.it/QDJ) (<https://adafru.it/QDJ>)
- [6.x bundle](https://adafru.it/Xmf) (<https://adafru.it/Xmf>)
- [7.x bundle](https://adafru.it/18e9) (<https://adafru.it/18e9>)

Python Arithmetic

Does CircuitPython support floating-point numbers?

All CircuitPython boards support floating point arithmetic, even if the microcontroller chip does not support floating point in hardware. Floating point numbers are stored in 30 bits, with an 8-bit exponent and a 22-bit mantissa. Note that this is two bits less than standard 32-bit single-precision floats. You will get about 5-1/2 digits of decimal precision.

(The **broadcom** port may provide 64-bit floats in some cases.)

Does CircuitPython support long integers, like regular Python?

Python long integers (integers of arbitrary size) are available on most builds, except those on boards with the smallest available firmware size. On these boards, integers are stored in 31 bits.

Boards without long integer support are mostly SAMD21 ("M0") boards without an external flash chip, such as the Adafruit Gemma M0, Trinket M0, QT Py M0, and the Trinkey series. There are also a number of third-party boards in this category. There are also a few small STM third-party boards without long integer support.

`time.localtime()`, `time.mktime()`, `time.time()`, and `time.monotonic_ns()` are available only on builds with long integers.

Wireless Connectivity

How do I connect to the Internet with CircuitPython?

If you'd like to include WiFi in your project, your best bet is to use a board that is running natively on ESP32 chipsets - those have WiFi built in!

If your development board has an SPI port and at least 4 additional pins, you can check out [this guide](https://adafru.it/F5X) (https://adafru.it/F5X) on using AirLift with CircuitPython - extra wiring is required and some boards like the MacroPad or NeoTrellis do not have enough available pins to add the hardware support.

For further project examples, and guides about using AirLift with specific hardware, check out [the Adafruit Learn System](https://adafru.it/VBr) (https://adafru.it/VBr).

How do I do BLE (Bluetooth Low Energy) with CircuitPython?

The nRF52840 and nRF52833 boards have the most complete BLE implementation. Your program can act as both a BLE central and peripheral. As a central, you can scan for advertisements, and connect to an advertising board. As a peripheral, you can advertise, and you can create services available to a central. Pairing and bonding are supported.

ESP32-C3 and ESP32-S3 boards currently provide an [incomplete](https://adafru.it/11Au) (https://adafru.it/11Au) BLE implementation. Your program can act as a central, and connect to a peripheral. You can advertise, but you cannot create services. You cannot advertise anonymously. Pairing and bonding are not supported.

The ESP32 could provide a similar implementation, but it is not yet available. Note that the ESP32-S2 does not have Bluetooth capability.

On most other boards with adequate firmware space, [BLE is available for use with AirLift](https://adafru.it/11Av) (https://adafru.it/11Av) or other NINA-FW-based coprocessors. Some boards have this coprocessor on board, such as the [PyPortal](https://adafru.it/11Aw) (https://adafru.it/11Aw). Currently, this implementation only supports acting as a BLE peripheral. Scanning and connecting as a central are not yet implemented. Bonding and pairing are not supported.

Are there other ways to communicate by radio with CircuitPython?

Check out [Adafruit's RFM boards](https://adafru.it/11Ay) (https://adafru.it/11Ay) for simple radio communication supported by CircuitPython, which can be used over distances of 100m to over a km, depending on the version. The RFM SAMD21 M0 boards can be used, but they were not designed for CircuitPython, and have limited RAM and flash space; using the RFM breakouts or FeatherWings with more capable boards will be easier.

Asyncio and Interrupts

Is there asyncio support in CircuitPython?

There is support for asyncio starting with CircuitPython 7.1.0, on all boards except the smallest SAMD21 builds. Read about using it in the [Cooperative Multitasking in CircuitPython](https://adafru.it/XnA) (https://adafru.it/XnA) Guide.

Does CircuitPython support interrupts?

No. CircuitPython does not currently support interrupts - please use asyncio for multitasking / 'threaded' control of your code

Status RGB LED

My RGB NeoPixel/DotStar LED is blinking funny colors - what does it mean?

The status LED can tell you what's going on with your CircuitPython board. [Read more here for what the colors mean!](https://adafru.it/Den) (https://adafru.it/Den)

Memory Issues

What is a MemoryError?

Memory allocation errors happen when you're trying to store too much on the board. The CircuitPython microcontroller boards have a limited amount of memory available. You can have about 250 lines of code on the M0 Express boards. If you try to import too many libraries, a combination of large libraries, or run a program with too many lines of code, your code will fail to run and you will receive a MemoryError in the serial console.

What do I do when I encounter a MemoryError?

Try resetting your board. Each time you reset the board, it reallocates the memory. While this is unlikely to resolve your issue, it's a simple step and is worth trying.

Make sure you are using **.mpy** versions of libraries. All of the CircuitPython libraries are available in the bundle in a **.mpy** format which takes up less memory than **.py** format. Be sure that you're using [the latest library bundle](https://adafru.it/uap) (https://adafru.it/uap) for your version of CircuitPython.

If that does not resolve your issue, try shortening your code. Shorten comments, remove extraneous or unneeded code, or any other clean up you can do to shorten your code. If you're using a lot of functions, you could try moving those into a separate library, creating a **.mpy** of that library, and importing it into your code.

You can turn your entire file into a **.mpy** and import that into **code.py**. This means you will be unable to edit your code live on the board, but it can save you space.

Can the order of my import statements affect memory?

It can be because the memory gets fragmented differently depending on allocation order and the size of objects. Loading **.mpy** files uses less memory so it's recommended to do that for files you aren't editing.

How can I create my own .mpy files?

You can make your own **.mpy** versions of files with `mpy-cross`.

You can download `mpy-cross` for your operating system from [here](https://adafru.it/QDK) (https://adafru.it/QDK). Builds are available for Windows, macOS, x64 Linux, and Raspberry Pi Linux. Choose the latest `mpy-cross` whose version matches the version of CircuitPython you are using.

To make a **.mpy** file, run `./mpy-cross path/to/yourfile.py` to create a **yourfile.mpy** in the same directory as the original file.

How do I check how much memory I have free?

Run the following to see the number of bytes available for use:

```
import gc
gc.mem_free()
```

Unsupported Hardware

Is ESP8266 or ESP32 supported in CircuitPython? Why not?

We dropped ESP8266 support as of 4.x - For more information please read about it [here](https://adafru.it/CiG) (https://adafru.it/CiG)!

[As of CircuitPython 8.x we have started to support ESP32 and ESP32-C3 and have added a WiFi workflow for wireless coding!](https://adafru.it/10JF) (https://adafru.it/10JF)

We also support ESP32-S2 & ESP32-S3, which have native USB.

Does Feather M0 support WINC1500?

No, WINC1500 will not fit into the M0 flash space.

Can AVR's such as ATmega328 or ATmega2560 run CircuitPython?

No.

Troubleshooting

From time to time, you will run into issues when working with CircuitPython. Here are a few things you may encounter and how to resolve them.

As CircuitPython development continues and there are new releases, Adafruit will stop supporting older releases. Visit <https://circuitpython.org/downloads> to download the latest version of CircuitPython for your board. You must download the CircuitPython Library Bundle that matches your version of CircuitPython. Please update CircuitPython and then visit <https://circuitpython.org/libraries> to download the latest Library Bundle.

Always Run the Latest Version of CircuitPython and Libraries

As CircuitPython development continues and there are new releases, Adafruit will stop supporting older releases. **You need to [update to the latest CircuitPython](https://adafru.it/Em8)**. (<https://adafru.it/Em8>).

You need to download the CircuitPython Library Bundle that matches your version of CircuitPython. **Please update CircuitPython and then [download the latest bundle](https://adafru.it/ENC)** (<https://adafru.it/ENC>).

As new versions of CircuitPython are released, Adafruit will stop providing the previous bundles as automatically created downloads on the Adafruit CircuitPython Library Bundle repo. If you must continue to use an earlier version, you can still download the appropriate version of mpy-cross from the particular release of CircuitPython on the CircuitPython repo and create your own compatible .mpy library files. **However, it is best to update to the latest for both CircuitPython and the library bundle.**

I have to continue using CircuitPython 7.x or earlier. Where can I find compatible libraries?

Adafruit is no longer building or supporting the CircuitPython 7.x or earlier library bundles. You are highly encouraged to [update CircuitPython to the latest version](https://adafru.it/Em8) (<https://adafru.it/Em8>) and use [the current version of the libraries](https://adafru.it/ENC) (<https://adafru.it/ENC>). However, if

for some reason you cannot update, links to the previous bundles are available in the [FAQ](https://adafru.it/FwY) (<https://adafru.it/FwY>).

macOS Sonoma 14.x: Disk Errors Writing to CIRCUITPY

macOS Sonoma before 14.4 beta 2 takes many seconds to complete writes to small FAT drives, 8MB or smaller. This causes errors when writing to CIRCUITPY. The best solution is to remount the CIRCUITPY drive after it is automatically mounted. Or consider downgrading back to Ventura if that works for you. This problem is being tracked in [CircuitPython GitHub issue 8449](https://adafru.it/18ea) (<https://adafru.it/18ea>).

Here is a shell script to do this remount conveniently (courtesy [@czei in GitHub](https://adafru.it/18ea) (<https://adafru.it/18ea>)). Copy the code here into a file named, say, **remount-CIRCUITPY.sh**. Place the file in a directory on your PATH, or in some other convenient place.

macOS Sonoma 14.4 beta and after does not have the problem above, but does take an inordinately long time to write to FAT drives of size 1GB or less (40 times longer than 2GB drives). This problem is being tracked in [CircuitPython GitHub issue 8918](https://adafru.it/19iD) (<https://adafru.it/19iD>).

```
#!/bin/sh
#
# This works around bug where, by default, macOS 14.x writes part of a file
# immediately, and then doesn't update the directory for 20-60 seconds, causing
# the file system to be corrupted.
#
disky=`df | grep CIRCUITPY | cut -d" " -f1`
sudo umount /Volumes/CIRCUITPY
sudo mkdir /Volumes/CIRCUITPY
sleep 2
sudo mount -v -o noasync -t msdos $disky /Volumes/CIRCUITPY
```

Then in a Terminal window, do this to make this script executable:

```
chmod +x remount-CIRCUITPY.sh
```

Place the file in a directory on your PATH, or in some other convenient place.

Now, each time you plug in or reset your CIRCUITPY board, run the file **remount-CIRCUITPY.sh**. You can run it in a Terminal window or you may be able to place it on the desktop or in your dock to run it just by double-clicking.

This will be something of a nuisance but it is the safest solution.

This problem is being tracked in [this CircuitPython issue](https://adafru.it/18ea) (<https://adafru.it/18ea>).

Bootloader (boardnameBOOT) Drive Not Present

You may have a different board.

Only Adafruit Express boards and the SAMD21 non-Express boards ship with the [UF2 bootloader](https://adafru.it/zbX) (https://adafru.it/zbX) installed. The Feather M0 Basic, Feather M0 Adalogger, and similar boards use a regular Arduino-compatible bootloader, which does not show a **boardnameBOOT** drive.

MakeCode

If you are running a [MakeCode](https://adafru.it/zbY) (https://adafru.it/zbY) program on Circuit Playground Express, press the reset button just once to get the **CPLAYBOOT** drive to show up. Pressing it twice will not work.

macOS

DriveDx and its accompanying **SAT SMART Driver** can interfere with seeing the BOOT drive. [See this forum post](https://adafru.it/sTc) (https://adafru.it/sTc) for how to fix the problem.

Windows 10

Did you install the Adafruit Windows Drivers package by mistake, or did you upgrade to Windows 10 with the driver package installed? You don't need to install this package on Windows 10 for most Adafruit boards. The old version (v1.5) can interfere with recognizing your device. Go to **Settings -> Apps** and uninstall all the "Adafruit" driver programs.

Windows 7 or 8.1

To use a CircuitPython-compatible board with Windows 7 or 8.1, you must install a driver. Installation instructions are available [here](https://adafru.it/VuB) (https://adafru.it/VuB).

Windows 7 and 8.1 have reached end of life. It is [recommended](https://adafru.it/Amd) (https://adafru.it/Amd) that you upgrade to Windows 10 if possible; an upgrade is probably still free for you. Check [here](https://adafru.it/Amd) (https://adafru.it/Amd).

The Windows Drivers installer was last updated in November 2020 (v2.5.0.0). Windows 7 drivers for CircuitPython boards released since then, including RP2040 boards, are not available. There are no plans to release drivers for new boards. The boards work fine on Windows 10.

You should now be done! Test by unplugging and replugging the board. You should see the **CIRCUITPY** drive, and when you double-click the reset button (single click on Circuit Playground Express running MakeCode), you should see the appropriate **boardnameBOOT** drive.

Let us know in the [Adafruit support forums](https://adafru.it/jIf) (<https://adafru.it/jIf>) or on the [Adafruit Discord](#) () if this does not work for you!

Windows Explorer Locks Up When Accessing boardnameBOOT Drive

On Windows, several third-party programs that can cause issues. The symptom is that you try to access the **boardnameBOOT** drive, and Windows or Windows Explorer seems to lock up. These programs are known to cause trouble:

- **AIDA64**: to fix, stop the program. This problem has been reported to AIDA64. They acquired hardware to test, and released a beta version that fixes the problem. This may have been incorporated into the latest release. Please let us know in the forums if you test this.
- **Hard Disk Sentinel**
- **Kaspersky anti-virus**: To fix, you may need to disable Kaspersky completely. Disabling some aspects of Kaspersky does not always solve the problem. This problem has been reported to Kaspersky.
- **ESET NOD32 anti-virus**: There have been problems with at least version 9.0.386.0, solved by uninstallation.

Copying UF2 to boardnameBOOT Drive Hangs at 0% Copied

On Windows, a **Western Digital (WD) utility** that comes with their external USB drives can interfere with copying UF2 files to the **boardnameBOOT** drive. Uninstall that utility to fix the problem.

CIRCUITPY Drive Does Not Appear or Disappears Quickly

Kaspersky anti-virus can block the appearance of the **CIRCUITPY** drive. There has not yet been settings change discovered that prevents this. Complete uninstallation of Kaspersky fixes the problem.

Norton anti-virus can interfere with **CIRCUITPY**. A user has reported this problem on Windows 7. The user turned off both Smart Firewall and Auto Protect, and **CIRCUITPY** then appeared.


Sophos Endpoint security software [can cause CIRCUITPY to disappear](https://adafru.it/ELr) (<https://adafru.it/ELr>) and the BOOT drive to reappear. It is not clear what causes this behavior.

Samsung Magician can cause CIRCUITPY to disappear (reported [here](https://adafru.it/18eb) (https://adafru.it/18eb) and [here](https://adafru.it/18ec) (https://adafru.it/18ec)).

Device Errors or Problems on Windows

Windows can become confused about USB device installations. This is particularly true of Windows 7 and 8.1. It is [recommended](https://adafru.it/Amd) (https://adafru.it/Amd) that you upgrade to Windows 10 if possible; an upgrade is probably still free for you: see this [link](https://adafru.it/V2a) (https://adafru.it/V2a).

If not, try cleaning up your USB devices. Use [Uwe Sieber's Device Cleanup Tool](https://adafru.it/RWd) (https://adafru.it/RWd) (on that page, scroll down to "Device Cleanup Tool"). Download and unzip the tool. Unplug all the boards and other USB devices you want to clean up. Run the tool as Administrator. You will see a listing like this, probably with many more devices. It is listing all the USB devices that are not currently attached.

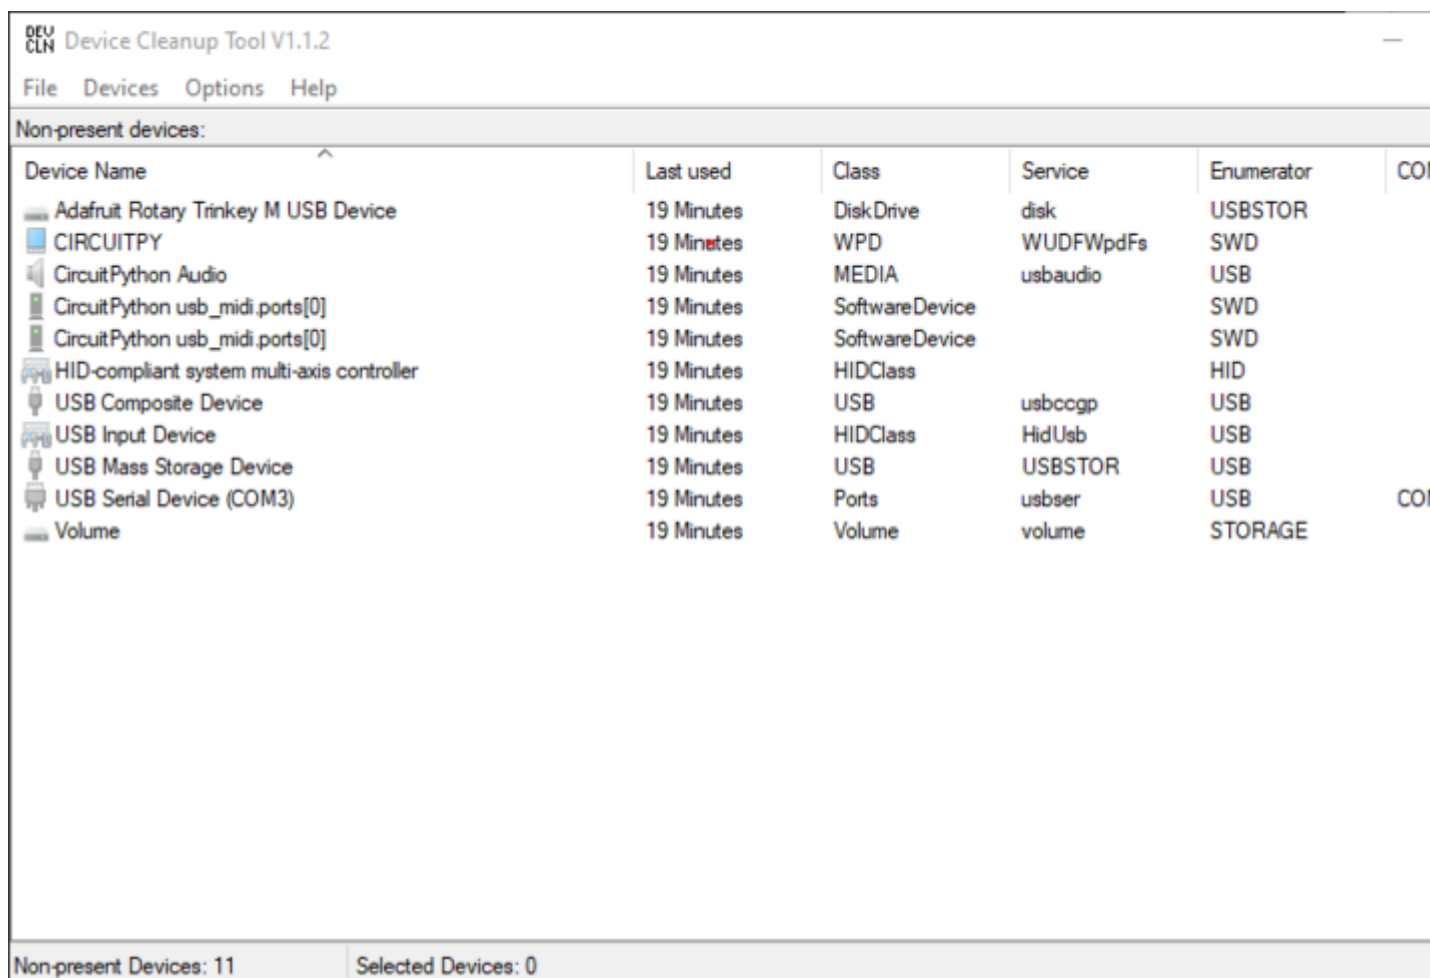

The screenshot shows the 'Device Cleanup Tool V1.1.2' window. It has a menu bar with 'File', 'Devices', 'Options', and 'Help'. Below the menu is a section titled 'Non-present devices:' which contains a table of devices. The table has columns for 'Device Name', 'Last used', 'Class', 'Service', 'Enumerator', and 'COM Port'. The devices listed are:

Device Name	Last used	Class	Service	Enumerator	COM Port
Adafruit Rotary Trinkey M USB Device	19 Minutes	Disk Drive	disk	USBSTOR	
CIRCUITPY	19 Minutes	WPD	WUDFWpdFs	SWD	
CircuitPython Audio	19 Minutes	MEDIA	usbaudio	USB	
CircuitPython usb_midi.ports[0]	19 Minutes	SoftwareDevice		SWD	
CircuitPython usb_midi.ports[0]	19 Minutes	SoftwareDevice		SWD	
HID-compliant system multi-axis controller	19 Minutes	HIDClass		HID	
USB Composite Device	19 Minutes	USB	usbccgp	USB	
USB Input Device	19 Minutes	HIDClass	HidUsb	USB	
USB Mass Storage Device	19 Minutes	USB	USBSTOR	USB	
USB Serial Device (COM3)	19 Minutes	Ports	usbser	USB	
Volume	19 Minutes	Volume	volume	STORAGE	

At the bottom of the window, there are two status bars: 'Non-present Devices: 11' and 'Selected Devices: 0'.

Select all the devices you want to remove, and then press Delete. It is usually safe just to select everything. Any device that is removed will get a fresh install when you plug it in. Using the Device Cleanup Tool also discards all the COM port assignments for the unplugged boards. If you

have used many Arduino and CircuitPython boards, you have probably seen higher and higher COM port numbers used, seemingly without end. This will fix that problem.

Serial Console in Mu Not Displaying Anything

There are times when the serial console will accurately not display anything, such as, when no code is currently running, or when code with no serial output is already running before you open the console. However, if you find yourself in a situation where you feel it should be displaying something like an error, consider the following.

Depending on the size of your screen or Mu window, when you open the serial console, the serial console panel may be very small. This can be a problem. A basic CircuitPython error takes 10 lines to display!

```
Auto-reload is on. Simply save files over USB to run them or enter REPL to
code.py output:
Traceback (most recent call last):
  File "code.py", line 7
SyntaxError: invalid syntax
```

Press any key to enter the REPL. Use CTRL-D to reload.

More complex errors take even more lines!

Therefore, if your serial console panel is five lines tall or less, you may only see blank lines or blank lines followed by Press any key to enter the REPL. Use CTRL-D to reload.. If this is the case, you need to either mouse over the top of the panel to utilise the option to resize the serial panel, or use the scrollbar on the right side to scroll up and find your message.



This applies to any kind of serial output whether it be error messages or print statements. So before you start trying to debug your problem on the hardware side, be sure to check that you haven't simply missed the serial messages due to serial output panel height.

code.py Restarts Constantly

CircuitPython will restart **code.py** if you or your computer writes to something on the CIRCUITPY drive. This feature is called auto-reload, and lets you test a change to your program immediately.

Some utility programs, such as backup, anti-virus, or disk-checking apps, will write to the CIRCUITPY as part of their operation. Sometimes they do this very frequently, causing constant restarts.

Acronis True Image and related Acronis programs on Windows are known to cause this problem. It is possible to prevent this by [disabling the](https://adafru.it/XDZ) ["Acronis Managed Machine Service Mini"](https://adafru.it/XDZ) (<https://adafru.it/XDZ>).

If you cannot stop whatever is causing the writes, you can disable auto-reload by putting this code in **boot.py** or **code.py**:

```
import supervisor

supervisor.runtime.autoreload = False
```

CircuitPython RGB Status Light

Nearly all CircuitPython-capable boards have a single NeoPixel or DotStar RGB LED on the board that indicates the status of CircuitPython. A few boards designed before CircuitPython existed, such as the Feather M0 Basic, do not.

Circuit Playground Express and Circuit Playground Bluefruit have multiple RGB LEDs, but do NOT have a status LED. The LEDs are all green when in the bootloader. In versions before 7.0.0, they do NOT indicate any status while running CircuitPython.

CircuitPython 7.0.0 and Later

The status LED blinks were changed in CircuitPython 7.0.0 in order to save battery power and simplify the blinks. These blink patterns will occur on single color LEDs when the board does not have any RGB LEDs. Speed and blink count also vary for this reason.

On start up, the LED will blink **YELLOW** multiple times for 1 second. Pressing the RESET button (or on Espressif, the BOOT button) during this time will restart the board and then enter safe mode. On Bluetooth capable boards, after the yellow blinks, there will be a set of faster blue blinks. Pressing reset during the **BLUE** blinks will clear Bluetooth information and start the device in discoverable mode, so it can be used with a BLE code editor.


Once started, CircuitPython will blink a pattern every 5 seconds when no user code is running to indicate why the code stopped:

- 1 **GREEN** blink: Code finished without error.
- 2 **RED** blinks: Code ended due to an exception. Check the serial console for details.
- 3 **YELLOW** blinks: CircuitPython is in safe mode. No user code was run. Check the serial console for safe mode reason.

When in the REPL, CircuitPython will set the status LED to **WHITE**. You can change the LED color from the REPL. The status indicator will not persist on non-NeoPixel or DotStar LEDs.

The CircuitPython Boot Sequence

Version 7.0 and later

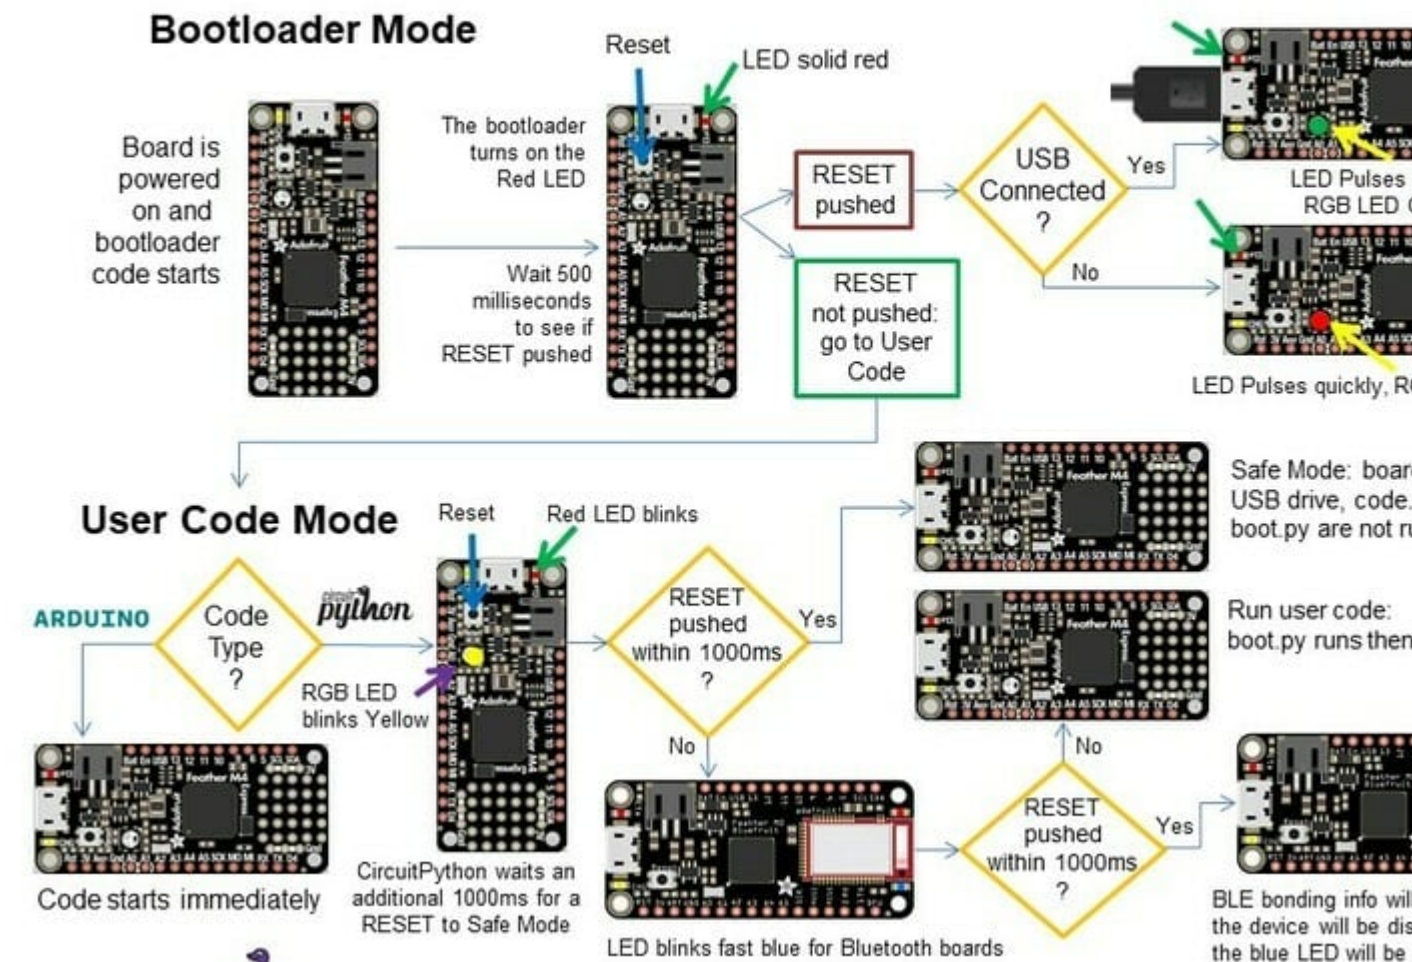

CircuitPython 6.3.0 and earlier

Here's what the colors and blinking mean:


- steady **GREEN**: **code.py** (or **code.txt**, **main.py**, or **main.txt**) is running
- pulsing **GREEN**: **code.py** (etc.) has finished or does not exist
- steady **YELLOW** at start up: (4.0.0-alpha.5 and newer) CircuitPython is waiting for a reset to indicate that it should start in safe mode
- pulsing **YELLOW**: Circuit Python is in safe mode: it crashed and restarted
- steady **WHITE**: REPL is running
- steady **BLUE**: **boot.py** is running

Colors with multiple flashes following indicate a Python exception and then indicate the line number of the error. The color of the first flash indicates the type of error:

- **GREEN**: IndentationError
- **CYAN**: SyntaxError
- **WHITE**: NameError
- **ORANGE**: OSError
- **PURPLE**: ValueError
- **YELLOW**: other error

These are followed by flashes indicating the line number, including place value. **WHITE** flashes are thousands' place, **BLUE** are hundreds' place, **YELLOW** are tens' place, and **CYAN** are one's place. So for example, an error on line 32 would flash **YELLOW** three times and then **CYAN** two times. Zeroes are indicated by an extra-long dark gap.

The CircuitPython Boot Sequence

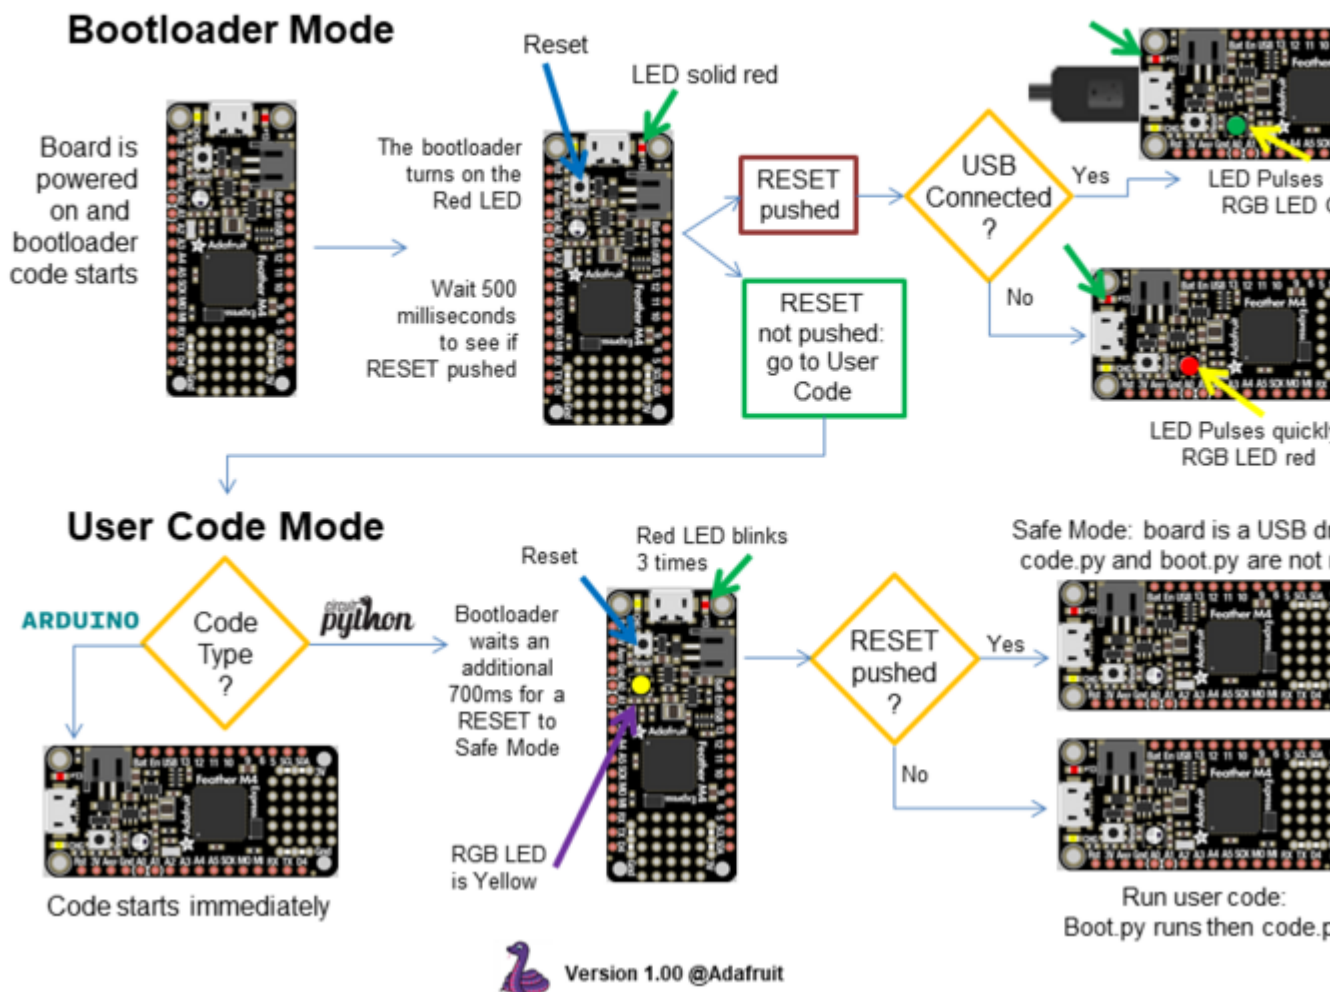

Serial console showing ValueError: Incompatible .mpy file

This error occurs when importing a module that is stored as a **.mpy** binary file that was generated by a different version of CircuitPython than the one its being loaded into. In particular, the mpy binary format changed between CircuitPython versions 6.x and 7.x, 2.x and 3.x, and 1.x and 2.x.

So, for instance, if you upgraded to CircuitPython 7.x from 6.x you'll need to download a newer version of the library that triggered the error on import. All libraries are available in the [Adafruit bundle](https://adafru.it/y8E) (<https://adafru.it/y8E>).

CIRCUITPY Drive Issues

You may find that you can no longer save files to your **CIRCUITPY** drive. You may find that your **CIRCUITPY** stops showing up in your file explorer, or shows up as **NO_NAME**. These are indicators that your filesystem has issues. When the **CIRCUITPY** disk is not safely ejected before being reset by the button or being disconnected from USB, it may corrupt the flash drive. It can happen on Windows, Mac or Linux, though it is more common on Windows.

Be aware, if you have used Arduino to program your board, CircuitPython is no longer able to provide the USB services. You will need to reload CircuitPython to resolve this situation.

The easiest first step is to reload CircuitPython. Double-tap reset on the board so you get a **boardnameBOOT** drive rather than a **CIRCUITPY** drive, and copy the latest version of CircuitPython (**.uf2**) back to the board. This may restore **CIRCUITPY** functionality.

If reloading CircuitPython does not resolve your issue, the next step is to try putting the board into safe mode.

Safe Mode

Whether you've run into a situation where you can no longer edit your **code.py** on your **CIRCUITPY** drive, your board has gotten into a state where **CIRCUITPY** is read-only, or you have turned off the **CIRCUITPY** drive altogether, safe mode can help.

Safe mode in CircuitPython does not run any user code on startup, and disables auto-reload. This means a few things. First, safe mode bypasses any code in **boot.py** (where you can set **CIRCUITPY** read-only or turn it off completely). Second, it does not run the code in **code.py**. And finally, it does not automatically soft-reload when data is written to the **CIRCUITPY** drive.

Therefore, whatever you may have done to put your board in a non-interactive state, safe mode gives you the opportunity to correct it without losing all of the data on the **CIRCUITPY** drive.

Entering Safe Mode in CircuitPython 7.x and Later

You can enter safe by pressing reset during the right time when the board boots. Immediately after the board starts up or resets, it waits one second. On some boards, the onboard status LED will blink yellow during that time. If you press reset during that one second period, the board will start up in safe mode. It can be difficult to react to the yellow LED, so you may want to think of it simply as a "slow" double click of the reset button. (Remember, a fast double click of reset enters the bootloader.)

Entering Safe Mode in CircuitPython 6.x

You can enter safe by pressing reset during the right time when the board boots.. Immediately after the board starts up or resets, it waits 700ms. On some boards, the onboard status LED (highlighted in green above) will turn solid yellow during this time. If you press reset during that 700ms, the board will start up in safe mode. It can be difficult to react to the yellow LED, so you may want to think of it simply as a slow double click of the reset button. (Remember, a fast double click of reset enters the bootloader.)

In Safe Mode

Once you've entered safe mode successfully in CircuitPython 6.x, the LED will pulse yellow.

If you successfully enter safe mode on CircuitPython 7.x, the LED will intermittently blink yellow three times.

If you connect to the serial console, you'll find the following message.

```
Auto-reload is off.
```

```
Running in safe mode! Not running saved code.
```

```
CircuitPython is in safe mode because you pressed the reset button during
```

```
Press any key to enter the REPL. Use CTRL-D to reload.
```

You can now edit the contents of the **CIRCUITPY** drive. Remember, your code will not run until you press the reset button, or unplug and plug in your board, to get out of safe mode.

At this point, you'll want to remove any user code in **code.py** and, if present, the **boot.py** file from **CIRCUITPY**. Once removed, tap the reset button, or unplug and plug in your board, to restart CircuitPython. This will restart the board and may resolve your drive issues. If resolved, you can begin coding again as usual.

If safe mode does not resolve your issue, the board must be completely erased and CircuitPython must be reloaded onto the board.

You WILL lose everything on the board when you complete the following steps. If possible, make a copy of your code before continuing.

To erase CIRCUITPY: `storage.erase_filesystem()`

CircuitPython includes a built-in function to erase and reformat the filesystem. If you have a version of CircuitPython older than 2.3.0 on your

board, you can [update to the newest version](https://adafru.it/Amd) (https://adafru.it/Amd) to do this.

1. [Connect to the CircuitPython REPL](https://adafru.it/Bec) (https://adafru.it/Bec) using Mu or a terminal program.
2. Type the following into the REPL:

```
>>> import storage
>>> storage.erase_filesystem()
```

CIRCUITPY will be erased and reformatted, and your board will restart.
That's it!

Erase CIRCUITPY Without Access to the REPL

If you can't access the REPL, or you're running a version of CircuitPython previous to 2.3.0 and you don't want to upgrade, there are options available for some specific boards.

The options listed below are considered to be the "old way" of erasing your board. The method shown above using the REPL is highly recommended as the best method for erasing your board.

If at all possible, it is recommended to use the REPL to erase your CIRCUITPY drive. The REPL method is explained above.

For the specific boards listed below:

If the board you are trying to erase is listed below, follow the steps to use the file to erase your board.

1. Download the correct erase file:

[Circuit Playground Express](https://adafru.it/AdI)

<https://adafru.it/AdI>

[Feather M0 Express](https://adafru.it/AdJ)

<https://adafru.it/AdJ>

[Feather M4 Express](https://adafru.it/EVK)

<https://adafru.it/EVK>

[Metro M0 Express](https://adafru.it/AdK)

<https://adafru.it/AdK>

[Metro M4 Express QSPI Eraser](https://adafru.it/EoM)

<https://adafru.it/EoM>

[Trellis M4 Express \(QSPI\)](https://adafru.it/DjD)

<https://adafru.it/DjD>

[Grand Central M4 Express \(QSPI\)](https://adafru.it/DBA)

<https://adafru.it/DBA>

[PyPortal M4 Express \(QSPI\)](https://adafru.it/Eca)

<https://adafru.it/Eca>

[Circuit Playground Bluefruit \(QSPI\)](https://adafru.it/Gnc)

<https://adafru.it/Gnc>

[Monster M4SK \(QSPI\)](https://adafru.it/GAN)

<https://adafru.it/GAN>

[PyBadge/PyGamer QSPI Eraser.UF2](https://adafru.it/GAO)

<https://adafru.it/GAO>

[CLUE_Flash_Erase.UF2](https://adafru.it/Jat)

<https://adafru.it/Jat>

[Matrix_Portal_M4_\(QSPI\).UF2](https://adafru.it/Q5B)

<https://adafru.it/Q5B>

[RP2040 boards \(flash_nuke.uf2\)](https://adafru.it/18ed)

<https://adafru.it/18ed>

2. Double-click the reset button on the board to bring up the **boardnameBOOT** drive.
3. Drag the erase **.uf2** file to the **boardnameBOOT** drive.
4. The status LED will turn yellow or blue, indicating the erase has started.
5. After approximately 15 seconds, the status LED will light up green. On the NeoTrellis M4 this is the first NeoPixel on the grid
6. Double-click the reset button on the board to bring up the **boardnameBOOT** drive.
7. [Drag the appropriate latest release of CircuitPython](https://adafru.it/Em8) (<https://adafru.it/Em8>) **.uf2** file to the **boardnameBOOT** drive.

It should reboot automatically and you should see **CIRCUITPY** in your file explorer again.

If the LED flashes red during step 5, it means the erase has failed. Repeat the steps starting with 2.

[If you haven't already downloaded the latest release of CircuitPython for your board, check out the installation page](https://adafru.it/Amd) (<https://adafru.it/Amd>). You'll also need to load your code and reinstall your libraries!

For SAMD21 non-Express boards that have a UF2 bootloader:

Any SAMD21-based microcontroller that does not have external flash available is considered a SAMD21 non-Express board. Non-Express boards that have a UF2 bootloader include Trinket M0, GEMMA M0, QT Py M0, and the SAMD21-based Trinkey boards.

If you are trying to erase a SAMD21 non-Express board, follow these steps to erase your board.

1. Download the erase file:

[SAMD21 non-Express Boards](https://adafru.it/VB-)

<https://adafru.it/VB->

2. Double-click the reset button on the board to bring up the **boardnameBOOT** drive.

3. Drag the erase **.uf2** file to the **boardnameBOOT** drive.
4. The boot LED will start flashing again, and the **boardnameBOOT** drive will reappear.
5. [Drag the appropriate latest release CircuitPython](https://adafru.it/Em8) (<https://adafru.it/Em8>) **.uf2** file to the boardnameBOOT drive.

It should reboot automatically and you should see **CIRCUITPY** in your file explorer again.

[If you haven't already downloaded the latest release of CircuitPython for your board, check out the installation page](https://adafru.it/Amd) (<https://adafru.it/Amd>) You'll also need to load your code and reinstall your libraries!

For SAMD21 non-Express boards that do not have a UF2 bootloader:


Any SAMD21-based microcontroller that does not have external flash available is considered a SAMD21 non-Express board. Non-Express boards that do **not** have a UF2 bootloader include the Feather M0 Basic Proto, Feather Adalogger, or the Arduino Zero.

If you are trying to erase a non-Express board that does not have a UF2 bootloader, [follow these directions to reload CircuitPython using bossac](https://adafru.it/Bed) (<https://adafru.it/Bed>), which will erase and re-create **CIRCUITPY**.

Running Out of File Space on SAMD21 Non-Express Boards

Any SAMD21-based microcontroller that does not have external flash available is considered a SAMD21 non-Express board. This includes boards like the Trinket M0, GEMMA M0, QT Py M0, and the SAMD21-based Trinky boards.

The file system on the board is very tiny. (Smaller than an ancient floppy disk.) So, its likely you'll run out of space but don't panic! There are a number of ways to free up space.

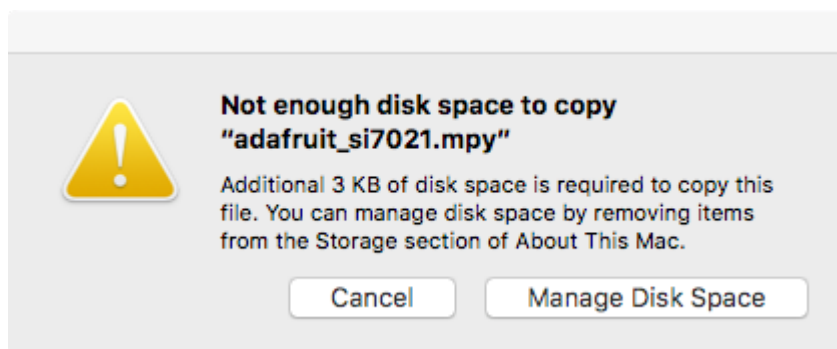

Delete something!

The simplest way of freeing up space is to delete files from the drive. Perhaps there are libraries in the **lib** folder that you aren't using anymore or test code that isn't in use. Don't delete the **lib** folder completely, though, just remove what you don't need.

The board ships with the Windows 7 serial driver too! Feel free to delete that if you don't need it or have already installed it. It's ~12KiB or so.

Use tabs

One unique feature of Python is that the indentation of code matters. Usually the recommendation is to indent code with four spaces for every indent. In general, that is recommended too. **However**, one trick to storing more human-readable code is to use a single tab character for indentation. This approach uses 1/4 of the space for indentation and can be significant when you're counting bytes.

On MacOS?

MacOS loves to generate hidden files. Luckily you can disable some of the extra hidden files that macOS adds by running a few commands to disable search indexing and create zero byte placeholders. Follow the steps below to maximize the amount of space available on macOS.

Prevent & Remove MacOS Hidden Files

First find the volume name for your board. With the board plugged in run this command in a terminal to list all the volumes:

```
ls -l /Volumes
```

Look for a volume with a name like **CIRCUITPY** (the default for CircuitPython). The full path to the volume is the **/Volumes/CIRCUITPY** path.

Now follow the [steps from this question](https://adafru.it/u1c) (https://adafru.it/u1c) to run these terminal commands that stop hidden files from being created on the board:

```
mdutil -i off /Volumes/CIRCUITPY
cd /Volumes/CIRCUITPY
rm -rf .{,_.}{fseventsd,Spotlight-V*,Trashes}
mkdir .fseventsd
touch .fseventsd/no_log .metadata_never_index .Trashes
cd -
```

Replace **/Volumes/CIRCUITPY** in the commands above with the full path to your board's volume if it's different. At this point all the hidden files should

be cleared from the board and some hidden files will be prevented from being created.

Alternatively, with CircuitPython 4.x and above, the special files and folders mentioned above will be created automatically if you erase and reformat the filesystem. **WARNING: Save your files first!** Do this in the REPL:

```
>>> import storage
>>> storage.erase_filesystem()
```

However there are still some cases where hidden files will be created by MacOS. In particular if you copy a file that was downloaded from the internet it will have special metadata that MacOS stores as a hidden file.

Luckily you can run a copy command from the terminal to copy files **without** this hidden metadata file. See the steps below.

Copy Files on MacOS Without Creating Hidden Files

Once you've disabled and removed hidden files with the above commands on macOS you need to be careful to copy files to the board with a special command that prevents future hidden files from being created.

Unfortunately you **cannot** use drag and drop copy in Finder because it will still create these hidden extended attribute files in some cases (for files downloaded from the internet, like Adafruit's modules).

To copy a file or folder use the **-X** option for the **cp** command in a terminal.

For example to copy a **file_name.mpy** file to the board use a command like:

```
cp -X file_name.mpy /Volumes/CIRCUITPY
```

(Replace **file_name.mpy** with the name of the file you want to copy.)

Or to copy a folder and all of the files and folders contained within, use a command like:

```
cp -rX folder_to_copy /Volumes/CIRCUITPY
```

If you are copying to the **lib** folder, or another folder, make sure it exists before copying.

```
# if lib does not exist, you'll create a file named lib !
cp -X file_name.mpy /Volumes/CIRCUITPY/lib
# This is safer, and will complain if a lib folder does not exist.
cp -X file_name.mpy /Volumes/CIRCUITPY/lib/
```

Other MacOS Space-Saving Tips

If you'd like to see the amount of space used on the drive and manually delete hidden files here's how to do so. First, move into the **Volumes/**

directory with `cd /Volumes/`, and then list the amount of space used on the **CIRCUITPY** drive with the `df` command.

```
Default (-bash)
Last login: Thu Oct 28 17:19:15 on ttys008

7039 kattni@robocrepe:~ $ cd /Volumes/

7040 kattni@robocrepe:Volumes $ df -h CIRCUITPY/
Filesystem      Size  Used Avail Capacity iused ifree %iused  Mounted on
/dev/disk2s1    47Ki  46Ki  1.0Ki   98%    512     0  100%  /Volumes/C
```

That's not very much space left! The next step is to show a list of the files currently on the **CIRCUITPY** drive, including the hidden files, using the `ls` command. You cannot use Finder to do this, you must do it via command line!

```
7041 kattni@robocrepe:Volumes $ ls -a CIRCUITPY/
.          ._trinket_code.py  code.py
..         .fseventsd        lib
.Trashes   .idea              original_code.py
._code.py  .metadata_never_index trinket_code.py
._original_code.py boot_out.txt

7042 kattni@robocrepe:Volumes $
```

There are a few of the hidden files that MacOS loves to generate, all of which begin with a `._` before the file name. Remove the `._` files using the `rm` command. You can remove them all once by running `rm CIRCUITPY/._*`. The `*` acts as a wildcard to apply the command to everything that begins with `._` at the same time.

```
7042 kattni@robocrepe:Volumes $ rm CIRCUITPY/._*

7043 kattni@robocrepe:Volumes $
```

Finally, you can run `df` again to see the current space used.

```
7043 kattni@robocrepe:Volumes $ df -h CIRCUITPY/
Filesystem      Size  Used Avail Capacity iused ifree %iused  Mounted on
/dev/disk2s1    47Ki  34Ki  13Ki    73%     512      0  100%    /Volumes/C
7044 kattni@robocrepe:Volumes $ █
```

Nice! You have 12Ki more than before! This space can now be used for libraries and code!

Device Locked Up or Boot Looping

In rare cases, it may happen that something in your **code.py** or **boot.py** files causes the device to get locked up, or even go into a boot loop. A boot loop occurs when the board reboots repeatedly and never fully loads. These are not caused by your everyday Python exceptions, typically it's the result of a deeper problem within CircuitPython. In this situation, it can be difficult to recover your device if **CIRCUITPY** is not allowing you to modify the **code.py** or **boot.py** files. Safe mode is one recovery option. When the device boots up in safe mode it will not run the **code.py** or **boot.py** scripts, but will still connect the **CIRCUITPY** drive so that you can remove or modify those files as needed.

The method used to manually enter safe mode can be different for different devices. It is also very similar to the method used for getting into bootloader mode, which is a different thing. So it can take a few tries to get the timing right. If you end up in bootloader mode, no problem, you can try again without needing to do anything else.

For most devices:


Press the reset button, and then when the RGB status LED blinks yellow, press the reset button again. Since your reaction time may not be that fast, try a "slow" double click, to catch the yellow LED on the second click.

For ESP32-S2 based devices:

Press and release the reset button, then press and release the boot button about 3/4 of a second later.

Refer to the diagrams above for boot sequence details.


Welcome to the Community!

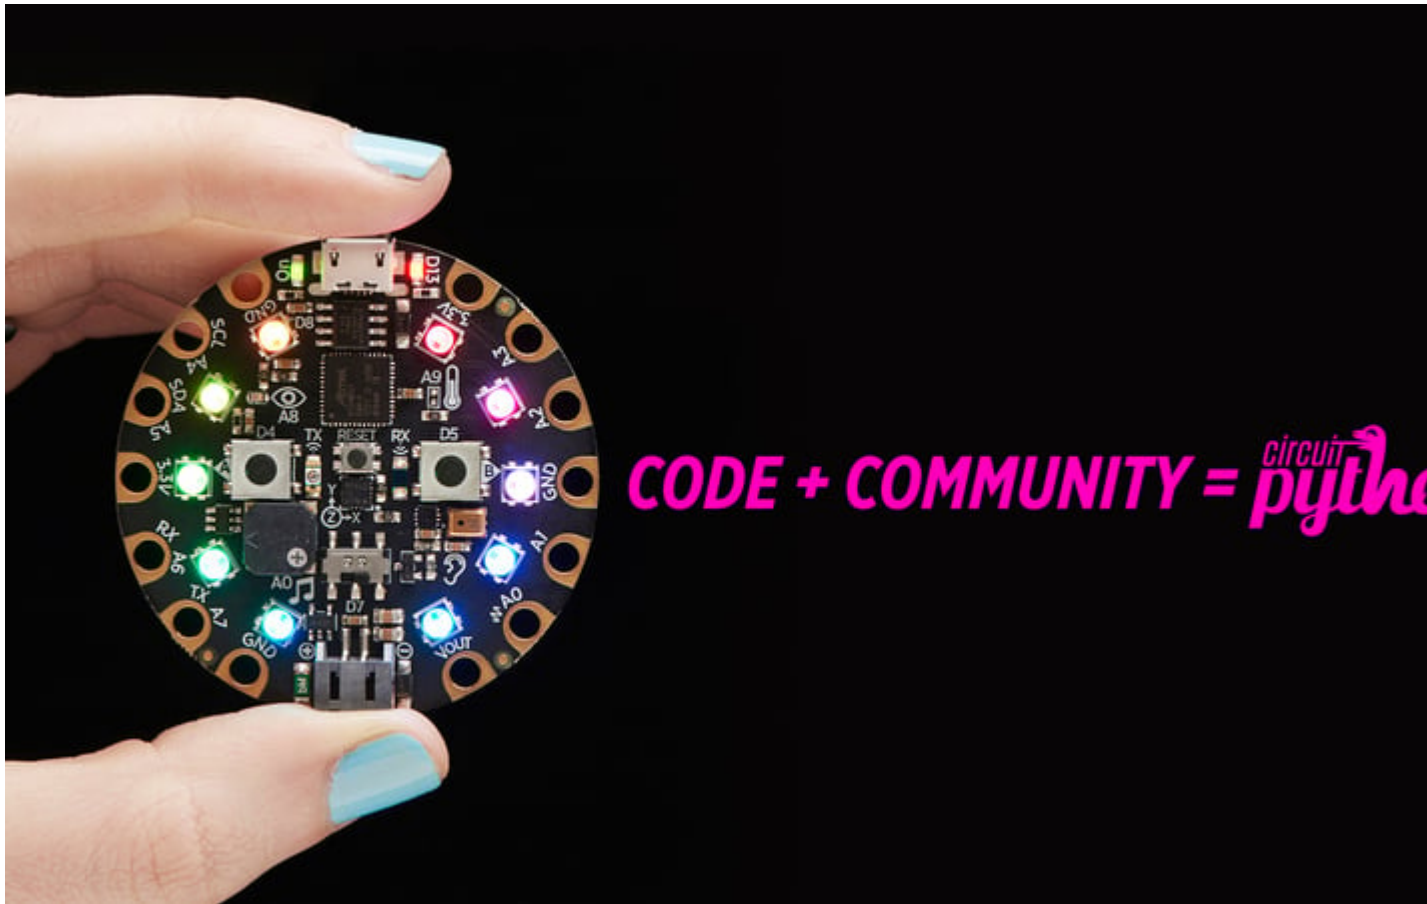

CircuitPython is a programming language that's super simple to get started with and great for learning. It runs on microcontrollers and works out of the box. You can plug it in and get started with any text editor. The best part? CircuitPython comes with an amazing, supportive community.

Everyone is welcome! CircuitPython is Open Source. This means it's available for anyone to use, edit, copy and improve upon. This also means CircuitPython becomes better because of you being a part of it. Whether this is your first microcontroller board or you're a seasoned software engineer, you have something important to offer the Adafruit CircuitPython community. This page highlights some of the many ways you can be a part of it!

Adafruit Discord

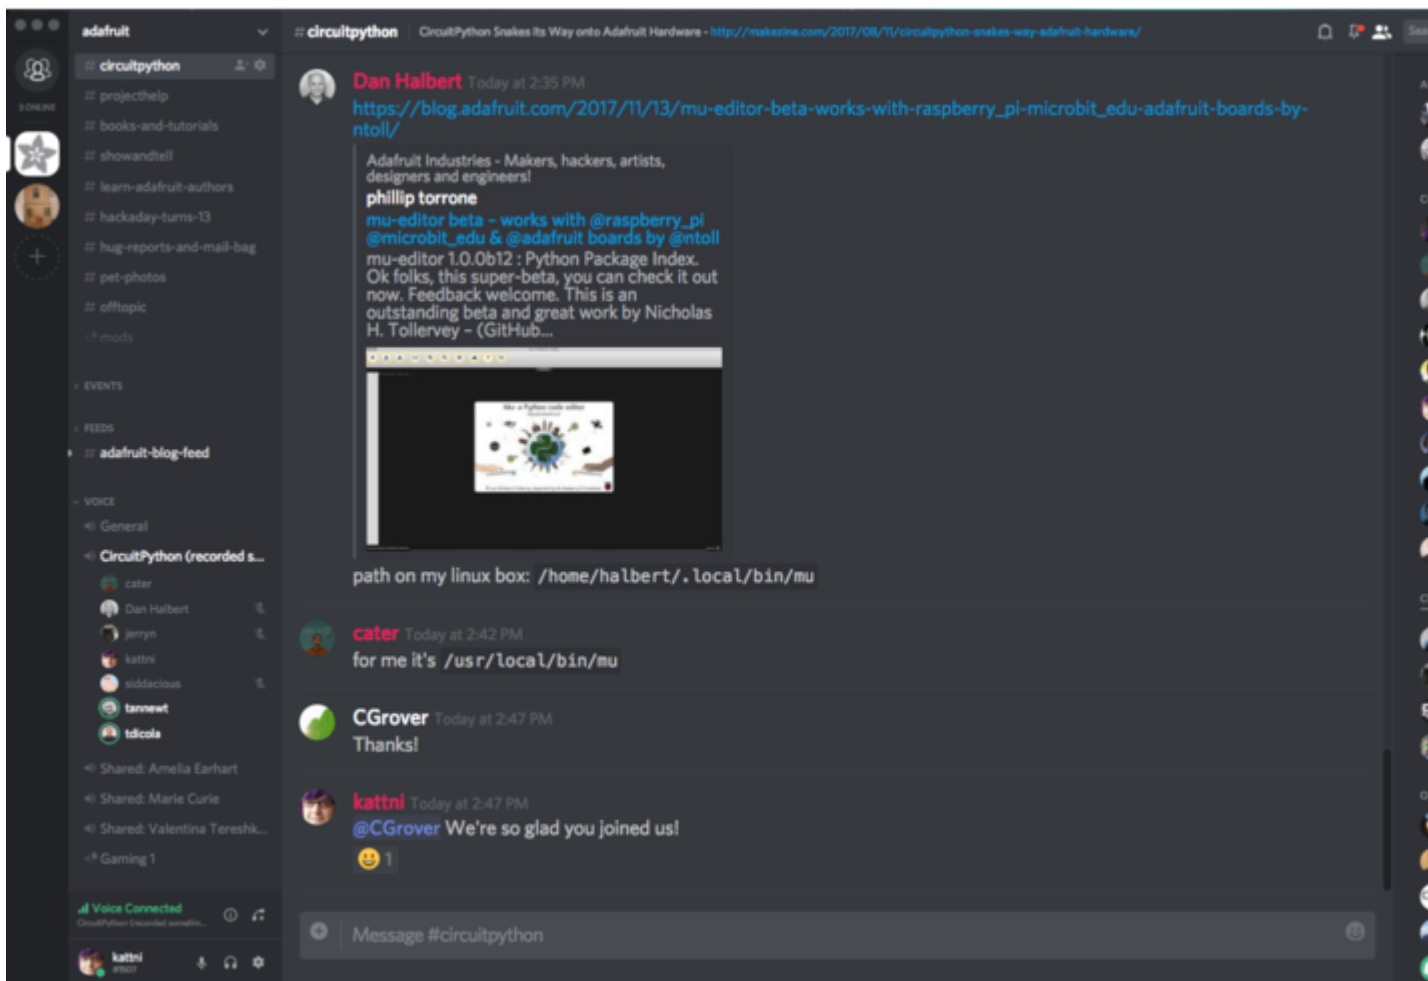

The Adafruit Discord server is the best place to start. Discord is where the community comes together to volunteer and provide live support of all kinds. From general discussion to detailed problem solving, and everything in between, Discord is a digital maker space with makers from around the world.

There are many different channels so you can choose the one best suited to your needs. Each channel is shown on Discord as "#channelname". There's the #help-with-projects channel for assistance with your current project or help coming up with ideas for your next one. There's the #show-and-tell channel for showing off your newest creation. Don't be afraid to ask a question in any channel! If you're unsure, #general is a great place to start. If another channel is more likely to provide you with a better answer, someone will guide you.

The help with CircuitPython channel is where to go with your CircuitPython questions. #help-with-circuitpython is there for new users and developers alike so feel free to ask a question or post a comment! Everyone of any experience level is welcome to join in on the conversation. Your contributions are important! The #circuitpython-dev channel is available for development discussions as well.

The easiest way to contribute to the community is to assist others on Discord. Supporting others doesn't always mean answering questions. Join in celebrating successes! Celebrate your mistakes! Sometimes just hearing that someone else has gone through a similar struggle can be enough to keep a maker moving forward.

The Adafruit Discord is the 24x7x365 hackerspace that you can bring your granddaughter to.

Visit <https://adafru.it/discord> ()to sign up for Discord. Everyone is looking forward to meeting you!

CircuitPython.org



Beyond the Adafruit Learn System, which you are viewing right now, the best place to find information about CircuitPython is [circuitpython.org](https://adafru.it/KJD) (<https://adafru.it/KJD>). Everything you need to get started with your new microcontroller and beyond is available. You can do things like [download CircuitPython for your microcontroller](https://adafru.it/Em8) (<https://adafru.it/Em8>) or [download the latest CircuitPython Library bundle](https://adafru.it/ENC) (<https://adafru.it/ENC>), or check out [which single board computers support Blinks](https://adafru.it/EA8) (<https://adafru.it/EA8>). You can also get to various other CircuitPython related things like Awesome CircuitPython or the Python for Microcontrollers newsletter. This is all incredibly useful, but it isn't necessarily community related. So why is it included here? The [Contributing page](https://adafru.it/VD7) (<https://adafru.it/VD7>).

Contributing

If you'd like to contribute to the CircuitPython project, the CircuitPython libraries are a great way to begin. This page is updated with daily status information from the CircuitPython libraries, including open pull requests, open issues and infrastructure issues.

Do you write a language other than English? Another great way to contribute to the project is to contribute new localizations (translations) of CircuitPython, or update current localizations, using [Weblate](#).

If this is your first time contributing, or you'd like to see our recommended contribution workflow, we have a guide [Contributing to CircuitPython with Git and Github](#). You can also find us in the #circuitpython channel on the [Adafruit Discord](#).

Have an idea for a new driver or library? [File an issue on the CircuitPython repo!](#)

CircuitPython itself is written in C. However, all of the Adafruit CircuitPython libraries are written in Python. If you're interested in contributing to CircuitPython on the Python side of things, check out [circuitpython.org/contributing](https://adafru.it/VD7) (<https://adafru.it/VD7>). You'll find information pertaining to every Adafruit CircuitPython library GitHub repository, giving you the opportunity to join the community by finding a contributing option that works for you.

Note the date on the page next to **Current Status for**:

Current Status for Tue, Nov 02, 2021

If you submit any contributions to the libraries, and do not see them reflected on the Contributing page, it could be that the job that checks for new updates hasn't yet run for today. Simply check back tomorrow!

Now, a look at the different options.

Pull Requests

The first tab you'll find is a list of **open pull requests**.

This is the current status of open pull requests and issues across all of the library repos.

Open Pull Requests

- Adafruit_CircuitPython_AdafruitIO
 - [Call `wifi.connect\(\)` after `wifi.reset\(\)`](#) (Open 113 days)
- Adafruit_CircuitPython_ADS1x15
 - [Supress f-string recommendation in `.pylintrc`](#) (Open 1 days)
- Adafruit_CircuitPython_ADT7410
 - [Adding critical temp features](#) (Open 168 days)

GitHub pull requests, or PRs, are opened when folks have added something to an Adafruit CircuitPython library GitHub repo, and are asking for Adafruit to add, or merge, their changes into the main library code. For PRs to be merged, they must first be reviewed. Reviewing is a great way to contribute! Take a look at the list of open pull requests, and pick one that interests you. If you have the hardware, you can test code changes. If you don't, you can still check the code updates for syntax. In the case of documentation updates, you can verify the information, or check it for spelling and grammar. Once you've checked out the update, you can leave a comment letting us know that you took a look. Once you've done that for a while, and you're more comfortable with it, you can consider joining the CircuitPythonLibrarians review team. The more reviewers we have, the more authors we can support. Reviewing is a crucial part of an open source ecosystem, CircuitPython included.

Open Issues

The second tab you'll find is a list of **open issues**.

Sort by issue labels


Open Issues

- Adafruit_CircuitPython_74HC595
 - [Missing Type Annotations](#) (Open 34 days)
- Adafruit_CircuitPython_AdafruitIO
 - [Missing Type Annotations](#) (Open 34 days)
 - [use of `.` and `dot` and groups \(using `circuitpython`\)](#) (Open 125 days)

GitHub issues are filed for a number of reasons, including when there is a bug in the library or example code, or when someone wants to make a

feature request. Issues are a great way to find an opportunity to contribute directly to the libraries by updating code or documentation. If you're interested in contributing code or documentation, take a look at the open issues and find one that interests you.

If you're not sure where to start, you can search the issues by label. Labels are applied to issues to make the goal easier to identify at a first glance, or to indicate the difficulty level of the issue. Click on the dropdown next to "Sort by issue labels" to see the list of available labels, and click on one to choose it.

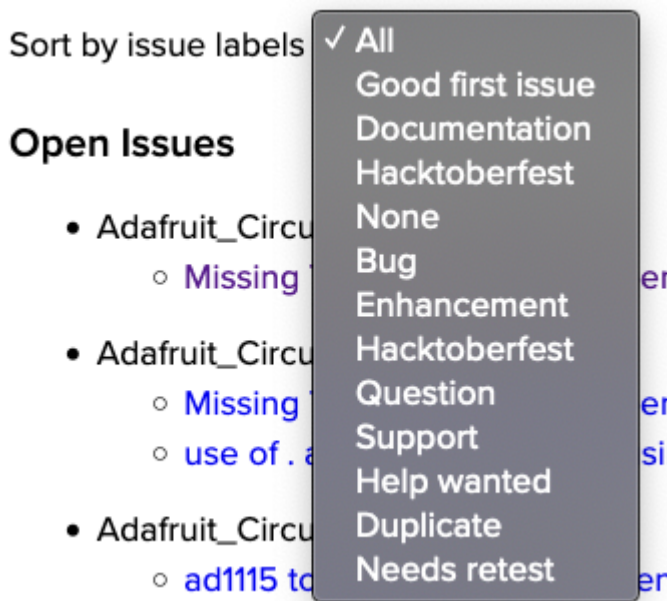

If you're new to everything, new to contributing to open source, or new to contributing to the CircuitPython project, you can choose "Good first issue". Issues with that label are well defined, with a finite scope, and are intended to be easy for someone new to figure out.

If you're looking for something a little more complicated, consider "Bug" or "Enhancement". The Bug label is applied to issues that pertain to problems or failures found in the library. The Enhancement label is applied to feature requests.

Don't let the process intimidate you. If you're new to Git and GitHub, there is [a guide](https://adafru.it/Dkh) (<https://adafru.it/Dkh>) to walk you through the entire process. As well, there are always folks available on [Discord](#) () to answer questions.

Library Infrastructure Issues

The third tab you'll find is a list of **library infrastructure issues**.

Library Infrastructure Issues

The following are issues with the library infrastructure. Having a standard library structure greatly improves overall maintainability. Accordingly, we have a series of checks to ensure the standard is met. Most of these are changes made via a pull request, however there are a few checks reported here that require changes to GitHub settings. If you are interested in addressing any of these issues, please feel free to contact us with any questions.

This section is generated by a script that runs checks on the libraries, and then reports back where there may be issues. It is made up of a list of subsections each containing links to the repositories that are experiencing that particular issue. This page is available mostly for internal use, but you may find some opportunities to contribute on this page. If there's an issue listed that sounds like something you could help with, mention it on Discord, or file an issue on GitHub indicating you're working to resolve that issue. Others can reply either way to let you know what the scope of it might be, and help you resolve it if necessary.

CircuitPython Localization

The fourth tab you'll find is the **CircuitPython Localization** tab.

CircuitPython Translation with Weblate




If you speak another language, you can help translate CircuitPython! The translations apply to informational and error messages that are within the CircuitPython core. It means that folks who do not speak English have the opportunity to have these messages shown to them in their own language when using CircuitPython. This is incredibly important to provide the best

experience possible for all users. CircuitPython uses Weblate to translate, which makes it much simpler to contribute translations. You will still need to know some CircuitPython-specific practices and a few basics about coding strings, but as with any CircuitPython contributions, folks are there to help.





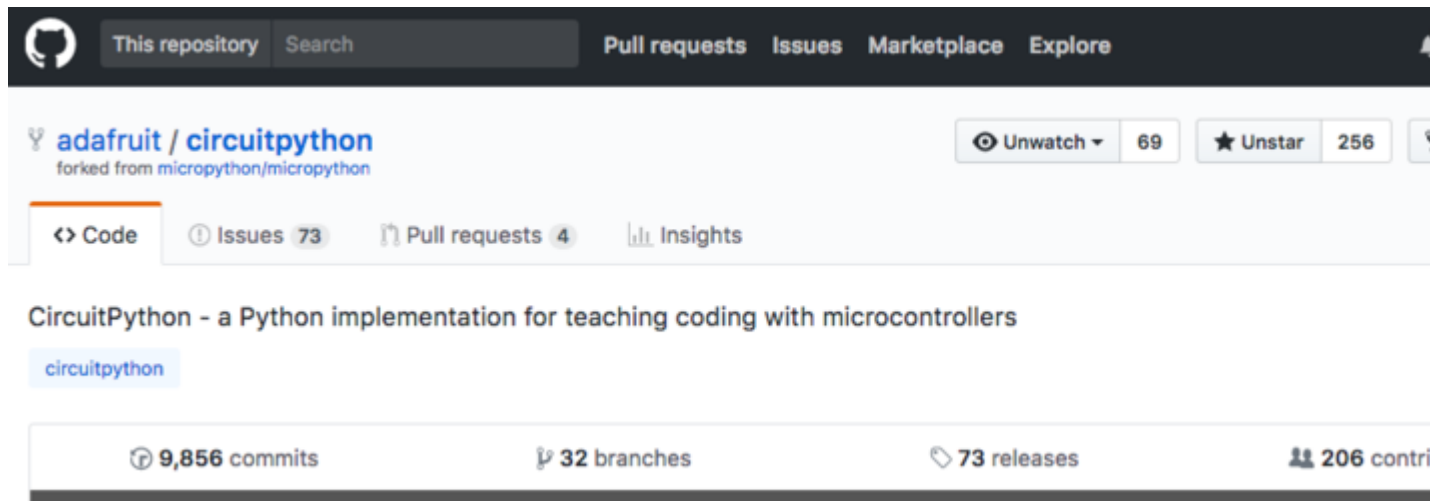

Regardless of your skill level, or how you want to contribute to the CircuitPython project, there is an opportunity available. The [Contributing page](https://adafru.it/VD7) (<https://adafru.it/VD7>) is an excellent place to start!

Adafruit GitHub



Whether you're just beginning or are life-long programmer who would like to contribute, there are ways for everyone to be a part of the CircuitPython project. The CircuitPython core is written in C. The libraries are written in Python. GitHub is the best source of ways to contribute to the [CircuitPython core](https://adafru.it/tB7) (<https://adafru.it/tB7>), and the [CircuitPython libraries](https://adafru.it/VFv) (<https://adafru.it/VFv>). If you need an account, visit <https://github.com/> (<https://adafru.it/d6C>) and sign up.

If you're new to GitHub or programming in general, there are great opportunities for you. For the CircuitPython core, head over to the CircuitPython repository on GitHub, click on "[Issues](https://adafru.it/tBb)" (<https://adafru.it/tBb>), and you'll find a list that includes issues labeled "[good first issue](https://adafru.it/188e)" (<https://adafru.it/188e>"). For the libraries, head over to the [Contributing page Issues list](https://adafru.it/VFv) (<https://adafru.it/VFv>), and use the drop down menu to search for "[good first issue](https://adafru.it/VFw)" (<https://adafru.it/VFw>"). These issues are things that have been identified as something that someone with any level of experience can help with. These issues include options like updating documentation, providing feedback, and fixing simple bugs. If you need help getting started with GitHub, there is an excellent guide on [Contributing to CircuitPython with Git and GitHub](https://adafru.it/Dkh) (<https://adafru.it/Dkh>).

<input type="checkbox"/>	 OneWire BusDevice driver good first issue #338 opened 29 days ago by tannewt  Long term
<input type="checkbox"/>	 Feather M0 Adalogger does not have D8 or D7 good first issue #323 opened on Oct 13 by ladyada  3.0
<input type="checkbox"/>	 Audit and fix native API for methods that accept and ignore extra args. good first issue #321 opened on Oct 12 by tannewt  Long term


Already experienced and looking for a challenge? Checkout the rest of either issues list and you'll find plenty of ways to contribute. You'll find all sorts of things, from new driver requests, to library bugs, to core module updates. There's plenty of opportunities for everyone at any level!

When working with or using CircuitPython or the CircuitPython libraries, you may find problems. If you find a bug, that's great! The team loves bugs! Posting a detailed issue to GitHub is an invaluable way to contribute to improving CircuitPython. For CircuitPython itself, file an issue [here](https://adafru.it/tBb) (https://adafru.it/tBb). For the libraries, file an issue on the specific library repository on GitHub. Be sure to include the steps to replicate the issue as well as any other information you think is relevant. The more detail, the better!

Testing new software is easy and incredibly helpful. Simply load the newest version of CircuitPython or a library onto your CircuitPython hardware, and use it. Let us know about any problems you find by posting a new issue to GitHub. Software testing on both stable and unstable releases is a very important part of contributing CircuitPython. The developers can't possibly find all the problems themselves! They need your help to make CircuitPython even better.

On GitHub, you can submit feature requests, provide feedback, report problems and much more. If you have questions, remember that Discord and the Forums are both there for help!

Adafruit Forums

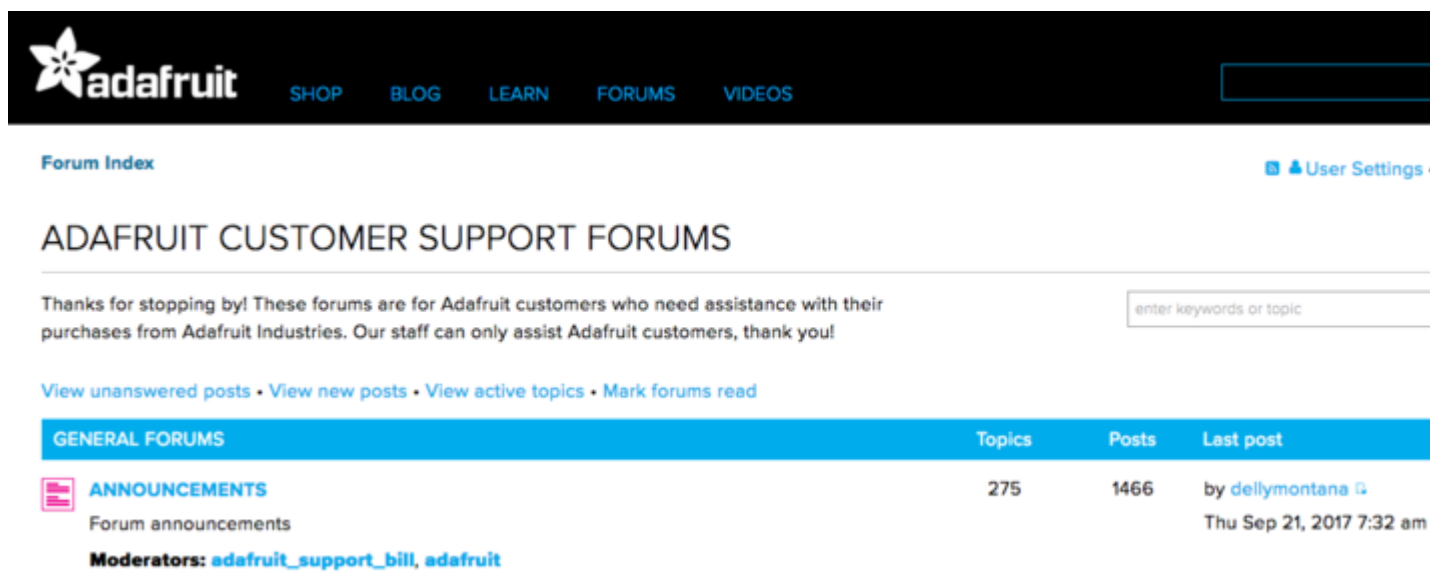



Forum Index User Settings

ADAFRUIT CUSTOMER SUPPORT FORUMS

Thanks for stopping by! These forums are for Adafruit customers who need assistance with their purchases from Adafruit Industries. Our staff can only assist Adafruit customers, thank you!

enter keywords or topic

[View unanswered posts](#) • [View new posts](#) • [View active topics](#) • [Mark forums read](#)

GENERAL FORUMS	Topics	Posts	Last post
 ANNOUNCEMENTS Forum announcements Moderators: adafruit_support_bill , adafruit	275	1466	by dellymontana  Thu Sep 21, 2017 7:32 am

The [Adafruit Forums](https://adafru.it/jIf) (<https://adafru.it/jIf>) are the perfect place for support. Adafruit has wonderful paid support folks to answer any questions you may have. Whether your hardware is giving you issues or your code doesn't seem to be working, the forums are always there for you to ask. You need an Adafruit account to post to the forums. You can use the same account you use to order from Adafruit.

While Discord may provide you with quicker responses than the forums, the forums are a more reliable source of information. If you want to be certain you're getting an Adafruit-supported answer, the forums are the best place to be.

There are forum categories that cover all kinds of topics, including everything Adafruit. The [Adafruit CircuitPython](https://adafru.it/xXA) (<https://adafru.it/xXA>) category under "Supported Products & Projects" is the best place to post your CircuitPython questions.

Adafruit CircuitPython

Moderators: [adafruit_support_bill](#), [adafruit](#)




POST A TOPIC

Search this forum...

SEARCH

[Mark topics read](#) • 4154 topics • Page 1 of 8

Please be positive and constructive with your questions and comments.

ANNOUNCEMENTS	Replies	Views	Last post
 CIRCUITPYTHON 7.2.0 ALPHA 1 RELEASED! by danhalbert » Tue Dec 28, 2021 11:55 pm	0	20	by danhalbert » Tue Dec 28, 2021 11:55 pm
 CIRCUITPYTHON 7.1.0 RELEASED! by danhalbert » Tue Dec 28, 2021 12:01 pm	1	32	by rpiloverbd » Wed Dec 29, 2021 5:53 am
 SAMD51 (M4) BOARD USERS: UPDATE YOUR BOOTLOADERS TO >=V3.9.0 by danhalbert » Fri May 08, 2020 12:55 pm	10	2428	by Guest » Sat Aug 15, 2020 11:28 pm

TOPICS	Replies	Views	Last post
--------	---------	-------	-----------

Be sure to include the steps you took to get to where you are. If it involves wiring, post a picture! If your code is giving you trouble, include your code in your post! These are great ways to make sure that there's enough information to help you with your issue.

You might think you're just getting started, but you definitely know something that someone else doesn't. The great thing about the forums is that you can help others too! Everyone is welcome and encouraged to provide constructive feedback to any of the posted questions. This is an excellent way to contribute to the community and share your knowledge!

Read the Docs

Adafruit CircuitPython
2.x

Search docs

API AND USAGE

Core Modules

Support Matrix

Modules

analogio — Analog hardware support

audiobusio — Support for audio input and output over digital bus

audioio — Support for audio input and output

bitbangio — Digital protocols implemented by the CPU

[Docs](#) » [Core Modules](#) » [audioio](#) — Support for audio input and output [Edit on GitHub](#)

audioio — Support for audio input and output

The `audioio` module contains classes to provide access to audio IO.

Libraries

- `AudioOut` — Output an analog audio signal

All classes change hardware state and should be deinitialized when they are no longer needed. The program continues after use. To do so, either call `deinit()` or use a context manager. See [ContextManagers](#) for more info.

[Previous](#)

[Read the Docs](https://adafru.it/Beg) (<https://adafru.it/Beg>) is an excellent resource for a more detailed look at the CircuitPython core and the CircuitPython libraries. This is where you'll find things like API documentation and example code. For an in depth look at viewing and understanding Read the Docs, check out the [CircuitPython Documentation](https://adafru.it/VFx) (<https://adafru.it/VFx>) page!

Here is blinky:

```
import time
import digitalio
import board

led = digitalio.DigitalInOut(board.LED)
led.direction = digitalio.Direction.OUTPUT
while True:
    led.value = True
    time.sleep(0.1)
    led.value = False
    time.sleep(0.1)
```

CircuitPython Essentials




You've been introduced to CircuitPython, and worked through getting everything set up. What's next? CircuitPython Essentials!

There are a number of core modules built into CircuitPython, which can be used along side the many CircuitPython libraries available. The following pages demonstrate some of these modules. Each page presents a different concept including a code example with an explanation. All of the examples are designed to work with your microcontroller board.

Time to get started learning the CircuitPython essentials!


Some examples require external components, such as switches or sensors. You'll find wiring diagrams where applicable to show you how to wire up the necessary components to work with each example.

The following components are needed to complete all of the examples:

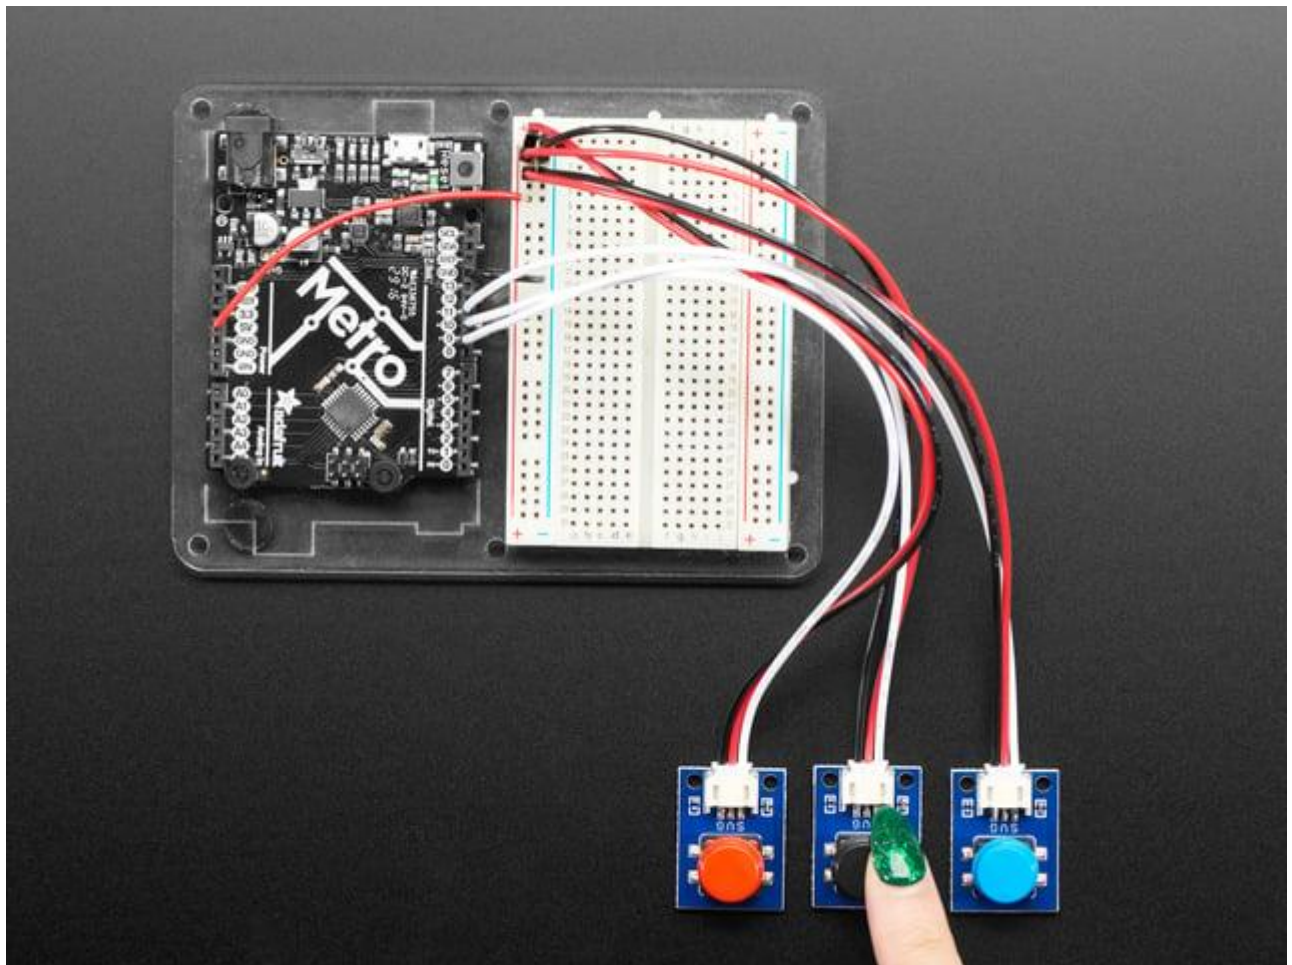

[STEMM](#)
[Tactile I](#)
[Button I](#)
[Color Pa](#)
Little cl
switches
standar
"buttons
electron
projects
are just
our Colo
Round..
[https://
www.ad
product](https://www.adproduct)

[STEMM](#)
[Potentic](#)
[Breakou](#)
[10K ohm](#)
For the
way pos
measure
turn to t
STEMM
potentic
breakou
This plu

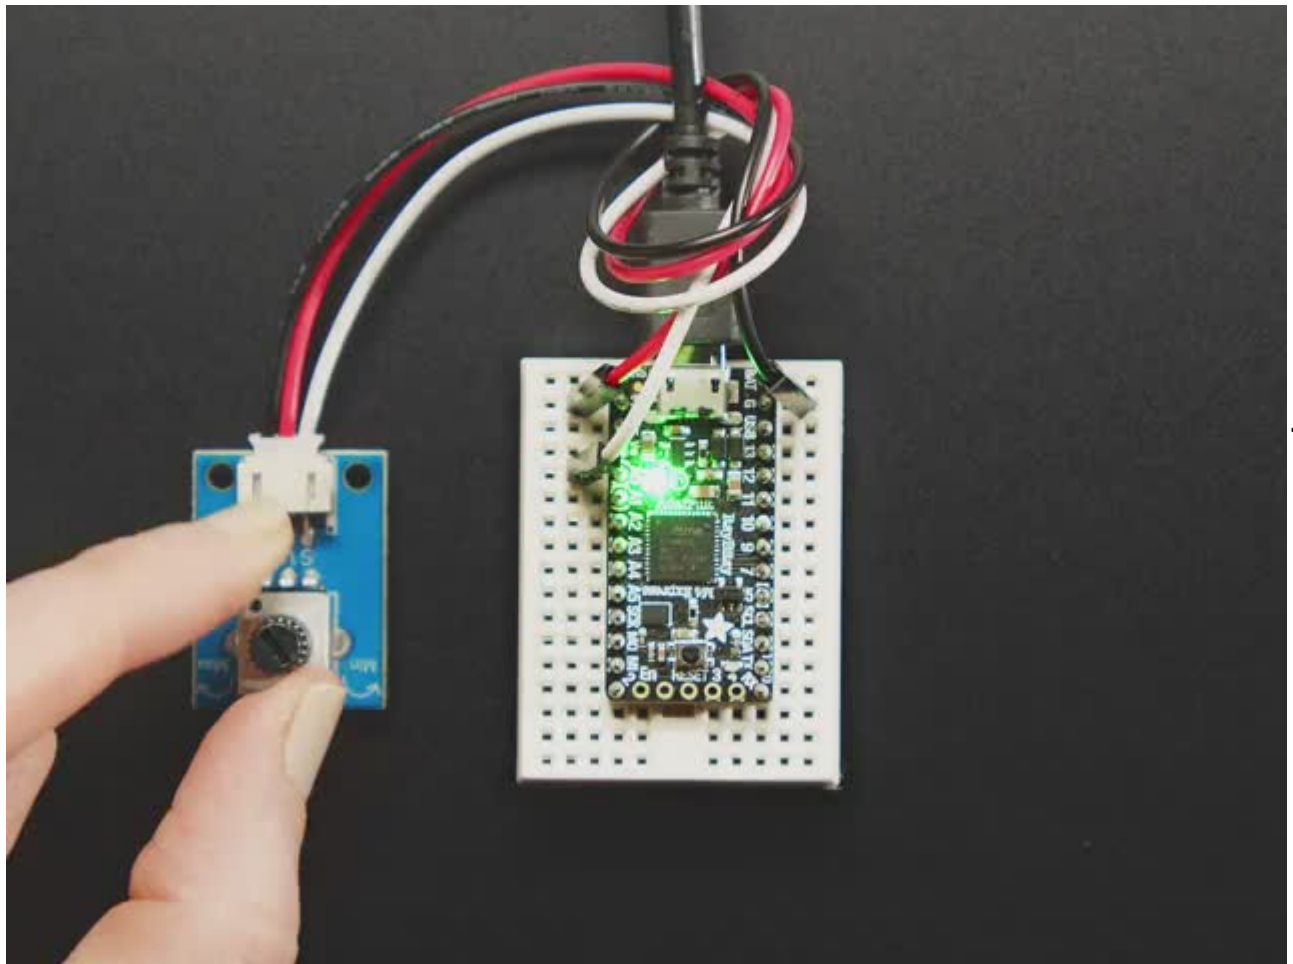

pot com
JST-PH 2
connect
matchin
[https://](https://www.aliexpress.com/item/1005001111111111.html)
[www.ad](https://www.aliexpress.com/item/1005001111111111.html)
product


STEMM
2mm 3-
Male He
Cable -
This cab
you turn
3-pin ca
into 3 in
wires w
quality
header
the end
carrying
match u
our...
[https://](https://www.aliexpress.com/item/1005001111111111.html)
[www.ad](https://www.aliexpress.com/item/1005001111111111.html)
product



[Adafruit](#)
[High Accuracy](#)
[I2C Temperature](#)
[Sensor Module](#)
The MCP9802 is a
digital
temperature
sensor in
the most
accurate
we've ever
with a typi
accuracy
 $\pm 0.25^{\circ}\text{C}$
sensor's s
to...
[https://
www.ad
product](https://www.adafruit.com/product/235)



[STEMM](#)
[Owiic JS](#)
[Pin Cab](#)
[Long](#)
This 4-w
is 50mm
long and
with JST
female 4
connect
both end
Compar
the chur
PH thes
pitch in
2mm, br
[https://](https://www.adafruit.com/product)
[www.ad](https://www.adafruit.com/product)
[product](https://www.adafruit.com/product)

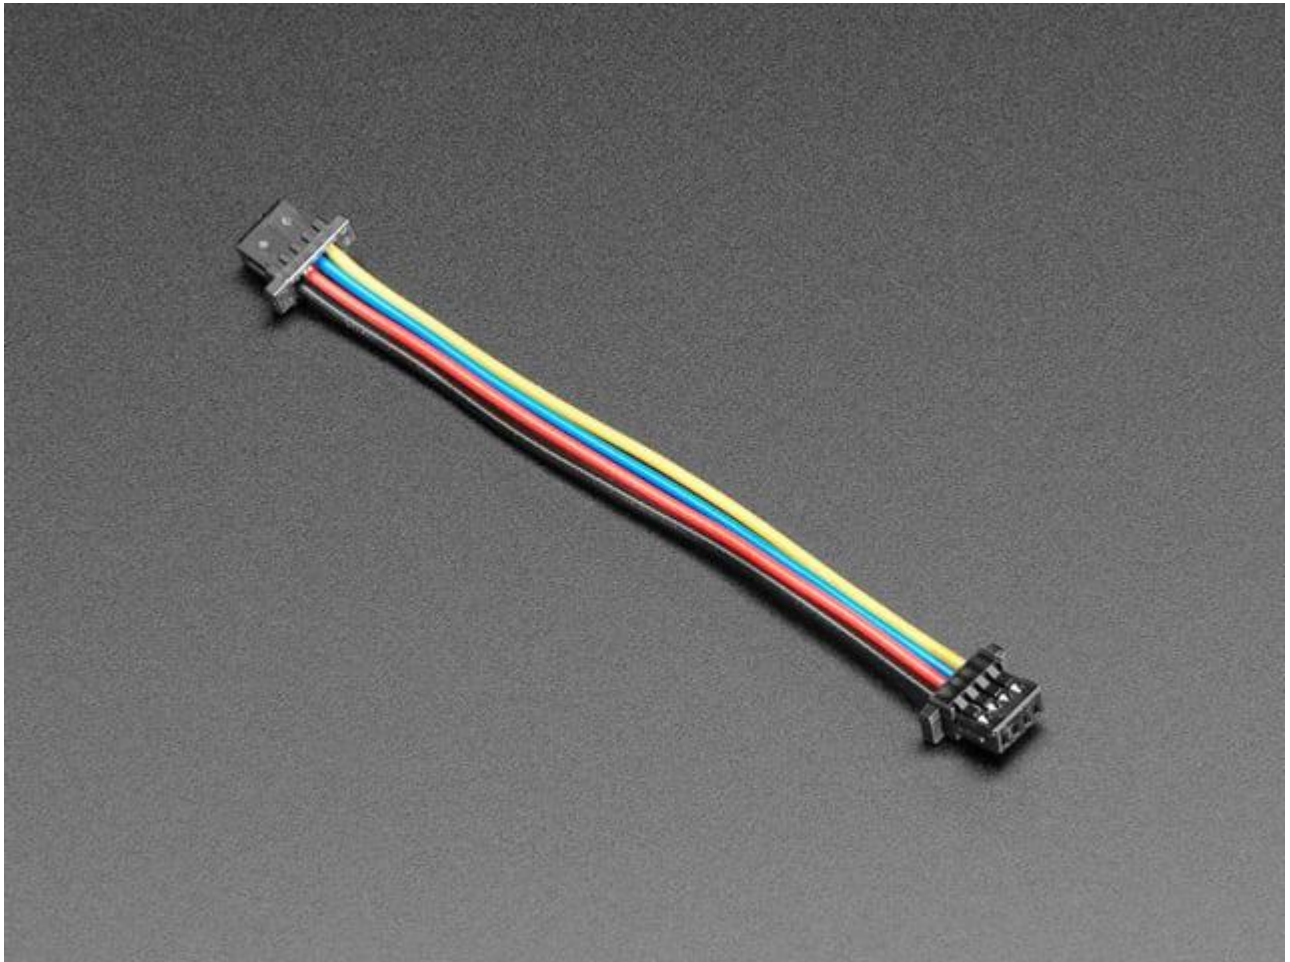


Blink

In learning any programming language, you often begin with some sort of Hello, World! program. In CircuitPython, Hello, World! is blinking an LED. Blink is one of the simplest programs in CircuitPython. It involves three built-in modules, two lines of set up, and a short loop. Despite its simplicity, it shows you many of the basic concepts needed for most CircuitPython programs, and provides a solid basis for more complex projects. Time to get blinky!

LED Location


The built-in LED is located between the USB-C port and the reset button. It's labeled **D13** on the silk.

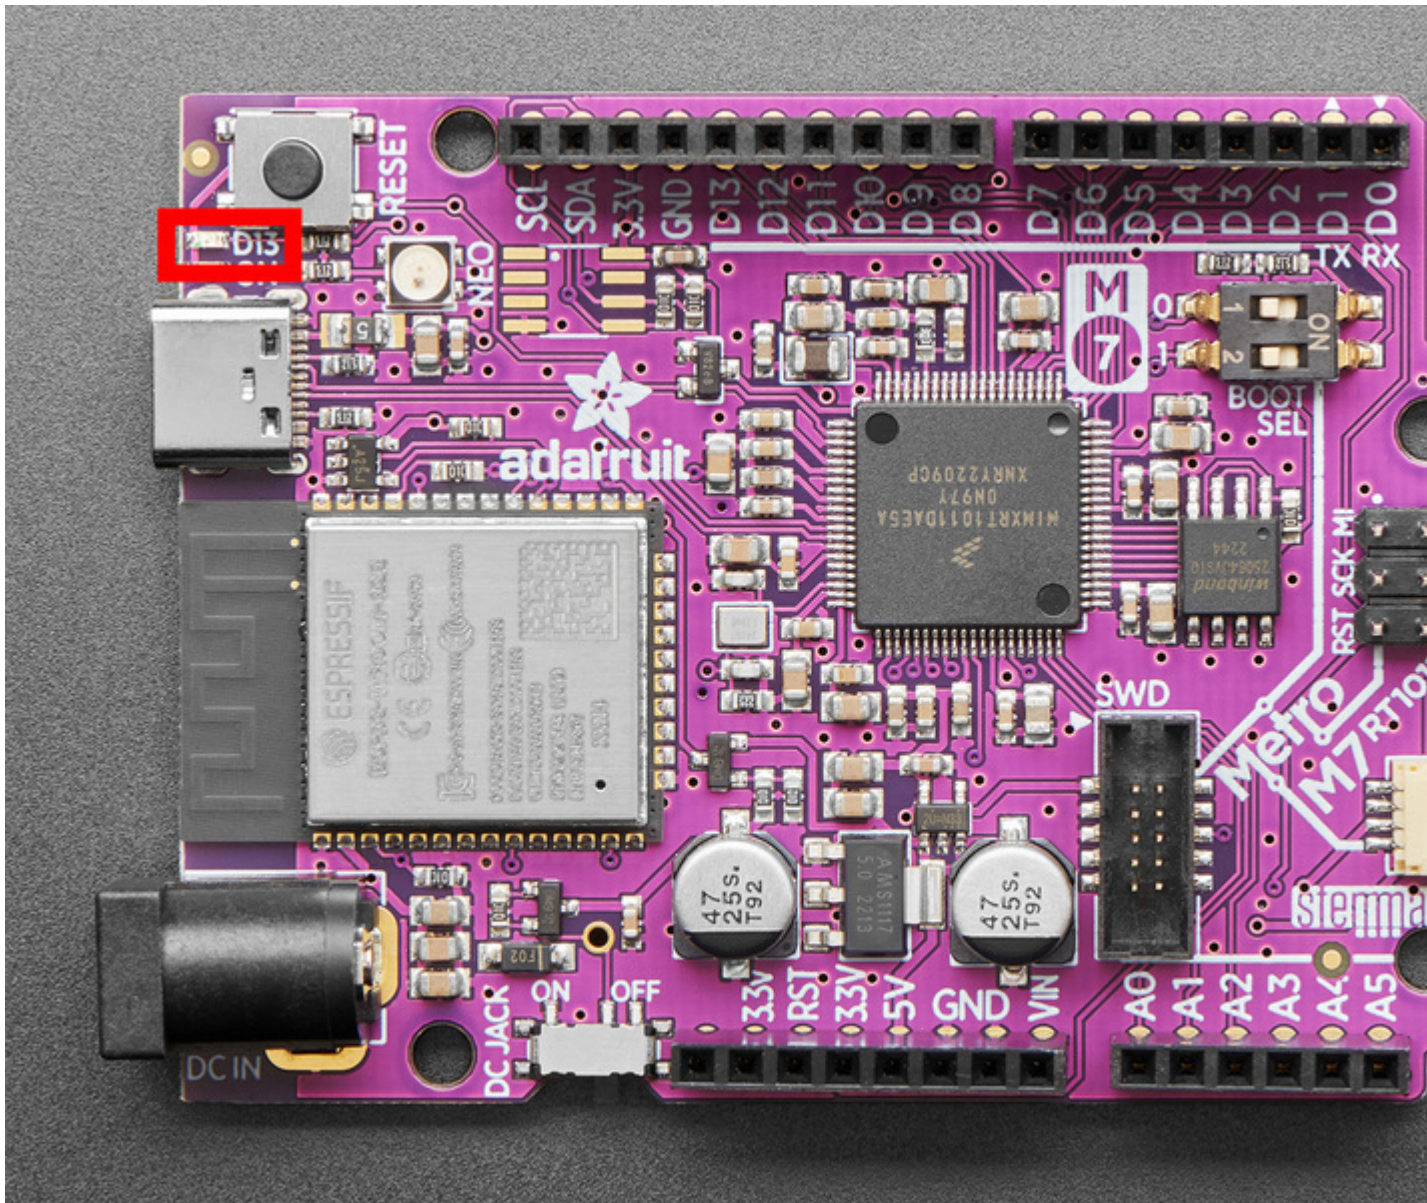

Blinking an LED

In the example below, click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, open the directory **CircuitPython_Templates/blink/** and then click on the directory that matches the version of CircuitPython you're using and copy the contents of that directory to your **CIRCUITPY** drive.

Your **CIRCUITPY** drive should now look similar to the following image:

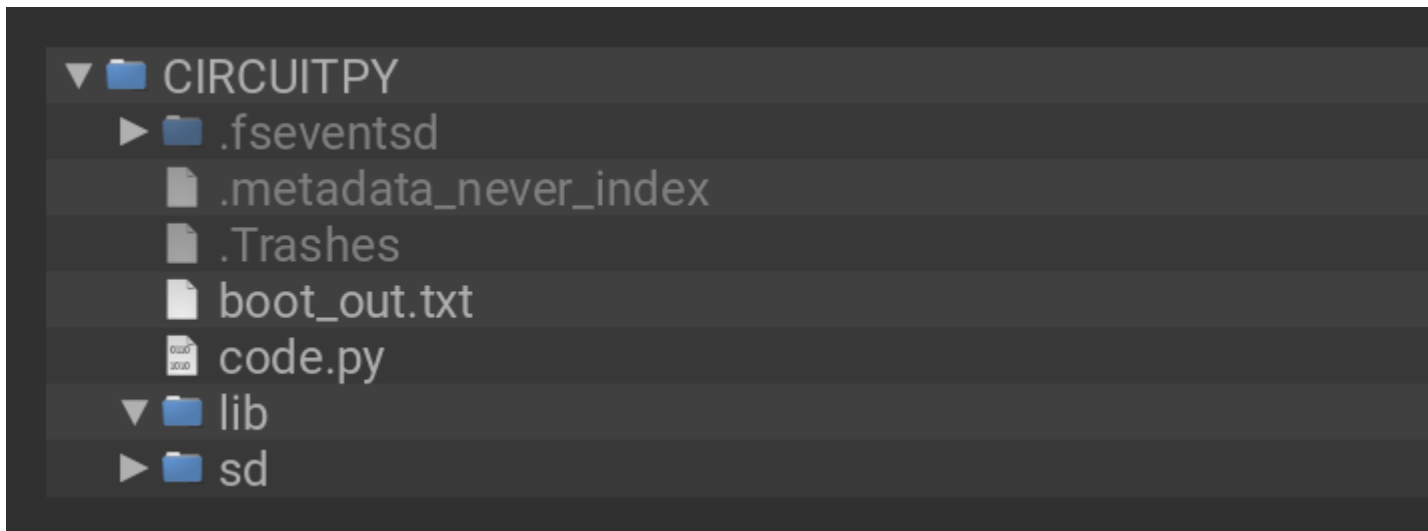

```
# SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
# SPDX-License-Identifier: MIT
"""CircuitPython Blink Example - the CircuitPython 'Hello, World!'"
import time
import board
import digitalio

led = digitalio.DigitalInOut(board.LED)
led.direction = digitalio.Direction.OUTPUT

while True:
    led.value = True
    time.sleep(0.5)
    led.value = False
    time.sleep(0.5)
```

The built-in LED begins blinking!

Note that the code is a little less "Pythonic" than it could be. It could also be written as `led.value = not led.value` with a single `time.sleep(0.5)`. That way is more difficult to understand if you're new to programming, so the example is a bit longer than it needed to be to make it easier to read.

It's important to understand what is going on in this program.

First you import three modules: `time`, `board` and `digitalio`. This makes these modules available for use in your code. All three are built-in to CircuitPython, so you don't need to download anything to get started.

Next, you set up the LED. To interact with hardware in CircuitPython, your code must let the board know where to look for the hardware and what to do with it. So, you create a `digitalio.DigitalInOut()` object, provide it the LED pin using the `board` module, and save it to the variable `led`. Then, you tell the pin to act as an `OUTPUT`.

Finally, you create a `while True:` loop. This means all the code inside the loop will repeat indefinitely. Inside the loop, you set `led.value = True`

which powers on the LED. Then, you use `time.sleep(0.5)` to tell the code to wait half a second before moving on to the next line. The next line sets `led.value = False` which turns the LED off. Then you use another `time.sleep(0.5)` to wait half a second before starting the loop over again.

With only a small update, you can control the blink speed. The blink speed is controlled by the amount of time you tell the code to wait before moving on using `time.sleep()`. The example uses `0.5`, which is one half of one second. Try increasing or decreasing these values to see how the blinking changes.


That's all there is to blinking an LED using CircuitPython!

Digital Input

The CircuitPython `digitalio` module has many applications. The basic Blink program sets up the LED as a digital output. You can just as easily set up a **digital input** such as a button to control the LED. This example builds on the basic Blink example, but now includes setup for a button switch. Instead of using the `time` module to blink the LED, it uses the status of the button switch to control whether the LED is turned on or off.

LED and Button

.

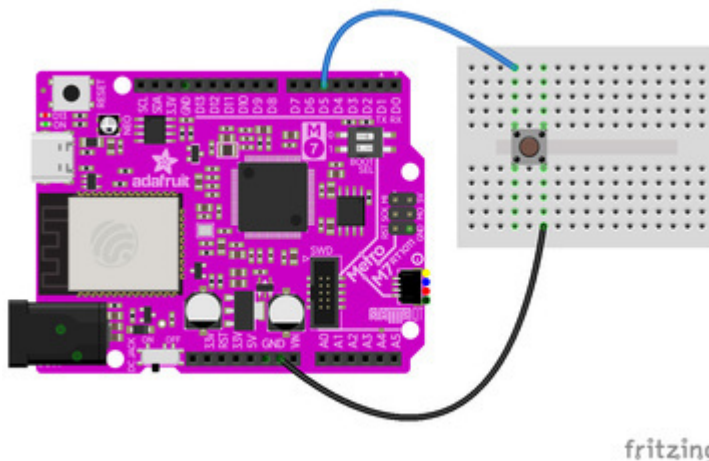

You'll attach a button to the Metro M7 to control the onboard LED.

- **Button input to board pin 5 (blue wire)**
- **Button ground to board GND (black wire)**

Controlling the LED with a Button

```
# SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
# SPDX-License-Identifier: MIT
"""
```

```
CircuitPython Digital Input Example - Blinking an LED using a button switch
"""
```


```
import board
import digitalio
```

```
led = digitalio.DigitalInOut(board.LED)
led.direction = digitalio.Direction.OUTPUT

button = digitalio.DigitalInOut(board.D5)
button.switch_to_input(pull=digitalio.Pull.UP)

while True:
    if not button.value:
        led.value = True
    else:
        led.value = False
```

Now, press the button. The LED lights up! Let go of the button and the LED turns off.

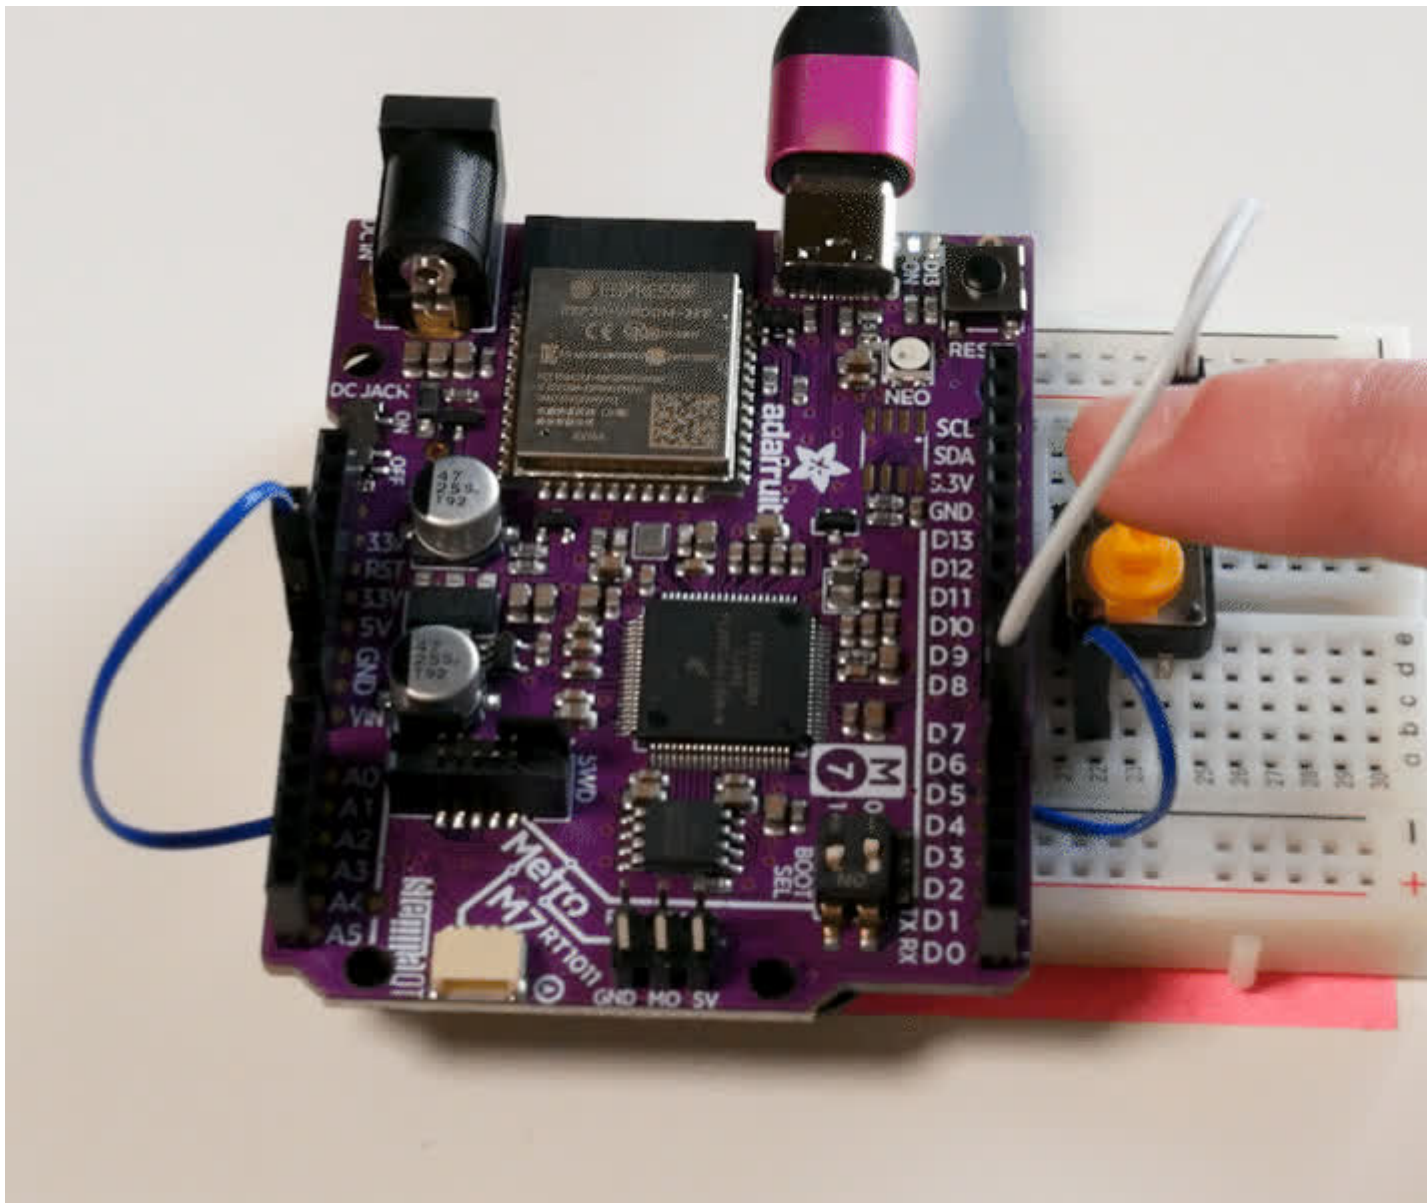

Note that the code is a little less "Pythonic" than it could be. It could also be written as `led.value = not button.value`. That way is more difficult to

understand if you're new to programming, so the example is a bit longer than it needed to be to make it easier to read.

First you import two modules: `board` and `digitalio`. This makes these modules available for use in your code. Both are built-in to CircuitPython, so you don't need to download anything to get started.

Next, you set up the LED. To interact with hardware in CircuitPython, your code must let the board know where to look for the hardware and what to do with it. So, you create a `digitalio.DigitalInOut()` object, provide it the LED pin using the `board` module, and save it to the variable `led`. Then, you tell the pin to act as an `OUTPUT`.

You include setup for the button as well. It is similar to the LED setup, except the button is an `INPUT`, and requires a pull up.

Inside the loop, you check to see if the button is pressed, and if so, turn on the LED. Otherwise the LED is off.

That's all there is to controlling an LED with a button switch!


Analog In

Your microcontroller board has both digital and analog signal capabilities. Some pins are analog, some are digital, and some are capable of both. Check the **Pinouts** page in this guide for details about your board.

Analog signals are different from digital signals in that they can be any voltage and can vary continuously and smoothly between voltages. An analog signal is like a dimmer switch on a light, whereas a digital signal is like a simple on/off switch.

Digital signals only can ever have two states, they are either are **on** (high logic level voltage like 3.3V) or **off** (low logic level voltage like 0V / ground).

By contrast, analog signals can be any voltage in-between on and off, such as 1.8V or 0.001V or 2.98V and so on.

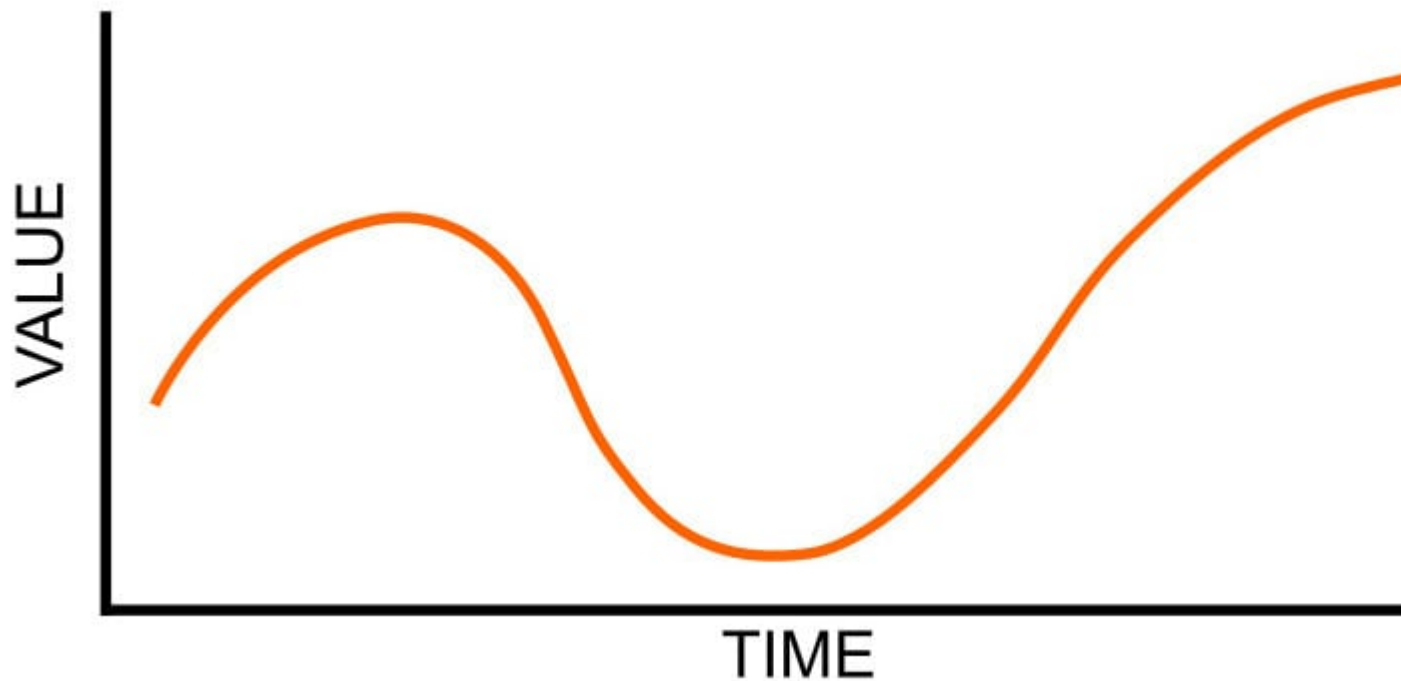


Analog signals are continuous values which means they can be an infinite number of different voltages. Think of analog signals like a floating point or fractional number, they can smoothly transiting to any in-between value like 1.8V, 1.81V, 1.801V, 1.8001V, 1.80001V and so forth to infinity.

Many devices use analog signals, in particular sensors typically output an analog signal or voltage that varies based on something being sensed like light, heat, humidity, etc.

Analog to Digital Converter (ADC)

An analog-to-digital-converter, or ADC, is the key to reading analog signals and voltages with a microcontroller. An ADC is a device that reads the voltage of an analog signal and converts it into a digital, or numeric, value. The microcontroller can't read analog signals directly, so the analog signal is first converted into a numeric value by the ADC.

The black line below shows a digital signal over time, and the red line shows the converted analog signal over the same amount of time.

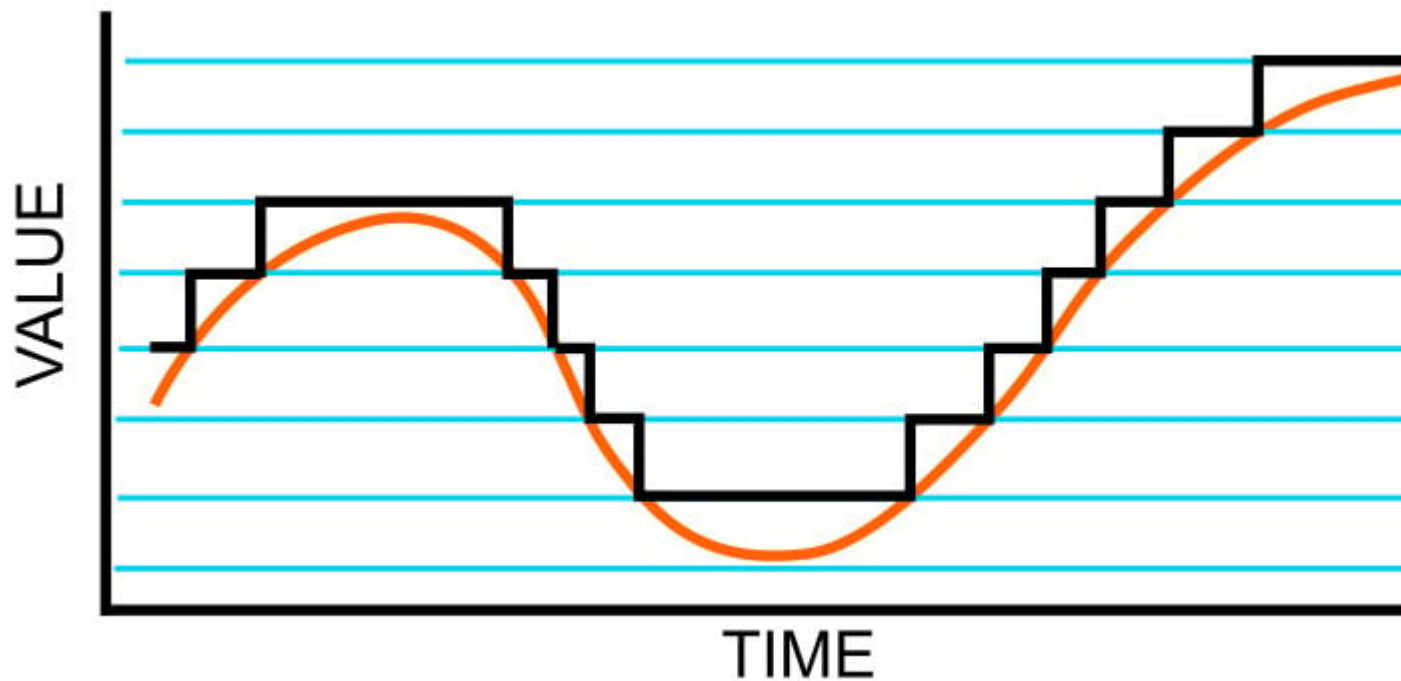


Once that analog signal has been converted by the ADC, the microcontroller can use those digital values any way you like!


Potentiometers

A potentiometer is a small variable resistor that you can twist a knob or shaft to change its resistance. It has three pins. By twisting the knob on the potentiometer you can change the resistance of the middle pin (called the wiper) to be anywhere within the range of resistance of the potentiometer.

By wiring the potentiometer to your board in a special way (called a voltage divider) you can turn the change in resistance into a change in voltage that your board's analog to digital converter can read.

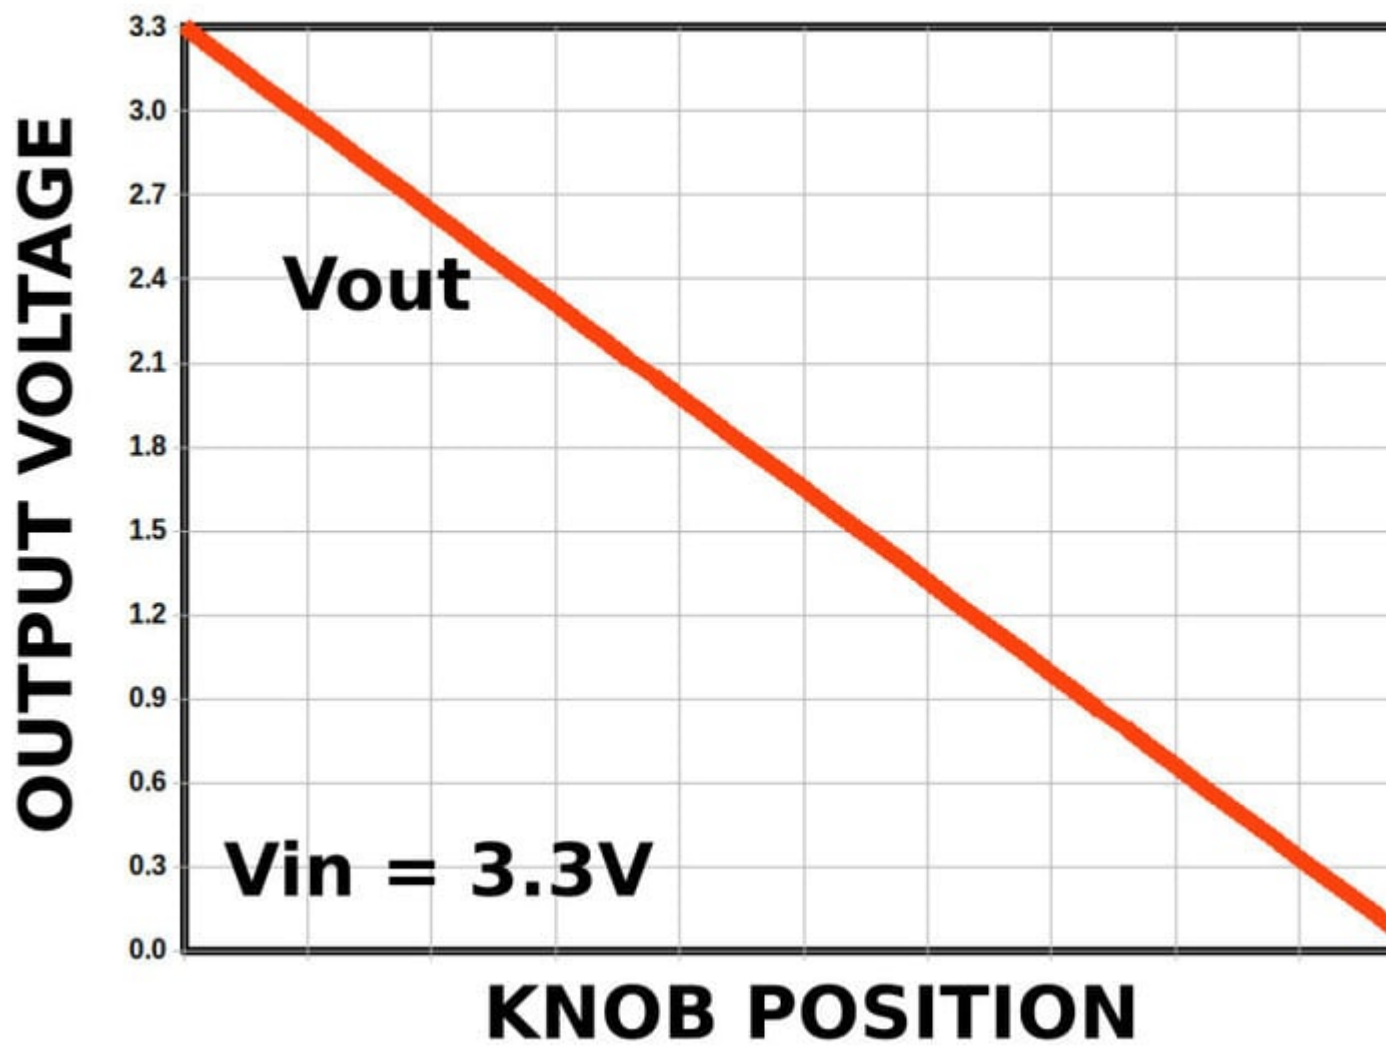

To wire up a potentiometer as a voltage divider:

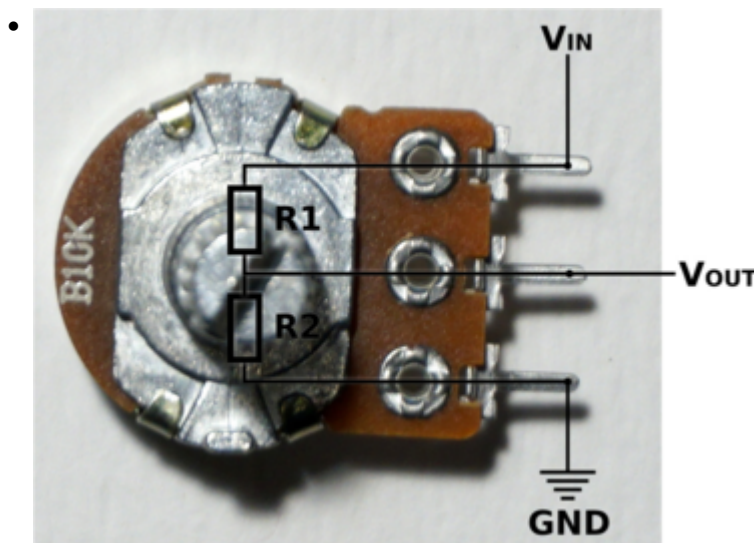


- Connect **one outside pin to ground**
- Connect **the other outside pin to voltage in (e.g. 3.3V)**
- Connect **the middle pin to an analog pin (e.g. A0)**

Hardware

In addition to your microcontroller board, you will need the following hardware to follow along with this example.

Potentiometer

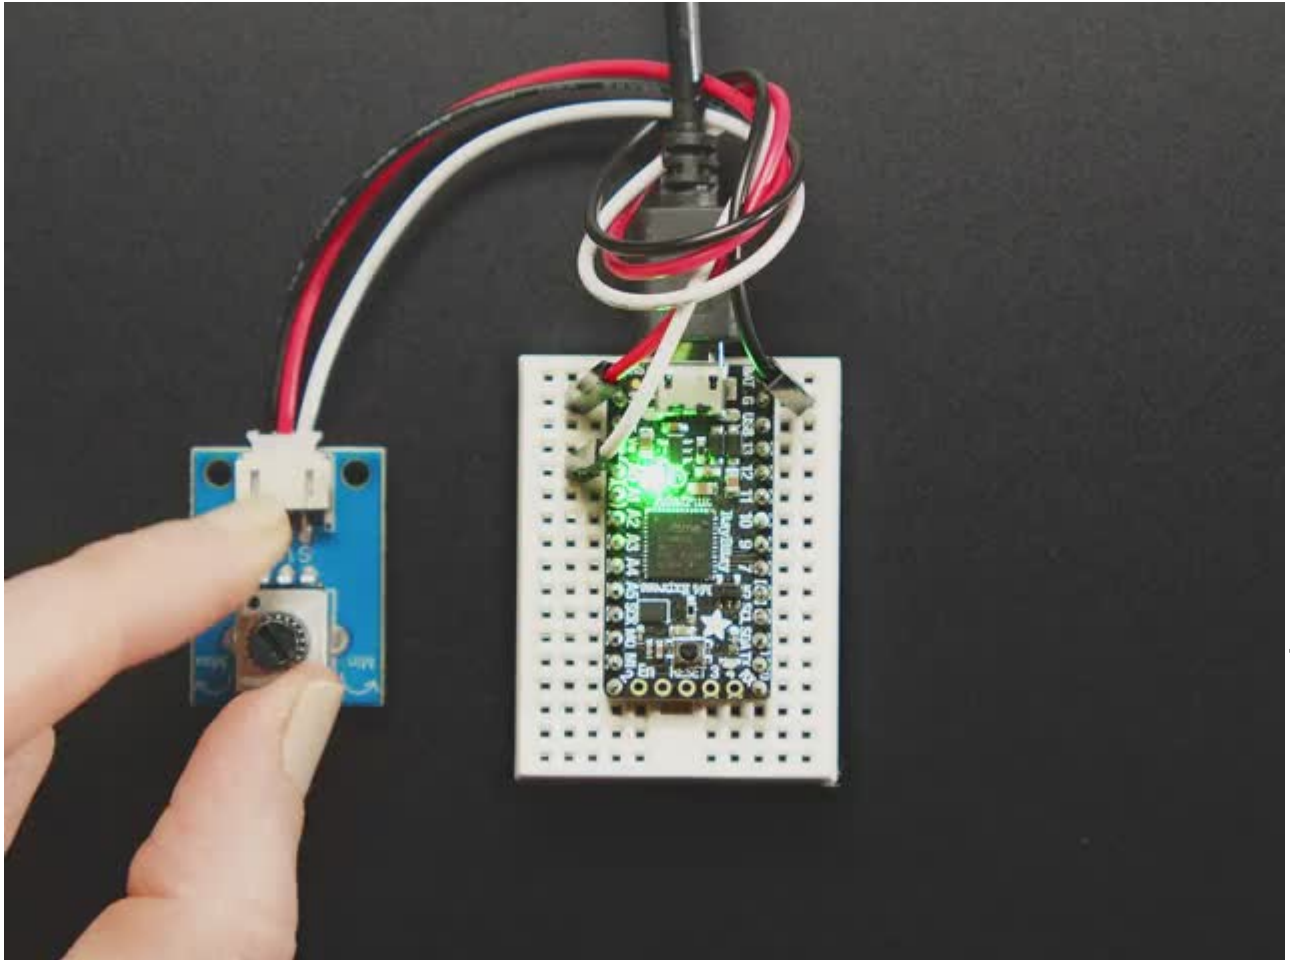


[STEMM Potentiometer Breakout 10K ohm](#)
For the way pos measure turn to the STEMM potentiometer breakout This plus pot com JST-PH 2 connect matchin <https://www.adproduct>

Wire Up the Potentiometer

Connect the potentiometer to your board as follows.

- **Pot ground to board GND (black wire)**
- **Pot wiper to board pin A0 (white wire)**
- **Pot VIN to board 3.3V (red wire)**

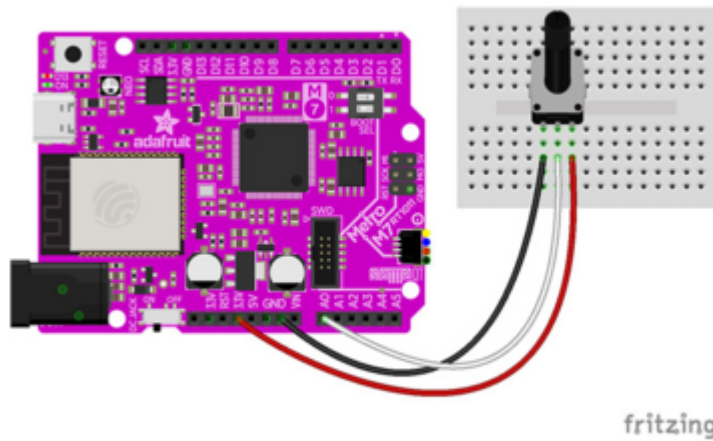

Reading Analog Pin Values

CircuitPython makes it easy to read analog pin values. Simply import two modules, set up the pin, and then print the value inside a loop.

You'll need to [connect to the serial console](https://adafru.it/Bec) (<https://adafru.it/Bec>) to see the values printed out.

In the example below, click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, open the directory **CircuitPython_Templates/analog_pin_values/** and then click on the directory that matches the version of CircuitPython you're using and copy the contents of that directory to your **CIRCUITPY** drive.

Your **CIRCUITPY** drive should now look similar to the following image:




```
# SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
# SPDX-License-Identifier: MIT
```

```
"""CircuitPython analog pin value example"""
import time
import board
import analogio

analog_pin = analogio.AnalogIn(board.A0)

while True:
    print(analog_pin.value)
    time.sleep(0.1)
```

Now, rotate the potentiometer to see the values change.

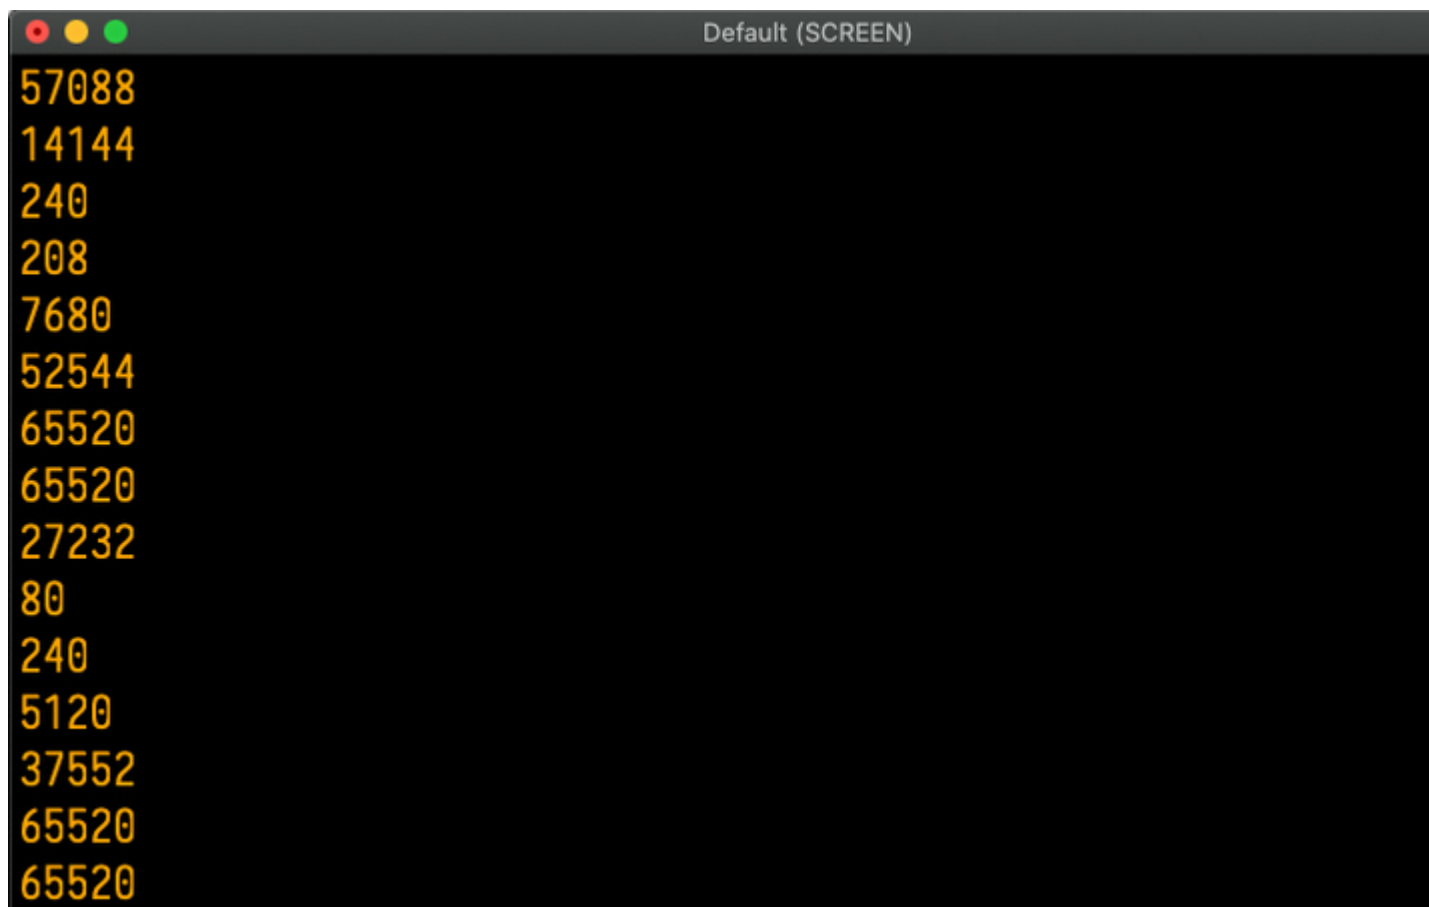

```
57088
14144
240
208
7680
52544
65520
65520
27232
80
240
5120
37552
65520
65520
```

What do these values mean? In CircuitPython ADC values are put into the range of 16-bit unsigned values. This means the possible values you'll read from the ADC fall within the range of 0 to 65535 (or $2^{16} - 1$). When you twist the potentiometer knob to be near ground, or as far to the left as possible, you see a value close to zero. When you twist it as far to the right as possible, near 3.3 volts, you see a value close to 65535. You're seeing almost the full range of 16-bit values!

The code is simple. You begin by importing three modules: `time`, `board` and `analogio`. All three modules are built into CircuitPython, so you don't need to download anything to get started.

Then, you set up the analog pin by creating an `analogio.AnalogIn()` object, providing it the desired pin using the board module, and saving it to the variable `analog_pin`.

Finally, in the loop, you print out the analog value with `analog_pin.value`, including a `time.sleep()` to slow down the values to a human-readable rate.

Reading Analog Voltage Values

These values don't necessarily equate to anything obvious. You can get an idea of the rotation of the potentiometer based on where in the range the value falls, but not without doing some math. Remember, you wired up the potentiometer as a voltage divider. By adding a simple function to your code, you can get a more human-readable value from the potentiometer.

You'll need to [connect to the serial console](https://adafru.it/Bec) (<https://adafru.it/Bec>) to see the values printed out.

In the example below, click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, open the directory **CircuitPython_Templates/analog_voltage_values/** and then click on the directory that matches the version of CircuitPython you're using and copy the contents of that directory to your **CIRCUITPY** drive.

Your **CIRCUITPY** drive should now look similar to the following image:




```
# SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
# SPDX-License-Identifier: MIT
"""CircuitPython analog voltage value example"""
import time
import board
import analogio

analog_pin = analogio.AnalogIn(board.A0)
```

```
def get_voltage(pin):  
    return (pin.value * 3.3) / 65535
```

```
while True:  
    print(get_voltage(analog_pin))  
    time.sleep(0.1)
```

Now, rotate the potentiometer to see the values change.

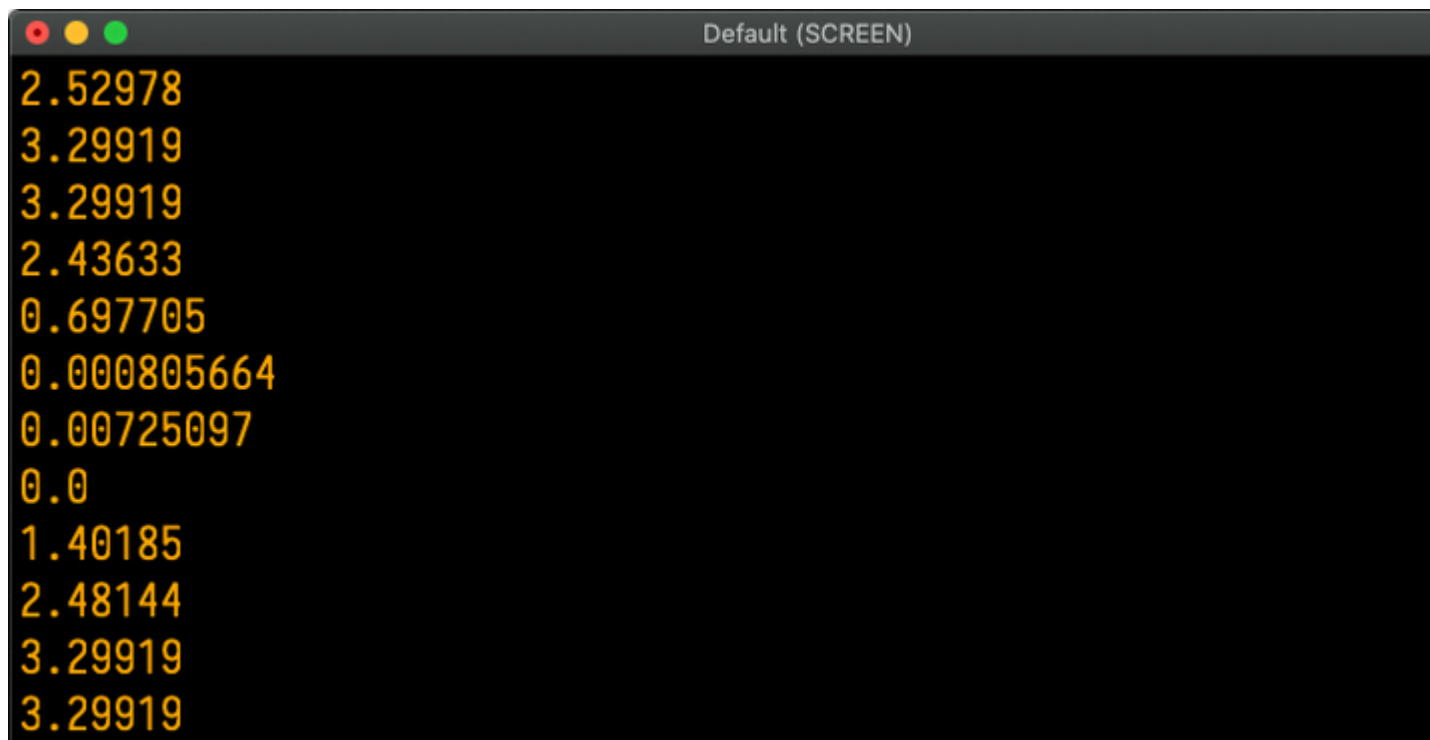

```
2.52978  
3.29919  
3.29919  
2.43633  
0.697705  
0.000805664  
0.00725097  
0.0  
1.40185  
2.48144  
3.29919  
3.29919
```

Now the values range from around 0 to 3.3! Note that you may not get all the way to 0 or 3.3. This is normal.

The example code begins with the same imports and pin setup.

This time, you include the `get_voltage` helper. This function requires that you provide an analog pin. It then maps the raw analog values, 0 to 65535, to the voltage values, 0 to 3.3. It does the math so you don't have to!

Finally, inside the loop, you provide the function with your `analog_pin`, and print the resulting values.

That's all there is to reading analog voltage values using CircuitPython!

NeoPixel


Your board has a built-in RGB NeoPixel status LED. You can use CircuitPython code to control the color and brightness of this LED. It is also used to indicate the bootloader status and errors in your CircuitPython code.

A NeoPixel is what Adafruit calls the WS281x family of addressable RGB LEDs. It contains three LEDs - a red one, a green one and a blue one - along side a driver chip in a tiny package controlled by a single pin. They can be used individually (as in the built-in LED on your board), or chained together in strips or other creative form factors. NeoPixels do not light up on their own; they require a microcontroller. So, it's super convenient that the NeoPixel is built in to your microcontroller board!

This page will cover using CircuitPython to control the status RGB NeoPixel built into your microcontroller. You'll learn how to change the color and brightness, and how to make a rainbow. Time to get started!

NeoPixel Location

The NeoPixel is located on the top side of the board, between the reset button and the digital I/O pins. It is labeled **NEO** on the board silk.

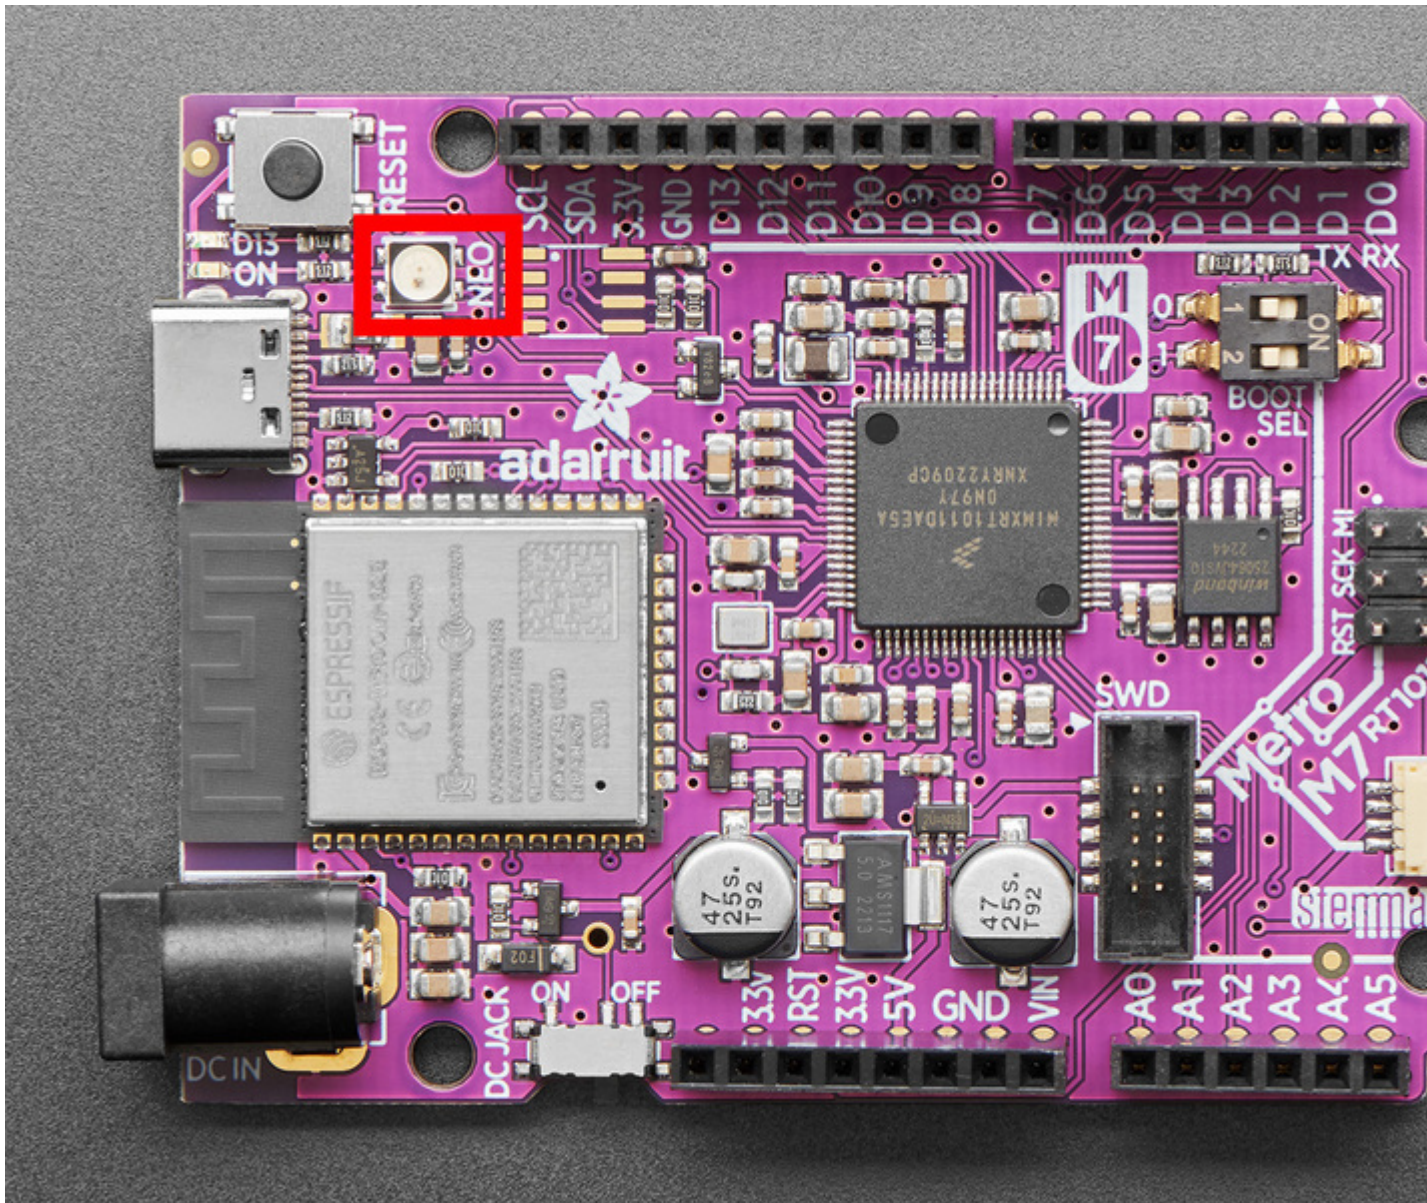


NeoPixel Color and Brightness

To use with CircuitPython, you need to first install a few libraries, into the **lib** folder on your **CIRCUITPY** drive. Then you need to update **code.py** with the example script.

Thankfully, we can do this in one go. In the example below, click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, open the directory **CircuitPython_Templates/status_led_one_neopixel_rgb/** and then click on the directory that matches the version of CircuitPython you're using and copy the contents of that directory to your **CIRCUITPY** drive.

Your **CIRCUITPY** drive should now look similar to the following image:

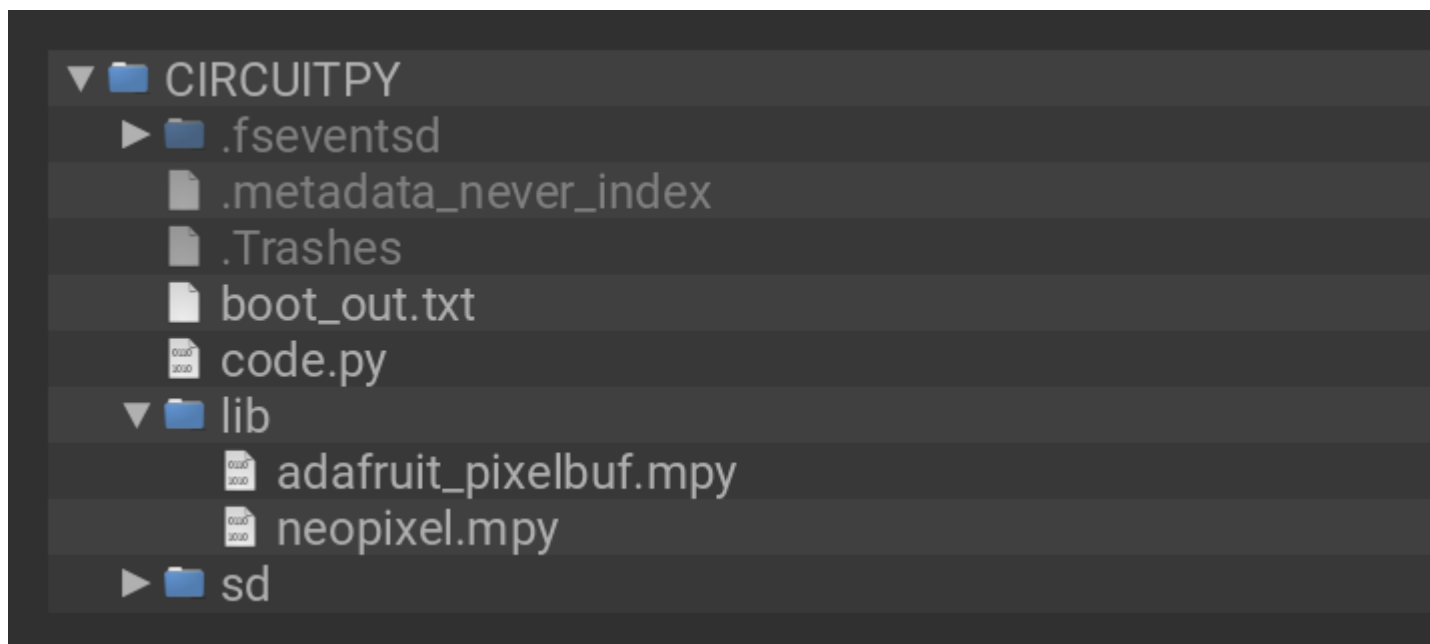

```
# SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
# SPDX-License-Identifier: MIT
"""CircuitPython status NeoPixel red, green, blue example."""
import time
import board
import neopixel


pixel = neopixel.NeoPixel(board.NEOPIXEL, 1)

pixel.brightness = 0.3

while True:
    pixel.fill((255, 0, 0))
    time.sleep(0.5)
    pixel.fill((0, 255, 0))
    time.sleep(0.5)
```

```
pixel.fill((0, 0, 255))  
time.sleep(0.5)
```

The built-in NeoPixel begins blinking red, then green, then blue, and repeats!

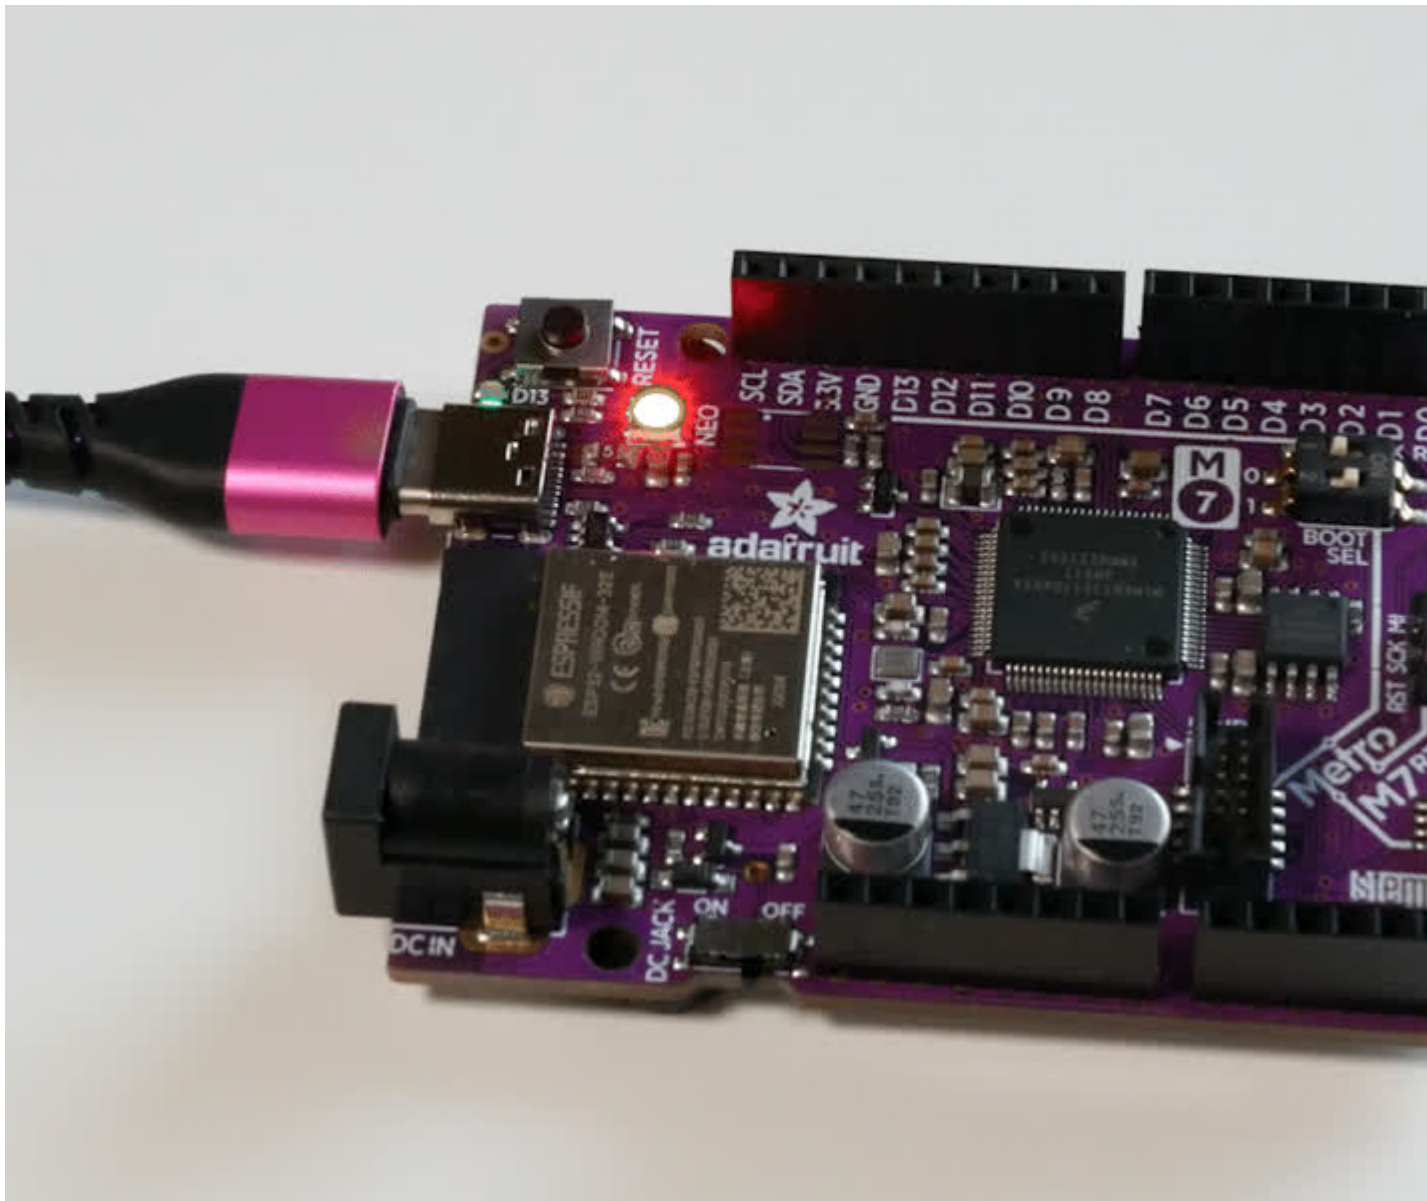

First you import two modules, `time` and `board`, and one library, `neopixel`. This makes these modules and libraries available for use in your code. The first two are modules built-in to CircuitPython, so you don't need to download anything to use those. The `neopixel` library is separate, which is why you needed to install it before getting started.

Next, you set up the NeoPixel LED. To interact with hardware in CircuitPython, your code must let the board know where to look for the hardware and what to do with it. So, you create a `neopixel.NeoPixel()` object, provide it the NeoPixel LED pin using the `board` module, and tell it the number of LEDs. You save this object to the variable `pixel`.

Then, you set the NeoPixel brightness using the `brightness` attribute. `brightness` expects float between 0 and 1.0. A float is essentially a number with a decimal in it. The brightness value represents a percentage of maximum brightness; 0 is 0% and 1.0 is 100%. Therefore, setting `pixel.brightness = 0.3` sets the brightness to 30%. The default brightness, which is to say the brightness if you don't explicitly set it, is 1.0. The default is really bright! That is why there is an option available to easily change the brightness.

Inside the loop, you turn the NeoPixel red for 0.5 seconds, green for 0.5 seconds, and blue for 0.5 seconds.

To turn the NeoPixel red, you "fill" it with an RGB value. Check out the section below for details on RGB colors. The RGB value for red is (255, 0, 0). Note that the RGB value includes the parentheses. The `fill()` attribute expects the full RGB value including those parentheses. That is why there are two pairs of parentheses in the code.

You can change the RGB values to change the colors that the NeoPixel cycles through. Check out the list below for some examples. You can make any color of the rainbow with the right RGB value combination!

That's all there is to changing the color and setting the brightness of the built-in NeoPixel LED!

RGB LED Colors

RGB LED colors are set using a combination of **red**, **green**, and **blue**, in the form of an (**R**, **G**, **B**) tuple. Each member of the tuple is set to a number between 0 and 255 that determines the amount of each color present. Red, green and blue in different combinations can create all the colors in the rainbow! So, for example, to set an LED to red, the tuple would be (255, 0, 0), which has the maximum level of red, and no green or blue. Green would be (0, 255, 0), etc. For the colors between, you set a combination, such as cyan which is (0, 255, 255), with equal amounts of green and blue. If you increase all values to the same level, you get white! If you decrease all the values to 0, you turn the LED off.

Common colors include:


- red: (255, 0, 0)
- green: (0, 255, 0)
- blue: (0, 0, 255)
- cyan: (0, 255, 255)
- purple: (255, 0, 255)
- yellow: (255, 255, 0)
- white: (255, 255, 255)
- black (off): (0, 0, 0)

NeoPixel Rainbow

You should have already installed the library necessary to use the built-in NeoPixel LED. If not, follow the steps at the beginning of the NeoPixel Color and Brightness section to install it.

In the example below, click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, open the directory **CircuitPython_Templates/status_led_one_neopixel_rainbow/** and then click on the directory that matches the version of CircuitPython you're using and copy the contents of that directory to your **CIRCUITPY** drive.

Your **CIRCUITPY** drive should now look similar to the following image:

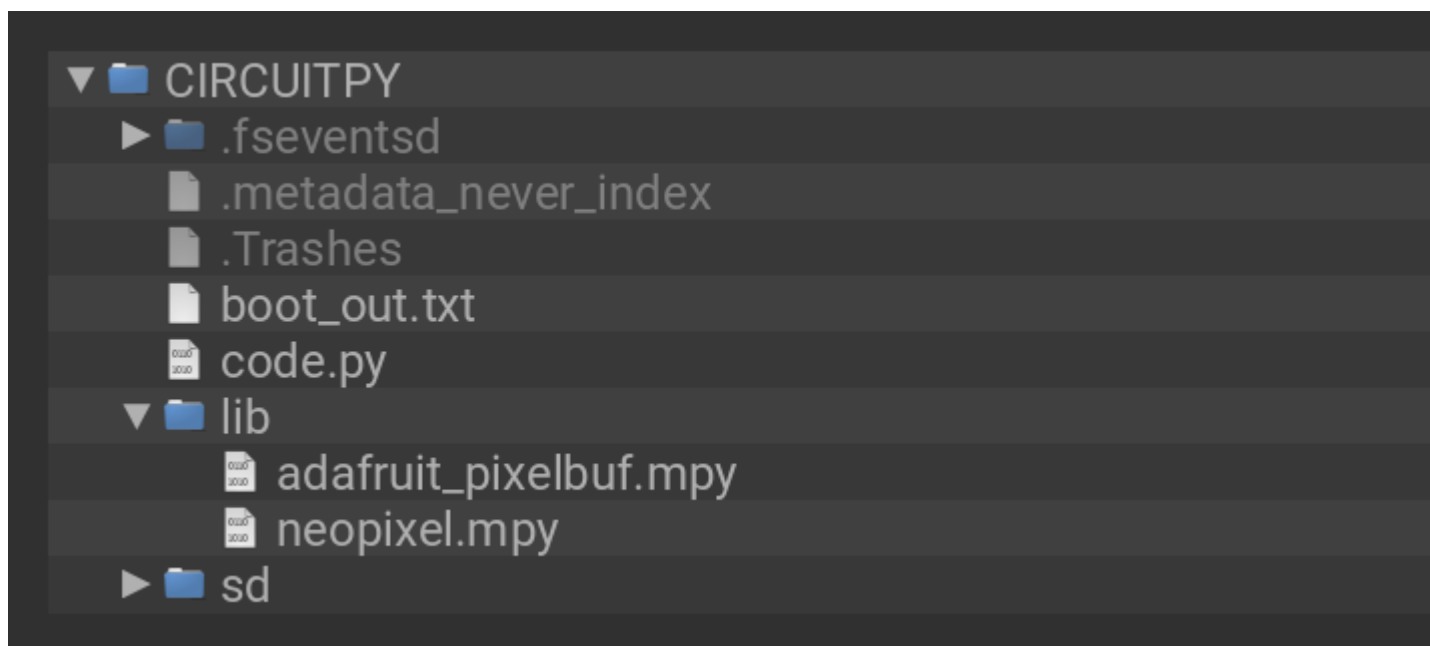


```
# SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
# SPDX-License-Identifier: MIT
"""CircuitPython status NeoPixel rainbow example."""
import time
import board
from rainbowio import colorwheel
import neopixel

pixel = neopixel.NeoPixel(board.NEOPIXEL, 1)
pixel.brightness = 0.3

def rainbow(delay):
    for color_value in range(255):
        pixel[0] = colorwheel(color_value)
        time.sleep(delay)
```

```
while True:  
    rainbow(0.02)
```

The NeoPixel displays a rainbow cycle!

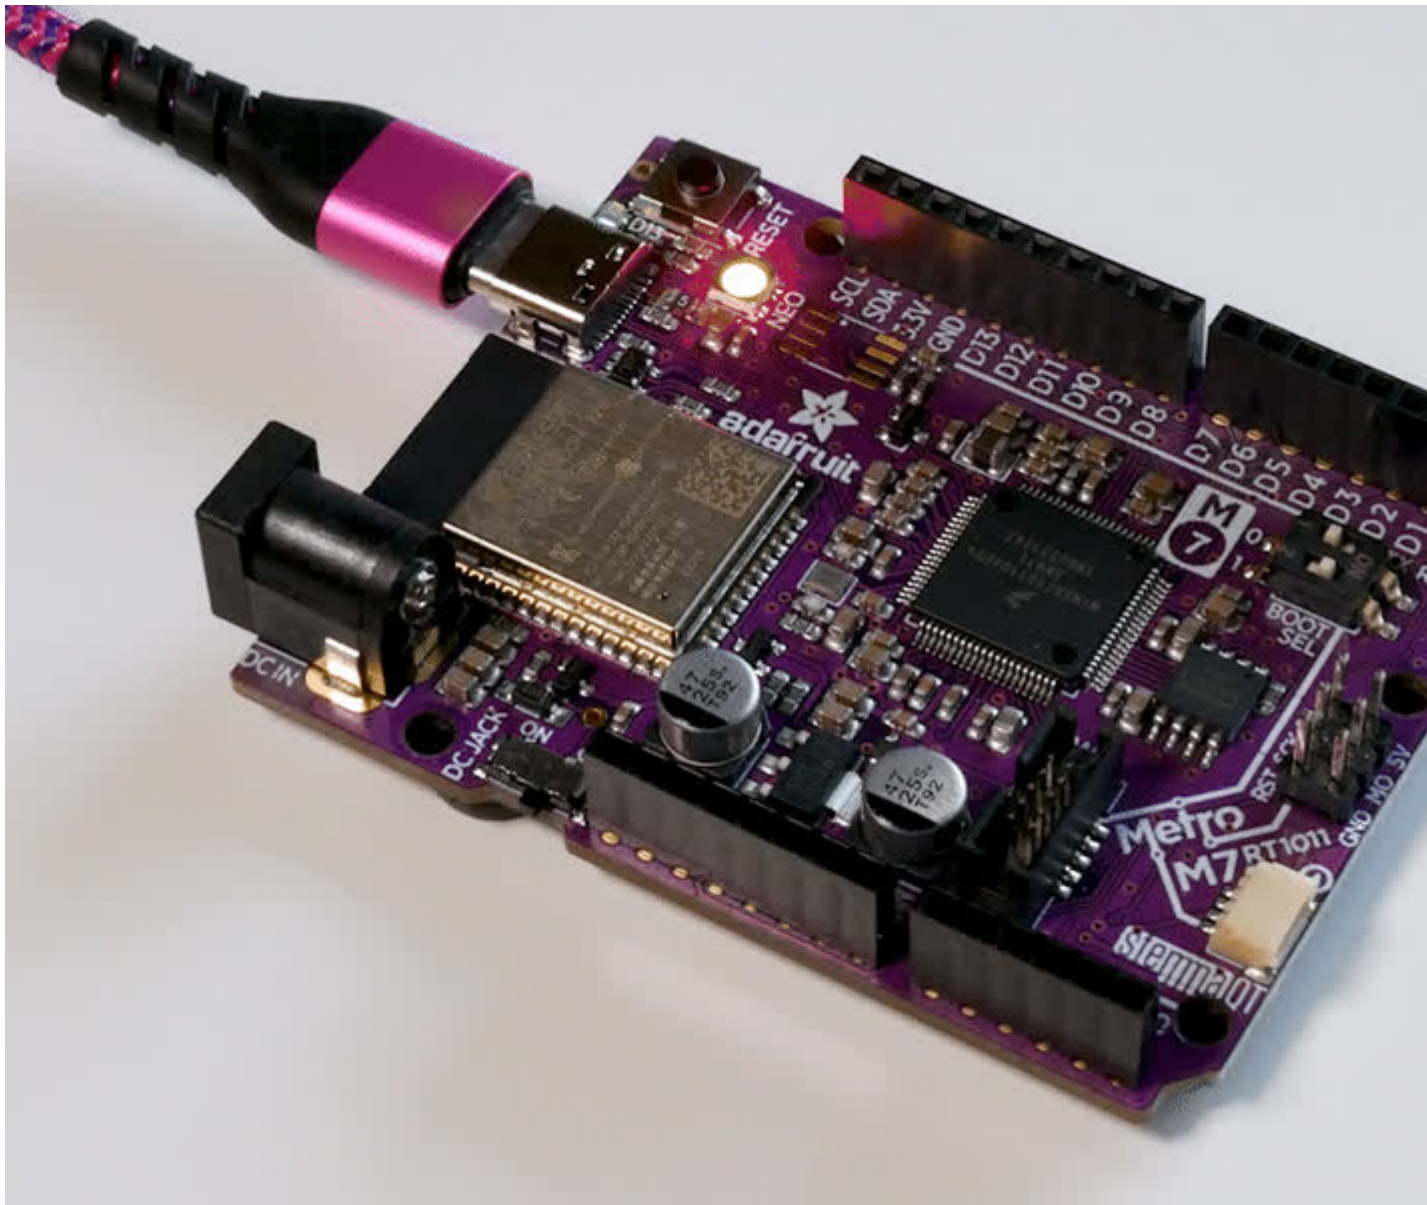

This example builds on the previous example.

First, you import the same three modules and libraries. In addition to those, you import `colorwheel`.


The NeoPixel hardware setup and brightness setting are the same.

Next, you have the `rainbow()` helper function. This helper displays the rainbow cycle. It expects a delay in seconds. The higher the number of seconds provided for delay, the slower the rainbow will cycle. The helper cycles through the values of the color wheel to create a rainbow of colors.

Inside the loop, you call the rainbow helper with a 0.2 second delay, by including `rainbow(0.2)`.

That's all there is to making rainbows using the built-in NeoPixel LED!

I2C

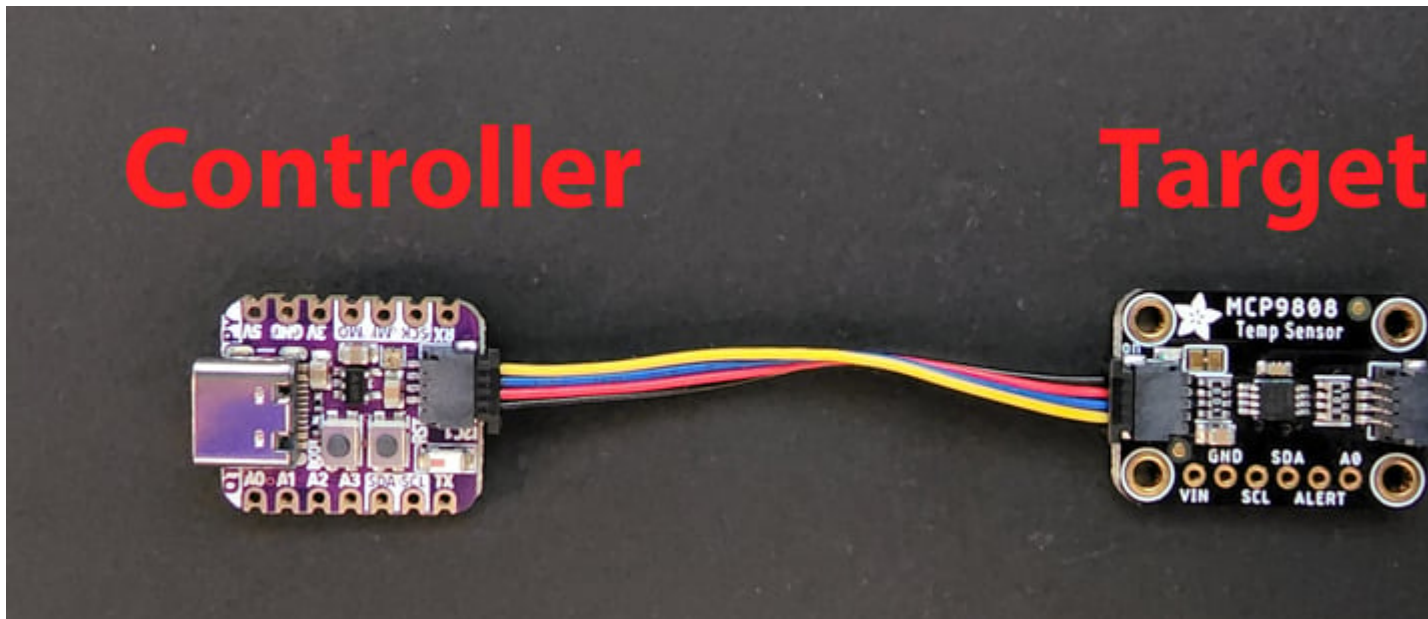

The **I2C**, or [inter-integrated circuit](https://adafru.it/u2a) (<https://adafru.it/u2a>), is a 2-wire protocol for communicating with simple sensors and devices, which means it uses two connections, or wires, for transmitting and receiving data. One connection is a clock, called **SCL**. The other is the data line, called **SDA**. Each pair of clock and data pins are referred to as a **bus**.

Typically, there is a device that acts as a **controller** and sends requests to the **target** devices on each bus. In this case, your microcontroller board acts as the controller, and the sensor breakout acts as the target. Historically, the controller is referred to as the master, and the target is referred to as the slave, so you may run into that terminology elsewhere. The official terminology is [controller and target](https://adafru.it/TtF) (<https://adafru.it/TtF>).

Multiple I2C devices can be connected to the same clock and data lines. Each I2C device has an address, and as long as the addresses are different, you can connect them at the same time. This means you can have many different sensors and devices all connected to the same two pins.

Both I2C connections require pull-up resistors, and most Adafruit I2C sensors and breakouts have pull-up resistors built in. If you're using one that does not, you'll need to add your own 2.2-10kΩ pull-up resistors from SCL and SDA to 3.3V.

I2C and CircuitPython

CircuitPython supports many I2C devices, and makes it super simple to interact with them. There are libraries available for many I2C devices in the [CircuitPython Library Bundle](https://adafru.it/Tra) (<https://adafru.it/Tra>). (If you don't see the

sensor you're looking for, keep checking back, more are being written all the time!)

In this section, you'll learn how to scan the I2C bus for all connected devices. Then you'll learn how to interact with an I2C device.


Necessary Hardware

You'll need the following additional hardware to complete the examples on this page.



[Adafruit MCP9808 High Accuracy I2C Temperature Sensor Module](#)
The MCP9808 is a digital temperature sensor with the most accurate accuracy we've ever seen with a typical accuracy of $\pm 0.25^{\circ}\text{C}$. The sensor's accuracy is to...
<https://www.adafruit.com/product/1095>

[STEMMA Qwiic JS Pin Cable Long](#)
This 4-wire cable is 50mm long and has a JST female 4-pin connector at both ends. Compare the current PH theses

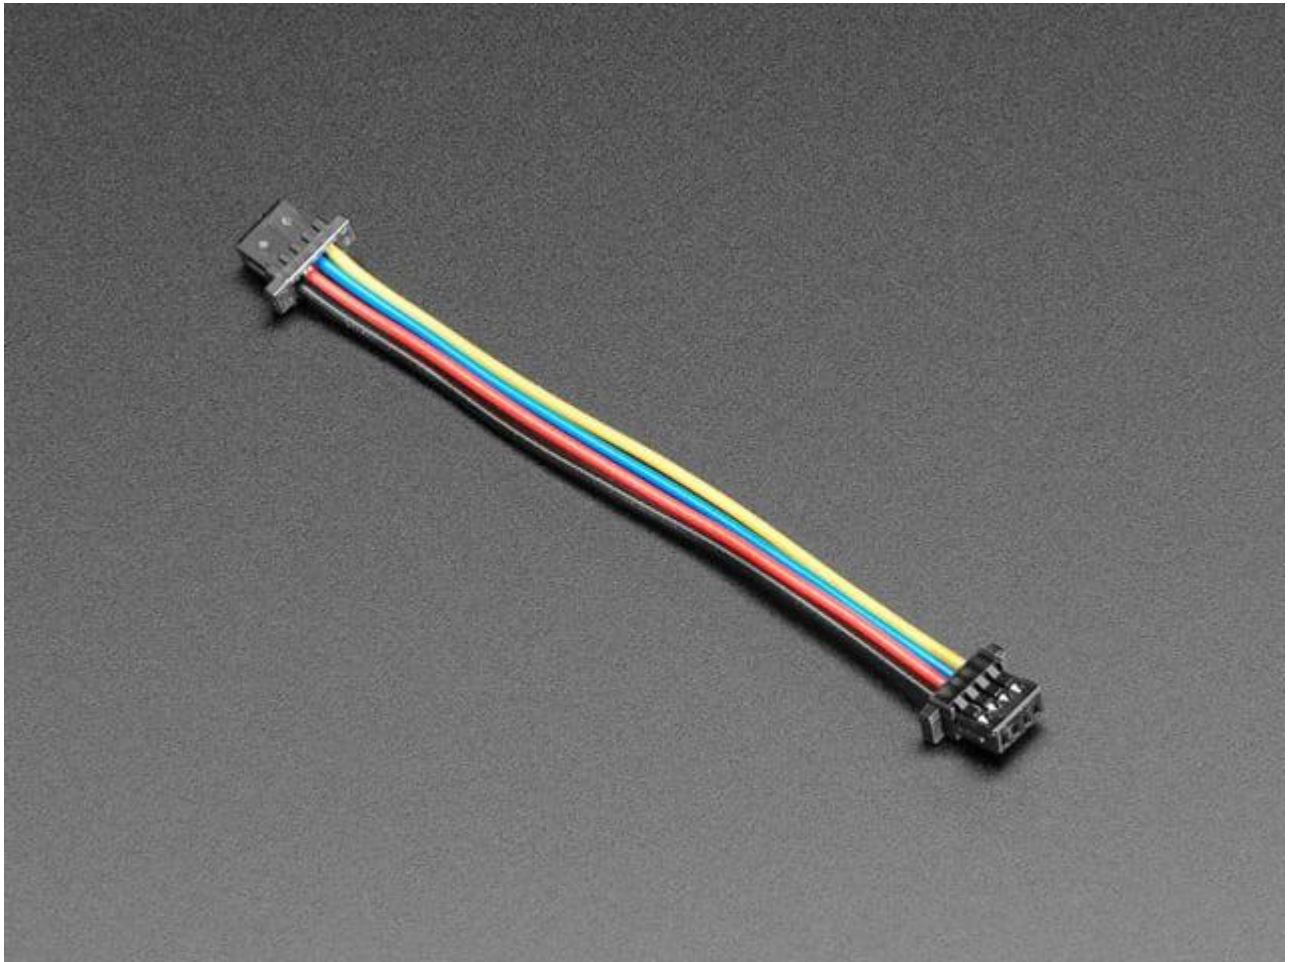

pitch in:
2mm, b
[https://
www.ad
product](https://www.adafruit.com/product/251)


While the examples here will be using the [Adafruit MCP9808](http://adafru.it/5027) (<http://adafru.it/5027>), a high accuracy temperature sensor, the overall process is the same for just about any I2C sensor or device.

The first thing you'll want to do is get the sensor connected so your board has I2C to talk to.

Wiring the MCP9808

The MCP9808 comes with a STEMMA QT connector, which makes wiring it up quite simple and solder-free.

Simply connect the STEMMA QT cable from **the STEMMA QT port on your board** to **the STEMMA QT port on the MCP9808**.

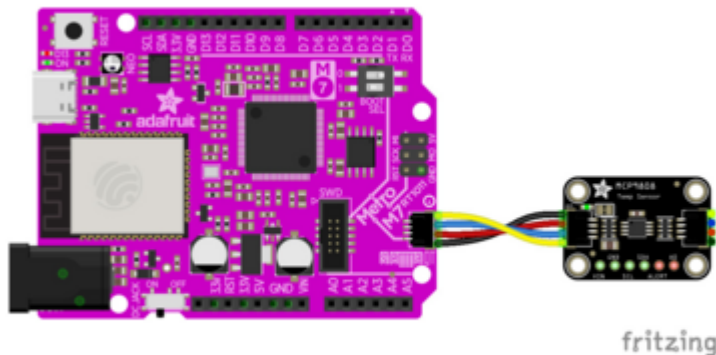

Find Your Sensor

The first thing you'll want to do after getting the sensor wired up, is make sure it's wired correctly. You're going to do an I2C scan to see if the board is detected, and if it is, print out its I2C address.

Save the following to your **CIRCUITPY** drive as **code.py**.

Click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, find your CircuitPython version, and copy the matching **code.py** file to your **CIRCUITPY** drive.

Your **CIRCUITPY** drive should now look similar to the following image:



```
# SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
# SPDX-License-Identifier: MIT
"""CircuitPython I2C Device Address Scan"""
import time
```



```

import board

i2c = board.I2C() # uses board.SCL and board.SDA
# i2c = board.STEMMA_I2C() # For using the built-in STEMMMA QT connector o

# To create I2C bus on specific pins
# import busio
# i2c = busio.I2C(board.GP1, board.GP0) # Pi Pico RP2040

while not i2c.try_lock():
    pass

try:
    while True:
        print(
            "I2C addresses found:",
            [hex(device_address) for device_address in i2c.scan()],
        )
        time.sleep(2)

finally: # unlock the i2c bus when ctrl-c'ing out of the loop
    i2c.unlock()

```

Auto-reload is on. Simply save files over USB to run them or enter REPL to reload.

code.py output:
I2C addresses found: ['0x18']

If you run this and it seems to hang, try manually unlocking your I2C bus by running the following two commands from the REPL.

```

import board
board.I2C().unlock()

```

First you create the `i2c` object, using `board.I2C()`. This convenience routine creates and saves a `busio.I2C` object using the default pins `board.SCL` and `board.SDA`. If the object has already been created, then the existing object is returned. No matter how many times you call `board.I2C()`, it will return the same object. This is called a singleton.

To be able to scan it, you need to lock the I2C down so the only thing accessing it is the code. So next you include a loop that waits until I2C is locked and then continues on to the scan function.

Last, you have the loop that runs the actual scan, `i2c_scan()`. Because I2C typically refers to addresses in hex form, the example includes this bit of code that formats the results into hex format: `[hex(device_address) for device_address in i2c.scan()]`.

Open the serial console to see the results! The code prints out an array of addresses. You've connected the MCP9808 which has a 7-bit I2C address of

0x18. The result for this sensor is I2C addresses found: ['0x18']. If no addresses are returned, refer back to the wiring diagrams to make sure you've wired up your sensor correctly.


I2C Sensor Data

Now you know for certain that your sensor is connected and ready to go. Time to find out how to get the data from the sensor!

Save the following to your **CIRCUITPY** drive as **code.py**.

Click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, find your CircuitPython version, and copy the matching **entire lib folder** and **code.py** file to your **CIRCUITPY** drive.

Your **CIRCUITPY** drive should now look similar to the following image:

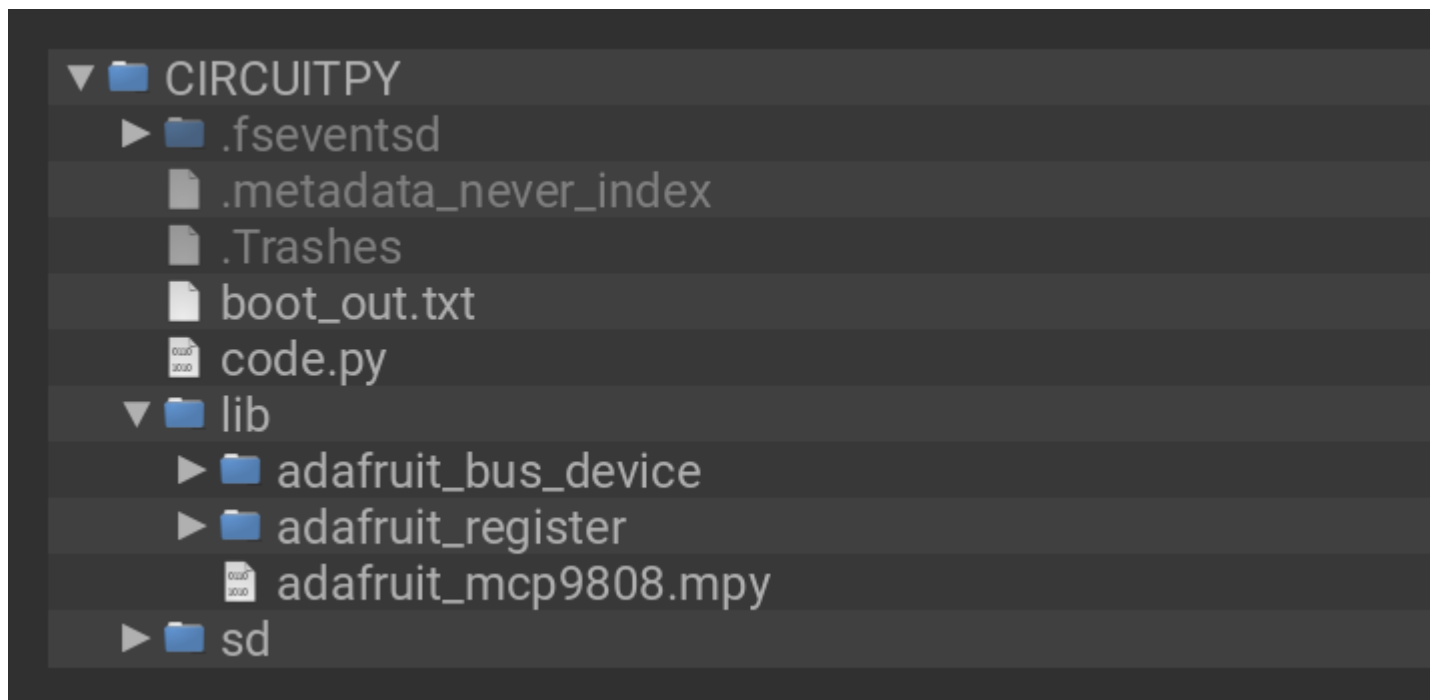

```
# SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
# SPDX-License-Identifier: MIT
"""CircuitPython I2C MCP9808 Temperature Sensor Example"""
import time
import board
import adafruit_mcp9808

i2c = board.I2C() # uses board.SCL and board.SDA
# i2c = board.STEMMA_I2C() # For using the built-in STEMMA QT connector o
# import busio
# i2c = busio.I2C(board.SCL1, board.SDA1) # For QT Py RP2040, QT Py ESP32-
mcp9808 = adafruit_mcp9808.MCP9808(i2c)

while True:
```

```
temperature_celsius = mcp9808.temperature
temperature_fahrenheit = temperature_celsius * 9 / 5 + 32
print("Temperature: {:.2f} C {:.2f} F ".format(temperature_celsius, te
time.sleep(2)
```

```
Auto-reload is on. Simply save files over USB to run them or enter REPL t
le.
code.py output:
Temperature: 23.38 C 74.07 F
```

This code begins the same way as the scan code, except this time, you create your sensor object using the sensor library. You call it `mcp9808` and provide it the `i2c` object.

Then you have a simple loop that prints out the temperature reading using the sensor object you created. Finally, there's a `time.sleep(2)`, so it only prints once every two seconds. Connect to the serial console to see the results. Try touching the MCP9808 with your finger to see the values change!

Where's my I2C?


On many microcontrollers, you have the flexibility of using a wide range of pins for I2C. On some types of microcontrollers, any pin can be used for I2C! Other chips require using bitbangio, but can also use any pins for I2C. There are further microcontrollers that may have fixed I2C pins.

Given the many different types of microcontroller boards available, it's impossible to guarantee anything other than the labeled 'SDA' and 'SCL' pins. So, if you want some other setup, or multiple I2C interfaces, how will you find those pins? Easy! Below is a handy script.

Save the following to your **CIRCUITPY** drive as **code.py**.

Click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, find your CircuitPython version, and copy the matching **code.py** file to your **CIRCUITPY** drive.

Your **CIRCUITPY** drive should now look similar to the following image:

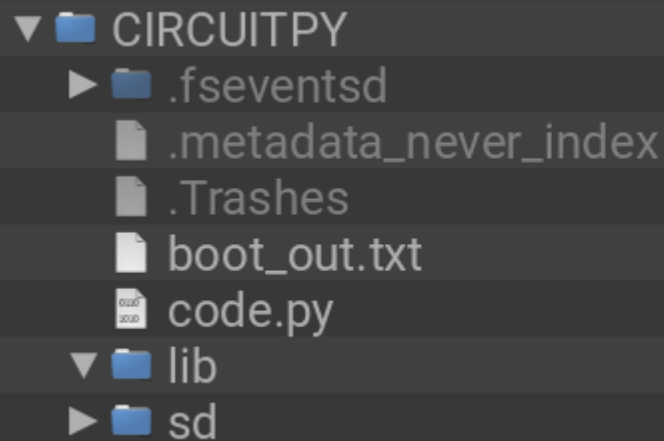

```
# SPDX-FileCopyrightText: 2021-2023 Kattni Rembor for Adafruit Industries
# SPDX-License-Identifier: MIT
"""CircuitPython I2C possible pin-pair identifying script"""
import board
import busio
from microcontroller import Pin

def is_hardware_i2c(scl, sda):
    try:
        p = busio.I2C(scl, sda)
        p.deinit()
        return True
    except ValueError:
        return False
    except RuntimeError:
        return True

def get_unique_pins():
    exclude = [
        getattr(board, p)
        for p in [
            # This is not an exhaustive list of unexposed pins. Your results
            # may include other pins that you cannot easily connect to.
            "NEOPIXEL",
            "DOTSTAR_CLOCK",
            "DOTSTAR_DATA",
            "APA102_SCK",
            "APA102_MOSI",
            "LED",
            "SWITCH",
            "BUTTON",
            "ACCELEROMETER_INTERRUPT",
            "VOLTAGE_MONITOR",
            "MICROPHONE_CLOCK",
```

```

        "MICROPHONE_DATA",
        "RFM_RST",
        "RFM_CS",
        "RFM_I00",
        "RFM_I01",
        "RFM_I02",
        "RFM_I03",
        "RFM_I04",
        "RFM_I05",
        "TFT_I2C_POWER",
        "NEOPIXEL_POWER",
    ]
    if p in dir(board)
]
pins = [
    pin
    for pin in [getattr(board, p) for p in dir(board)]
    if isinstance(pin, Pin) and pin not in exclude
]
unique = []
for p in pins:
    if p not in unique:
        unique.append(p)
return unique

for scl_pin in get_unique_pins():
    for sda_pin in get_unique_pins():
        if scl_pin is sda_pin:
            continue
        if is_hardware_i2c(scl_pin, sda_pin):
            print("SCL pin:", scl_pin, "\t SDA pin:", sda_pin)

```

Now, connect to the serial console and check out the output! The results print out a nice handy list of SCL and SDA pin pairs that support I2C.

The output for the Metro M7 is extremely long! The screenshot shows only the beginning. Run the script yourself to see the full output!

```
Auto-reload is on. Simply save files over USB to run them or enter REPL to
code.py output:
```

```
SCL pin: board.A0    SDA pin: board.A1
SCL pin: board.A0    SDA pin: board.A2
SCL pin: board.A0    SDA pin: board.A3
SCL pin: board.A0    SDA pin: board.A4
SCL pin: board.A0    SDA pin: board.A5
SCL pin: board.A0    SDA pin: board.D0
SCL pin: board.A0    SDA pin: board.D1
SCL pin: board.A0    SDA pin: board.D10
SCL pin: board.A0    SDA pin: board.D11
SCL pin: board.A0    SDA pin: board.D12
SCL pin: board.A0    SDA pin: board.D2
SCL pin: board.A0    SDA pin: board.D3
SCL pin: board.A0    SDA pin: board.D4
SCL pin: board.A0    SDA pin: board.D5
SCL pin: board.A0    SDA pin: board.D6
SCL pin: board.A0    SDA pin: board.D7
SCL pin: board.A0    SDA pin: board.D8
```

This example only runs once, so if you do not see any output when you connect to the serial console, try CTRL+D to reload.

PWM Audio

CircuitPython comes with `audiopwmio`, which provides built-in audio output support using **p**ulse **w**idth **m**odulation (PWM).

PWM converts the audio signal to a series of rectangular waveforms, or frequencies. By varying the PWM frequency, you can generate tones and play, pause and resume audio files. The faster your microcontroller is, the better sound quality you'll be able to achieve with PWM audio.

[audiopwmio Documentation](https://adafru.it/18vd)


<https://adafru.it/18vd>

Necessary Hardware

You'll need the following additional hardware to complete the examples on this page.

[Adafruit
Speaker
and Play
Amplifier](#)

Hey, have
heard the
news? V
Adafruit

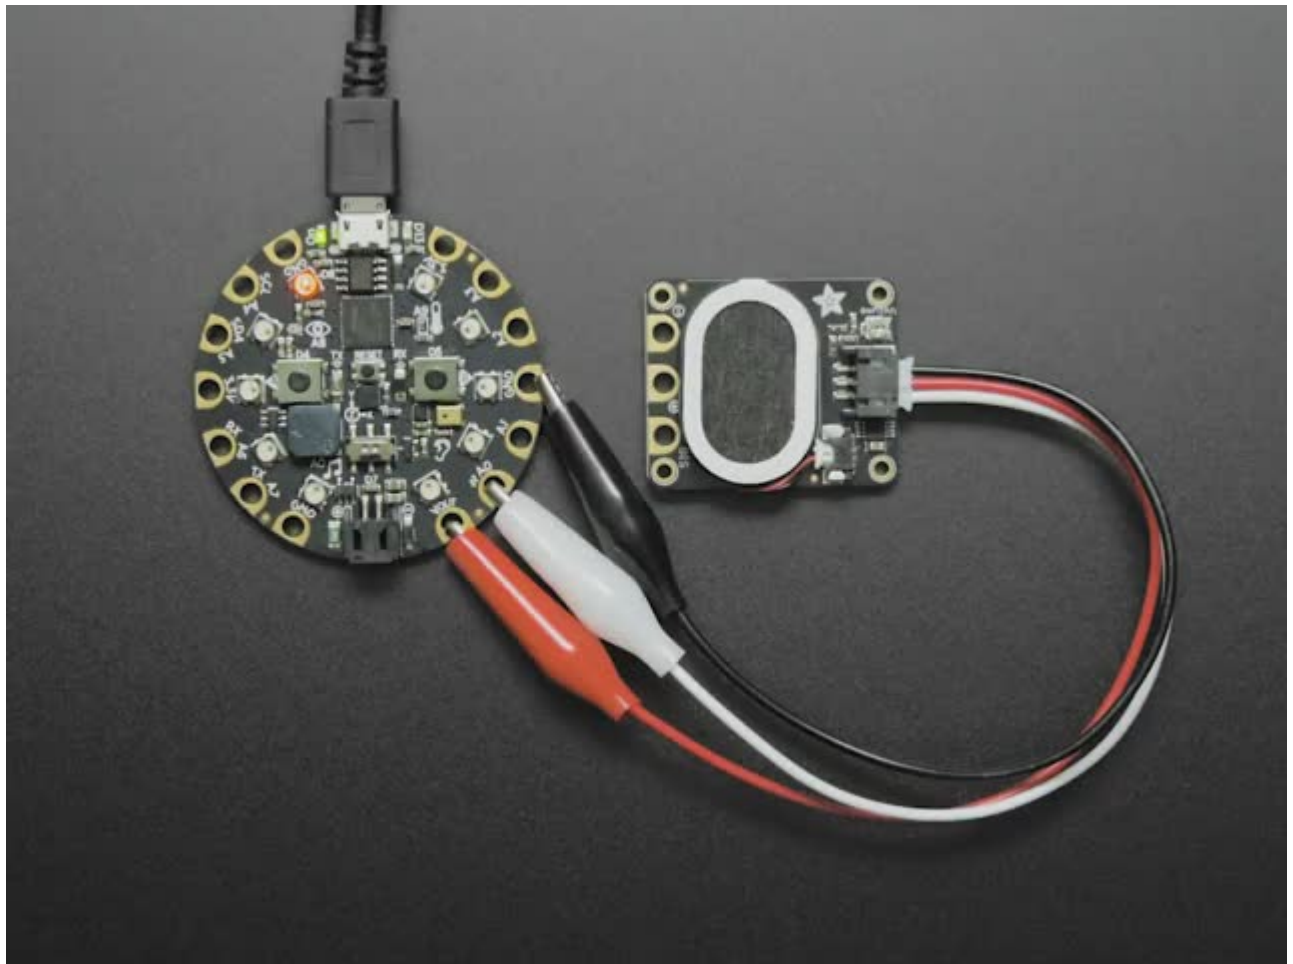


boards y
easily a
plug sen
devices
like this
STEMM
- Plug a
[https://
www.ad
product](https://www.adproduct)

STEMM
2mm 3-
Male He
Cable -
This cab
you turn
3-pin ca
into 3 in
wires w
quality
header
the end.
carrying
match u
our...
[https://
www.ad
product](https://www.adproduct)



Wiring the STEMMA Speaker

Connect the STEMMA Speaker to your microcontroller as follows.

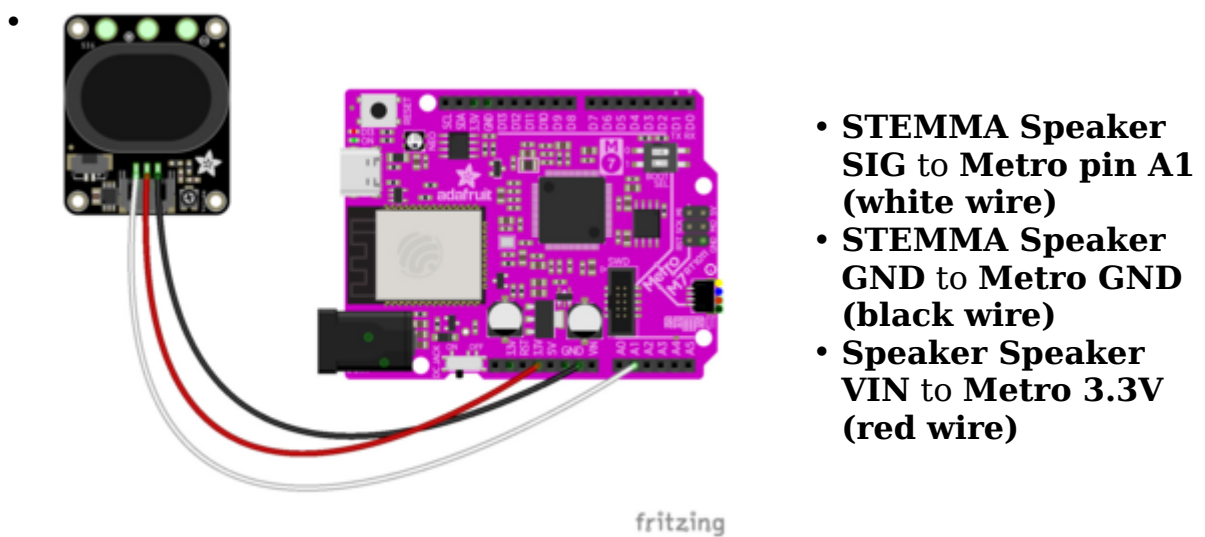

PWM Audio Pin Limitations

The Metro M7 **can only do PWM audio on pins A0 and A1**. No other pins on the board support PWM audio.

PWM Tone Playback

The first example generates one period of a sine wave and then loops it to generate a tone. You can change the volume and the frequency (in Hz) of the tone by changing the associated variables. Inside the loop, you play the tone for one second and stop it for one second.

Update your **code.py** to the following.

Click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, open the folder that matches your CircuitPython version, and copy the **code.py** file to your **CIRCUITPY** drive.

```
# SPDX-FileCopyrightText: 2018 Kattni Rembor for Adafruit Industries
#
# SPDX-License-Identifier: MIT
```

```
"""
```

```
CircuitPython PWM Audio Out tone example
Plays a tone for one second on, one
second off, in a loop.
"""
```

```
import time
import array
import math
import board
from audiocore import RawSample
from audiopwmio import PWMAudioOut as AudioOut
```

```
audio = AudioOut(board.A1)
```

```
tone_volume = 0.1 # Increase this to increase the volume of the tone.
frequency = 440 # Set this to the Hz of the tone you want to generate.
length = 8000 // frequency
sine_wave = array.array("H", [0] * length)
for i in range(length):
    sine_wave[i] = int((1 + math.sin(math.pi * 2 * i / length)) * tone_vol
```

```
sine_wave_sample = RawSample(sine_wave)
```

```
while True:
    audio.play(sine_wave_sample, loop=True)
    time.sleep(1)
    audio.stop()
    time.sleep(1)
```

Now you'll hear one second of a 440Hz tone, and one second of silence.

You can try changing the 440 Hz of the tone to produce a tone of a different pitch. Try changing the number of seconds in `time.sleep()` to produce longer or shorter tones.

PWM WAV File Playback

The second example plays a WAV file. You open the file in a readable format. Then, you play the file and, once finished, print `Done playing!` to the serial console. You can use any [supported wave file](https://adafru.it/BRj) (<https://adafru.it/BRj>).

Update your **code.py** to the following.

Click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, open the folder that matches your CircuitPython version, and copy the **StreetChicken.wav** file and the **code.py** file to your **CIRCUITPY** drive.

```
# SPDX-FileCopyrightText: 2018 Kattni Rembor for Adafruit Industries
#
# SPDX-License-Identifier: MIT

"""
CircuitPython PWM Audio Out WAV example
Play a WAV file once.
"""

import board
from audiocore import WaveFile
from audiopwmio import PWMAudioOut as AudioOut

audio = AudioOut(board.A1)

with open("StreetChicken.wav", "rb") as wave_file:
    wave = WaveFile(wave_file)
    print("Playing wav file!")
    audio.play(wave)
    while audio.playing:
        pass

print("Done!")
```

Now you'll hear the wave file play, and on completion, print `Done Playing!` to the serial console.

You can play a different WAV file by updating `"StreetChicken.wav"` to be the name of your CircuitPython-compatible WAV file.

You can do other things while the WAV file plays! There is a `pass` in this example where you can include other code, such as code to blink an LED.

I2S Audio

I2S, or Inter-IC Sound, is a standard for transmitting digital audio data. It requires at least three connections. The first connection is a clock, called **bit clock (BCLK)**, or sometimes written as serial clock or SCK). The second connection, which determines the channel (left or right) being sent, is called **word select (WS)**. When stereo data is sent, WS is toggled so that the left and right channels are sent alternately, one data word at a time. The third connection, which transmits the data, is called **serial data (SD)**.

Typically, there is a **transmitter** device which generates the bit clock, word select signal, and the data, and sends them to a **receiver** device. In this case, your microcontroller acts as the transmitter, and an I2S breakout acts as the receiver. The [MAX98357A](http://adafru.it/3006) (<http://adafru.it/3006>) is an example of an I2S class D amplifier that allows you to connect directly to a speaker such as [this one](http://adafru.it/4445) (<http://adafru.it/4445>).

I2S and CircuitPython


CircuitPython supports sending I2S audio signals using the `audiobusio` module, making it simple to use the I2S interface with your microcontroller.

In this section, you'll learn how to use CircuitPython to play different types of audio using I2S, including tones and WAV files.

Necessary Hardware

You'll need the following additional hardware to complete the examples on this page.


[Adafruit Class D Breakout MAX98357A](#)
Listen to news - v
have an
digital a
breakou
that wor
incredib
with the
<https://www.adafruit.com/product/4445>

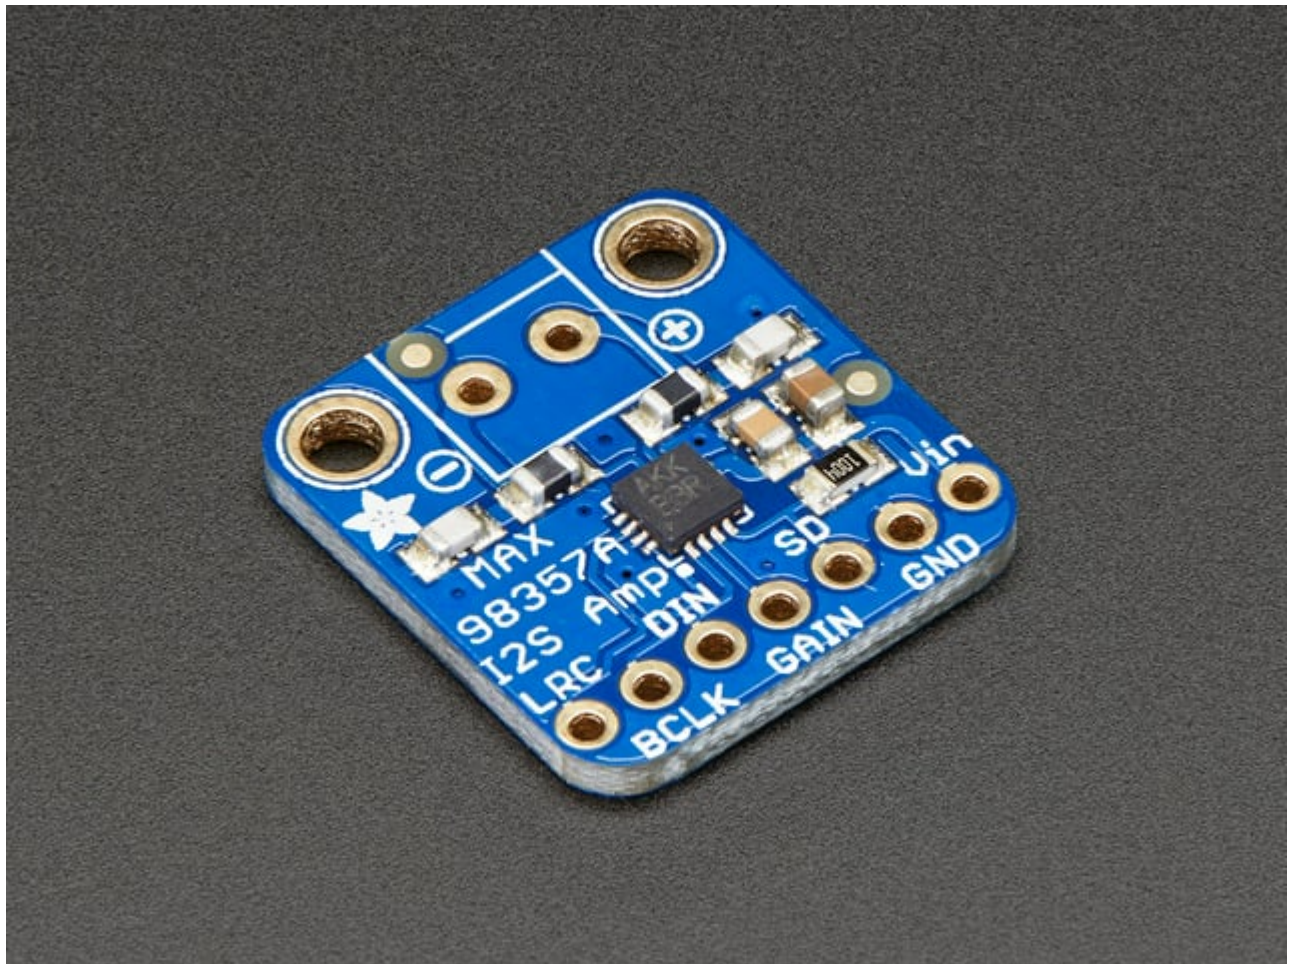

[Mono E](#)
[Speaker](#)
[Plain W](#)
[Ohm](#)
Listen u
single 2
speaker
perfect
any aud
where y
ohm imp
and 3W
power. V
[https://](https://www.aliexpress.com/produ)
[www.ad](https://www.aliexpress.com/produ)
[product](https://www.aliexpress.com/produ)




[Premium Male Jumper Wires - 28 Gauge \(150mm\)](#)
These Male Jumper Wires are handy for wire harnessing and jumpering between components on PCB's. The premium wires are 28 Gauge (150mm) long and come in a variety of colors. [https://www.aliexpress.com/](https://www.aliexpress.com/product/32961082922.html)

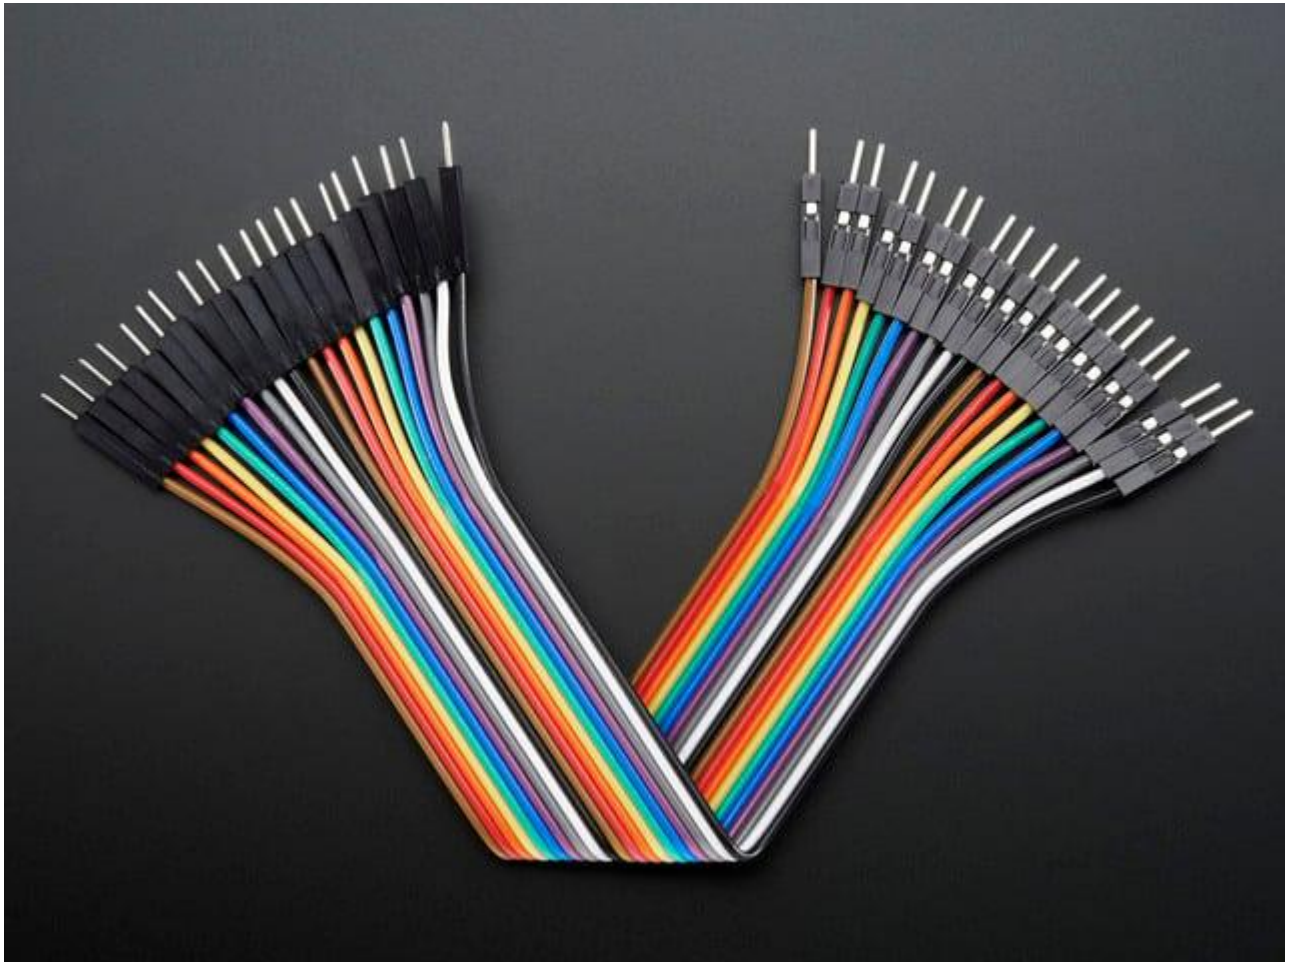

Wiring the MAX98357A

Connect the MAX98357A breakout to your microcontroller as follows.

Make sure you have a very solid connection between the breakout ground pin and the ground pin on your board! An insufficient connection here can result in raspy-sounding tones with intermittent volume increases. If you experience this result, try reseating your ground connection.

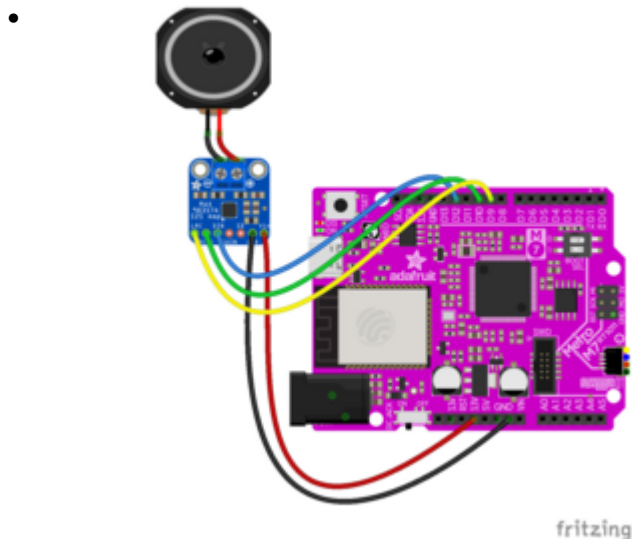

- **MAX98357A LRC** to **Metro pin D9**
- **MAX98357A BCLK** to **Metro pin D10**
- **MAX98357A DIN** to **Metro pin D12**
- **MAX98357A GND** to **Metro GND**
- **MAX98357A Vin** to **Metro 3.3V**
- **Speaker GND** to **MAX98357A speaker - input**
- **Speaker positive** to **MAX98357A speaker + input**

I2S Tone Playback

The first example generates one period of a sine wave and then loops it to generate a tone. You can change the volume and the frequency (in Hz) of the tone by changing the associated variables. Inside the loop, you play the tone for one second and stop it for one second.

Update your **code.py** to the following.

Click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, open the folder that matches your CircuitPython version, and copy the **code.py** file to your **CIRCUITPY** drive.

```
# SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
# SPDX-License-Identifier: MIT
"""
CircuitPython I2S Tone playback example.
Plays a tone for one second on, one
second off, in a loop.
"""
import time
import array
import math
import audiocore
import board
import audiobusio

audio = audiobusio.I2SOut(board.D10, board.D9, board.D12)

tone_volume = 0.1 # Increase this to increase the volume of the tone.
frequency = 440 # Set this to the Hz of the tone you want to generate.
length = 8000 // frequency
```



```

sine_wave = array.array("h", [0] * length)
for i in range(length):
    sine_wave[i] = int((math.sin(math.pi * 2 * i / length)) * tone_volume)
sine_wave_sample = audiocore.RawSample(sine_wave)

while True:
    audio.play(sine_wave_sample, loop=True)
    time.sleep(1)
    audio.stop()
    time.sleep(1)

```

Now you'll hear one second of a 440Hz tone, and one second of silence.

You can try changing the 440 Hz of the tone to produce a tone of a different pitch. Try changing the number of seconds in `time.sleep()` to produce longer or shorter tones.

I2S WAV File Playback

The second example plays a WAV file. You open the file in a readable format. Then, you play the file and, once finished, print Done playing! to the serial console. You can use any [supported wave file](https://adafru.it/BRj) (<https://adafru.it/BRj>).

Update your **code.py** to the following.

Click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, open the folder that matches your CircuitPython version, and copy the **StreetChicken.wav** file and the **code.py** file to your **CIRCUITPY** drive.

```

# SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
# SPDX-License-Identifier: MIT
"""
CircuitPython I2S WAV file playback.
Plays a WAV file once.
"""
import audiocore
import board
import audiobusio

audio = audiobusio.I2SOut(board.D10, board.D9, board.D12)

with open("StreetChicken.wav", "rb") as wave_file:
    wav = audiocore.WaveFile(wave_file)

    print("Playing wav file!")
    audio.play(wav)
    while audio.playing:
        pass

print("Done!")

```


Now you'll hear the wave file play, and on completion, print Done Playing! to the serial console.

You can play a different WAV file by updating "StreetChicken.wav" to be the name of your CircuitPython-compatible WAV file.

You can do other things while the WAV file plays! There is a pass in this example where you can include other code, such as code to blink an LED.

CircuitPython I2S-Compatible Pin Combinations

I2S audio is supported on specific pins. The good news is, there's a simple way to find out which pins support audio playback.

In the example below, click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, open the directory **CircuitPython_Templates/i2s_find_pins/** and then click on the directory that matches the version of CircuitPython you're using and copy the contents of that directory to your **CIRCUITPY** drive.

Your **CIRCUITPY** drive should now look similar to the following image:



Then, [connect to the serial console](https://adafru.it/Bec) (https://adafru.it/Bec) to see a list of pins printed out. This file runs only once, so if you do not see anything in the output, press CTRL+D to reload and run the code again.

```
# SPDX-FileCopyrightText: 2021 Kattni Rembor for Adafruit Industries
# SPDX-License-Identifier: MIT
"""
CircuitPython I2S Pin Combination Identification Script
"""
import board
import audiobusio
from microcontroller import Pin
```

```

def is_hardware_i2s(bit_clock, word_select, data):
    try:
        p = audiobusio.I2SOut(bit_clock, word_select, data)
        p.deinit()
        return True
    except ValueError:
        return False

def get_unique_pins():
    exclude = [
        getattr(board, p)
        for p in [
            # This is not an exhaustive list of unexposed pins. Your results
            # may include other pins that you cannot easily connect to.
            "NEOPIXEL",
            "DOTSTAR_CLOCK",
            "DOTSTAR_DATA",
            "APA102_SCK",
            "APA102_MOSI",
            "LED",
            "SWITCH",
            "BUTTON",
        ]
        if p in dir(board)
    ]
    pins = [
        pin
        for pin in [getattr(board, p) for p in dir(board)]
        if isinstance(pin, Pin) and pin not in exclude
    ]
    unique = []
    for p in pins:
        if p not in unique:
            unique.append(p)
    return unique

for bit_clock_pin in get_unique_pins():
    for word_select_pin in get_unique_pins():
        for data_pin in get_unique_pins():
            if bit_clock_pin is word_select_pin or bit_clock_pin is data_pin or word_select_pin is data_pin:
                continue
            if is_hardware_i2s(bit_clock_pin, word_select_pin, data_pin):
                print("Bit clock pin:", bit_clock_pin, "\t Word select pin:", word_select_pin, "\t Data pin:", data_pin)
            else:
                pass

```

For details about the I2S API, check out the [CircuitPython docs](https://adafru.it/UFh) (<https://adafru.it/UFh>).

CircuitPython BLE

CircuitPython BLE UART Example

It's easy to use Adafruit AirLift ESP32 co-processor boards for Bluetooth Low Energy (BLE) with CircuitPython. When you reset the ESP32, you can put it in WiFi mode (the default), or in BLE mode; you cannot use both modes simultaneously.

Here's a simple example of using BLE to connect CircuitPython with the Bluefruit Connect app. Use CircuitPython 6.0.0 or later.

Note: Don't confuse the **ESP32** with the **ESP32-S2**, which is a different module with a similar name. The ESP32-S2 does not support BLE.

Currently, AirLift BLE support is not currently available on boards with Espressif chips. If the Espressif board provides `_bleio`, it is for native BLE support (e.g. ESP32-S3), not AirLift.

Currently the AirLift support for CircuitPython only provides BLE peripheral support. BLE central is under development. So you cannot connect to BLE devices like Heart Rate monitors, etc., but you can act as a BLE peripheral yourself.

Update the AirLift Firmware

You will need to update the AirLift's firmware to at least version 1.7.1.

Previous versions of the AirLift firmware do not support BLE.

Follow the instructions in the guide below, and come back to this page when you've upgraded the AirLift's firmware:

[Upgrading ESP32 AirLift Firmware](https://adafru.it/18ve)

<https://adafru.it/18ve>

Ensure the AirLift firmware is version 1.7.1 or higher for BLE to work.


Install CircuitPython Libraries

First make sure you are running the [latest version of Adafruit CircuitPython](https://adafru.it/Amd) (<https://adafru.it/Amd>) for your board.

Next you'll need to install the necessary libraries to use the hardware. Thankfully, we can do this in one go. In the example below, click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, and copy the **entire lib folder** and the **code.py** file to your **CIRCUITPY** drive.

Your **CIRCUITPY/lib** folder should contain the following folders and files:

- /adafruit_airlift
- /adafruit_ble
- /adafruit_bus_device
- /adafruit_esp32spi
- adafruit_requests.mpy

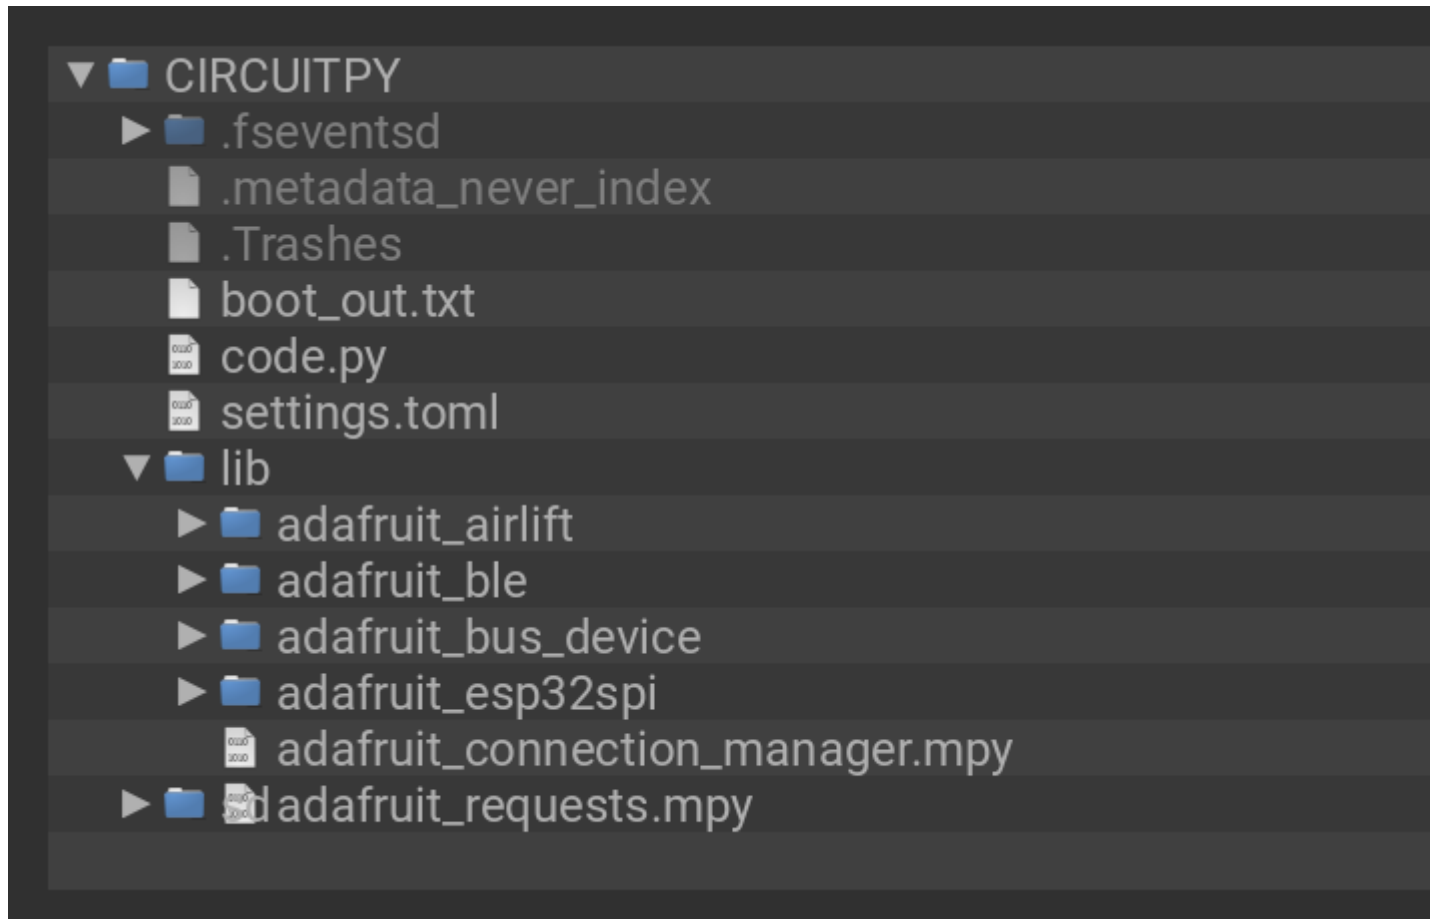

Install the Adafruit Bluefruit LE Connect App

The Adafruit Bluefruit LE Connect iOS and Android apps allow you to connect to BLE peripherals that provide a over-the-air "UART" service. Follow the instructions in the [Bluefruit LE Connect Guide](https://adafru.it/Eg5) (<https://adafru.it/Eg5>) to download and install the app on your phone or tablet.

BLE Example

For the Metro M7, comment out line 19 and uncomment line 28 so that `ESP32()` is instantiated with `board.TX` and `board.RX` as `tx` and `rx`:

```
# If you are using a Metro M4 Airlift Lite, PyPortal,  
# or MatrixPortal, you can use the default pin settings.  
# Leave this DEFAULT line uncommented.  
# If you are using a board with pre-defined ESP32 Pins:  
# esp32 = ESP32()
```

```
# If you are using a Metro M7 **OR**
# if you are using CircuitPython 6.0.0 or earlier,
# on PyPortal and PyPortal Titano only, use the pin settings
# below. Comment out the DEFAULT line above and uncomment
# the line below. For CircuitPython 6.1.0, the pin names
# have changed for these boards, and the DEFAULT line
# above is correct.
esp32 = ESP32(tx=board.TX, rx=board.RX)
```

TAKE NOTE: Adjust the program as needed to suit the AirLift board you have. Comment and uncomment lines 19-55 below as necessary.

```
# SPDX-FileCopyrightText: 2020 Dan Halbert, written for Adafruit Industries
#
# SPDX-License-Identifier: Unlicense
```

```
# pylint: disable=unused-import
import board
import busio
from digitalio import DigitalInOut
from adafruit_ble import BLERadio
from adafruit_ble.advertising.standard import ProvideServicesAdvertisement
from adafruit_ble.services.nordic import UARTService
from adafruit_esp32spi import adafruit_esp32spi
from adafruit_airlift.esp32 import ESP32
```

```
# If you are using a Metro M4 Airlift Lite, PyPortal,
# or MatrixPortal, you can use the default pin settings.
# Leave this DEFAULT line uncommented.
# If you are using a board with pre-defined ESP32 Pins:
esp32 = ESP32()
```

```
# If you are using a Metro M7 **OR**
# if you are using CircuitPython 6.0.0 or earlier,
# on PyPortal and PyPortal Titano only, use the pin settings
# below. Comment out the DEFAULT line above and uncomment
# the line below. For CircuitPython 6.1.0, the pin names
# have changed for these boards, and the DEFAULT line
# above is correct.
# esp32 = ESP32(tx=board.TX, rx=board.RX)
```

```
# If you are using an AirLift FeatherWing or AirLift Bitsy Add-On,
# use the pin settings below. Comment out the DEFAULT line above
# and uncomment the lines below.
# If you are using an AirLift Breakout, check that these
# choices match the wiring to your microcontroller board,
# or change them as appropriate.
# esp32 = ESP32(
#     reset=board.D12,
#     gpio0=board.D10,
#     busy=board.D11,
```



```

#     chip_select=board.D13,
#     tx=board.TX,
#     rx=board.RX,
# )

# If you are using an AirLift Shield,
# use the pin settings below. Comment out the DEFAULT line above
# and uncomment the lines below.
# esp32 = ESP32(
#     reset=board.D5,
#     gpio0=board.D6,
#     busy=board.D7,
#     chip_select=board.D10,
#     tx=board.TX,
#     rx=board.RX,
# )

adapter = esp32.start_bluetooth()


ble = BLERadio(adapter)
uart = UARTService()
advertisement = ProvideServicesAdvertisement(uart)

while True:
    ble.start_advertising(advertisement)
    print("waiting to connect")
    while not ble.connected:
        pass
    print("connected: trying to read input")
    while ble.connected:
        # Returns b'' if nothing was read.
        one_byte = uart.read(1)
        if one_byte:
            print(one_byte)
            uart.write(one_byte)


```

Talk to the AirLift via the Bluefruit LE Connect App


Start the Bluefruit LE Connect App on your phone or tablet. You should see a CIRCUITPY device available to connect to. Tap the Connect button (1):

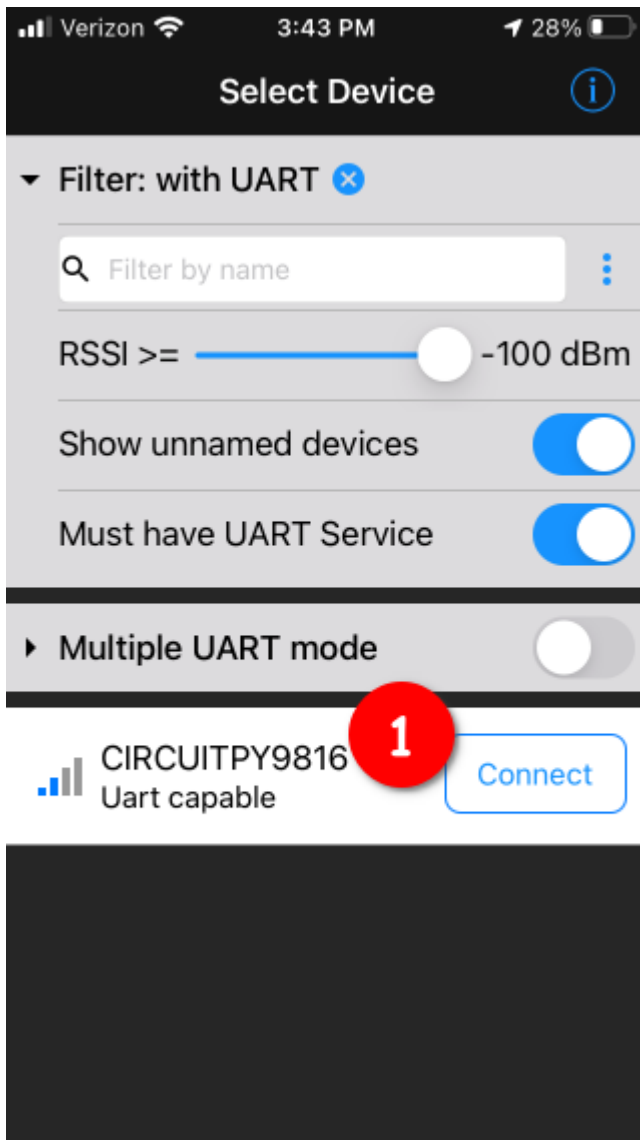

You'll then see a list of Bluefruit Connect functions ("modules"). Choose the UART module (2):

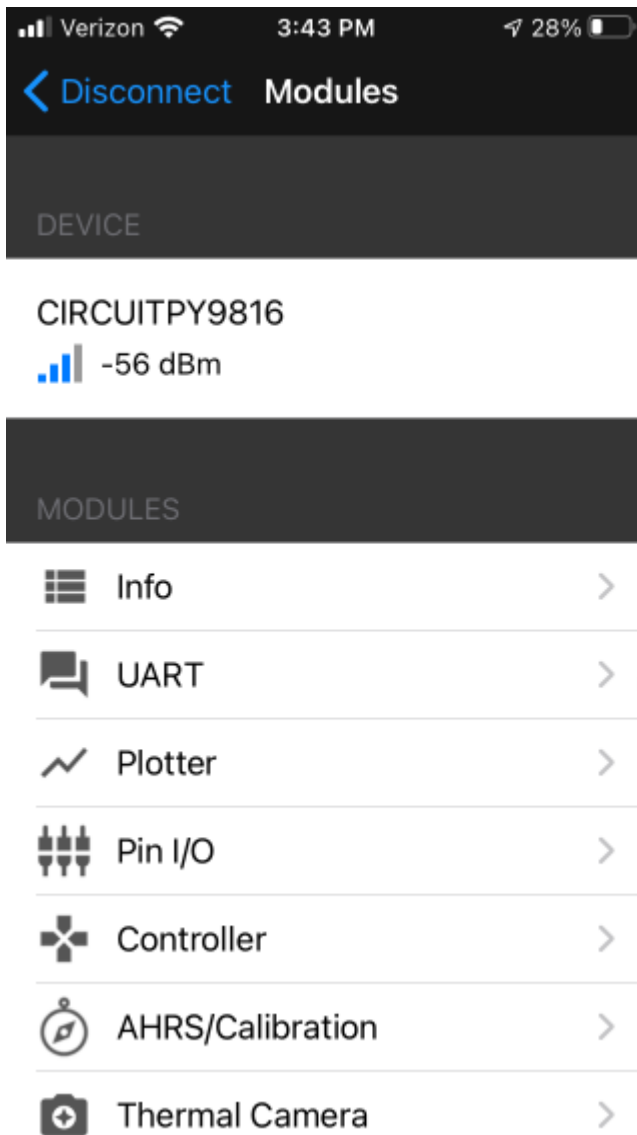

On the UART module page, you can type a string and press Send (3). You'll see that string entered, and then see it echoed back (echoing is in gray).

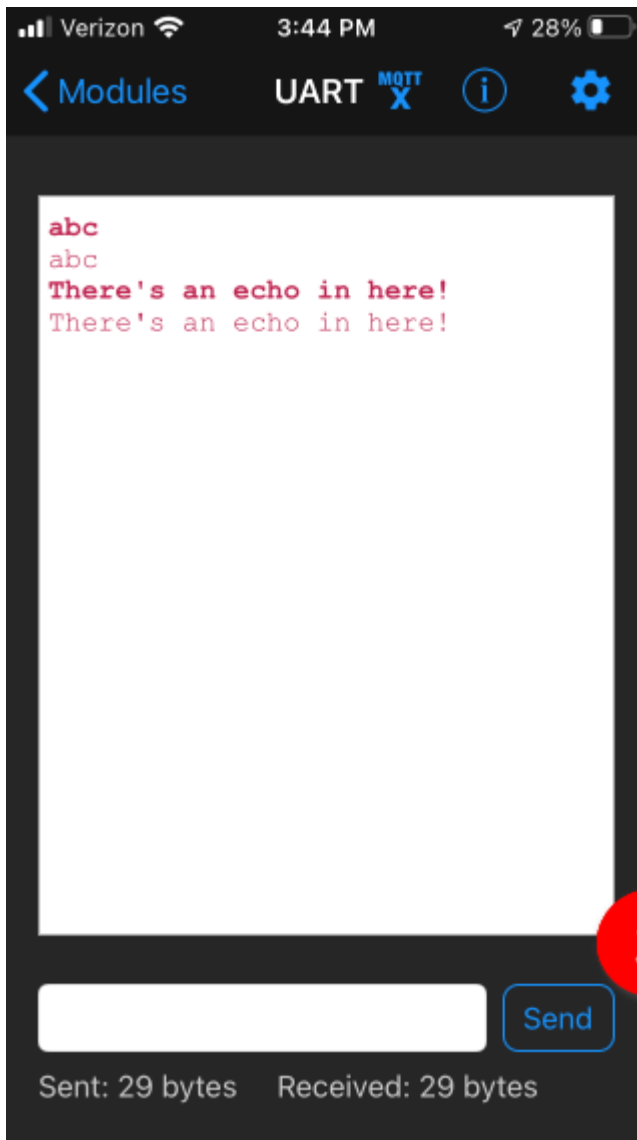

Create Your settings.toml File

CircuitPython works with WiFi-capable boards to enable you to make projects that have network connectivity. This means working with various passwords and API keys. As of [CircuitPython 8](https://adafru.it/Em8) (<https://adafru.it/Em8>), there is support for a **settings.toml** file. This is a file that is stored on your **CIRCUITPY** drive, that contains all of your secret network information, such as your SSID, SSID password and any API keys for IoT services. It is designed to separate your sensitive information from your **code.py** file so you are able to share your code without sharing your credentials.

CircuitPython previously used a **secrets.py** file for this purpose. The **settings.toml** file is quite similar.

Your settings.toml file should be stored in the main directory of your CIRCUITPY drive. It should not be in a folder.

CircuitPython settings.toml File

This section will provide a couple of examples of what your **settings.toml** file should look like, specifically for CircuitPython WiFi projects in general.

The most minimal **settings.toml** file must contain your WiFi SSID and password, as that is the minimum required to connect to WiFi. Copy this example, paste it into your **settings.toml**, and update:

- your_wifi_ssid
- your_wifi_password

```
CIRCUITPY_WIFI_SSID = "your_wifi_ssid"
CIRCUITPY_WIFI_PASSWORD = "your_wifi_password"
```

Many CircuitPython network-connected projects on the Adafruit Learn System involve using Adafruit IO. For these projects, you must also include your Adafruit IO username and key. Copy the following example, paste it into your settings.toml file, and update:

- your_wifi_ssid
- your_wifi_password
- your_aio_username
- your_aio_key

```
CIRCUITPY_WIFI_SSID = "your_wifi_ssid"
CIRCUITPY_WIFI_PASSWORD = "your_wifi_password"
ADAFRUIT_AIO_USERNAME = "your_aio_username"
ADAFRUIT_AIO_KEY = "your_aio_key"
```

Some projects use different variable names for the entries in the **settings.toml** file. For example, a project might use ADAFRUIT_AIO_ID in the place of ADAFRUIT_AIO_USERNAME. **If you run into connectivity issues, one of the first things to check is that the names in the settings.toml file match the names in the code.**

Not every project uses the same variable name for each entry in the settings.toml file! Always verify it matches the code.

settings.toml File Tips

Here is an example **settings.toml** file.

```
# Comments are supported
CIRCUITPY_WIFI_SSID = "guest wifi"
CIRCUITPY_WIFI_PASSWORD = "guessable"
CIRCUITPY_WEB_API_PORT = 80
CIRCUITPY_WEB_API_PASSWORD = "passw0rd"
test_variable = "this is a test"
thumbs_up = "\U0001f44d"
```


In a **settings.toml** file, it's important to keep these factors in mind:

- Strings are wrapped in double quotes; ex: "your-string-here"
- Integers are **not** quoted and may be written in decimal with optional sign (+1, -1, 1000) or hexadecimal (0xabcd).
 - Floats, octal (0o567) and binary (0b11011) are not supported.
- Use \u escapes for weird characters, \x and \ooo escapes are not available in **.toml** files
 - Example: \U0001f44d for 👍 (thumbs up emoji) and \u20ac for € (EUR sign)
- Unicode emoji, and non-ASCII characters, stand for themselves as long as you're careful to save in "UTF-8 without BOM" format

•



When your **settings.toml** file is ready, you can save it in your text editor with the **.toml** extension.

Accessing Your settings.toml Information in code.py

In your **code.py** file, you'll need to import the **os** library to access the **settings.toml** file. Your settings are accessed with the **os.getenv()** function. You'll pass your settings entry to the function to import it into the **code.py** file.

```
import os
```

```
print(os.getenv("test_variable"))
```

CircuitPython REPL

```
code.py output:  
this is a test
```

```
Code done running.
```

```
Press any key to enter the REPL. Use CTRL-D to re
```

In the upcoming CircuitPython WiFi examples, you'll see how the **settings.toml** file is used for connecting to your SSID and accessing your API keys.

CircuitPython WiFi

It's easy to use the Adafruit AirLift breakout with CircuitPython and the [Adafruit CircuitPython ESP32SPI](https://adafru.it/DWV) (https://adafru.it/DWV) module. This module allows you to easily add WiFi to your project.

The ESP32SPI library requires a microcontroller with ~128KB of RAM or more. The SAMD21 will not work.

CircuitPython Microcontroller Pinout

The ESP32's pins on the Metro M7 are as follows:

```
esp32_cs = DigitalInOut(board.ESP_CS)  
esp32_ready = DigitalInOut(board.ESP_BUSY)  
esp32_reset = DigitalInOut(board.ESP_RESET)
```

CircuitPython Setup


First make sure you are running the [latest version of Adafruit CircuitPython](https://adafru.it/Amd) (https://adafru.it/Amd) for your board.

Next you'll need to install the necessary libraries to use the hardware. Thankfully, we can do this in one go. In the example below, click the **Download Project Bundle** button below to download the necessary libraries and the **code.py** file in a zip file. Extract the contents of the zip file, and copy the **entire lib folder** and the **code.py** file to your **CIRCUITPY** drive.

Your **CIRCUITPY/lib** folder should contain the following folders and files:

- /adafruit_bus_device

- **/adafruit_esp32spi**
- **adafruit_requests.mpy**

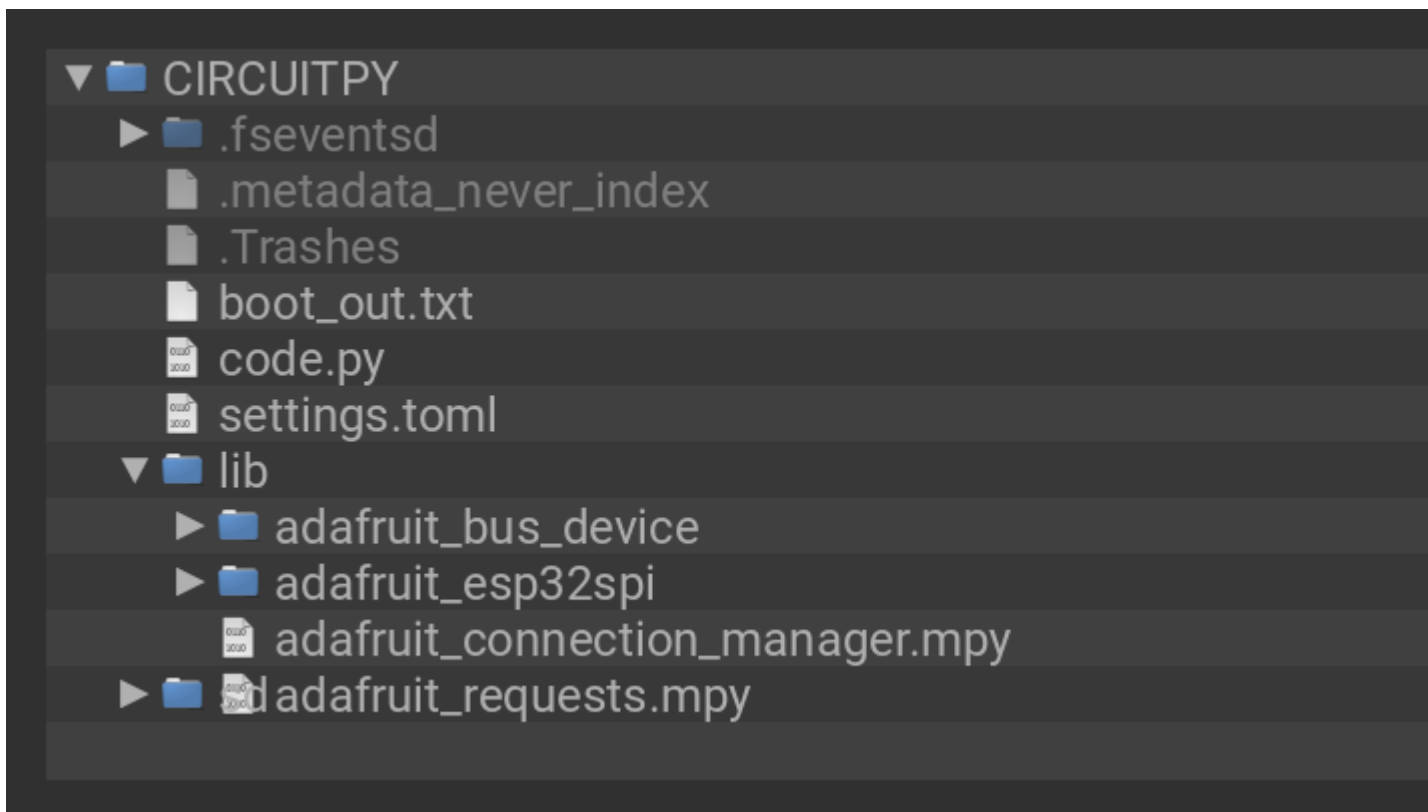

CircuitPython Usage

Copy the following code to your **code.py** file on your microcontroller:

```
# SPDX-FileCopyrightText: 2019 ladyada for Adafruit Industries
# SPDX-License-Identifier: MIT

import os
import board
import busio
from digitalio import DigitalInOut
import adafruit_connection_manager
import adafruit_requests
from adafruit_esp32spi import adafruit_esp32spi

print("ESP32 SPI webclient test")

TEXT_URL = "http://wifitest.adafruit.com/testwifi/index.html"
JSON_URL = "http://api.coindesk.com/v1/bpi/currentprice/USD.json"

# If you are using a board with pre-defined ESP32 Pins:
esp32_cs = DigitalInOut(board.ESP_CS)
esp32_ready = DigitalInOut(board.ESP_BUSY)
esp32_reset = DigitalInOut(board.ESP_RESET)
```

```

spi = busio.SPI(board.SCK, board.MOSI, board.MISO)
esp = adafruit_esp32spi.ESP_SPIcontrol(spi, esp32_cs, esp32_ready, esp32_r

pool = adafruit_connection_manager.get_radio_socketpool(esp)
ssl_context = adafruit_connection_manager.get_radio_ssl_context(esp)

requests = adafruit_requests.Session(pool, ssl_context)

if esp.status == adafruit_esp32spi.WL_IDLE_STATUS:
    print("ESP32 found and in idle mode")
print("Firmware vers.", esp.firmware_version)
print("MAC addr:", [hex(i) for i in esp.MAC_address])

for ap in esp.scan_networks():
    print("\t%s\t\tRSSI: %d" % (str(ap["ssid"], "utf-8"), ap["rssi"]))

print("Connecting to AP...")
while not esp.is_connected:
    try:
        esp.connect_AP(os.getenv('CIRCUITPY_WIFI_SSID'), os.getenv('CIRCUITPY_WIFI_PASSWORD'))
    except OSError as e:
        print("could not connect to AP, retrying: ", e)
        continue
print("Connected to", str(esp.ssid, "utf-8"), "\tRSSI:", esp.rssi)
print("My IP address is", esp.pretty_ip(esp.ip_address))
print(
    "IP lookup adafruit.com: %s" % esp.pretty_ip(esp.get_host_by_name("adafruit.com"))
)
print("Ping google.com: %d ms" % esp.ping("google.com"))

# esp._debug = True
print("Fetching text from", TEXT_URL)
r = requests.get(TEXT_URL)
print("-" * 40)
print(r.text)
print("-" * 40)
r.close()

print()
print("Fetching json from", JSON_URL)
r = requests.get(JSON_URL)
print("-" * 40)
print(r.json())
print("-" * 40)
r.close()

print("Done!")

```

[Connect to the serial console](https://adafru.it/BIO) (<https://adafru.it/BIO>) to see the output. It should look something like the following:

```
code.py output:
ESP32 SPI hardware test
ESP32 found and in idle mode
Firmware vers. bytearray(b'1.3.0\x00')
MAC addr: ['0xbd', '0xb0', '0xe', '0x33', '0x4f', '0xc4']
Get scan
      Adafruit          RSSI: -50
      Adafruit          RSSI: -57
      ESP_88EF6C        RSSI: -61
      consulatewireless RSSI: -70
      Adafruit          RSSI: -71
      Consulate Guest   RSSI: -71
      consulatewireless RSSI: -72
      Consulate Guest   RSSI: -73
      consulatewireless RSSI: -74
      ndm-studiopro2-hotspot RSSI: -74
Done!

Press any key to enter the REPL. Use CTRL-D to reload.
```

Make sure you see the same output! If you don't, check your wiring. Note that we've changed the pinout in the code example above to reflect the CircuitPython Microcontroller Pinout at the top of this page.

Once you've succeeded, continue onto the next page!

If you can read the Firmware and MAC address but fails on scanning SSIDs, check your power supply, you may be running out of juice to the ESP32 and it's resetting

Installing the Bootloader

The i.MX RT has built-in bootloader in ROM that implements the NXP Serial Download Protocol (SDP), which can be used to load & execute TinyUF2 to SRAM with `sdphost` tool via USB.

The built-in ROM bootloader is unerasable, which means your board is never 'bricked' - it can always be restored to factory firmware! We don't use the ROM bootloader for general purpose code upload because it's not as easy to use as TinyUF2 which allows drag-and-dropping of firmware UF2 files. However, if you ever have to factory-reset the board, or if you are developing with NXP software that expects to talk directly to the ROM bootloader, this page is for you!


Step 1. Install SPSDK to get the `sdphost` tool

Install the NXP SPSDK with `pip install spsdk`. More details are described in the [SPSDK Installation Guide](https://adafru.it/VCp) (<https://adafru.it/VCp>). If you are running Linux, make sure your user has permission for accessing `hidraw`.


```

C:\Users\ladyada\Desktop>pip install spsdk
Collecting spsdk
  Using cached spsdk-1.9.0-py3-none-any.whl (815 kB)
Requirement already satisfied: crcmod<1.8 in c:\users\ladyada\appdata\local\packages\pythonsoftwarefoundatio
_qbz5n2kfra8p0\localcache\local-packages\python38\site-packages (from spsdk) (1.7)
Requirement already satisfied: pyocd-pemicro<1.2,>=1.1.1 in c:\users\ladyada\appdata\local\packages\pythonsof
tion.python.3.8_qbz5n2kfra8p0\localcache\local-packages\python38\site-packages (from spsdk) (1.1.3)
Requirement already satisfied: pylink-square<0.15,>=0.8.2 in c:\users\ladyada\appdata\local\packages\pythonsof
ation.python.3.8_qbz5n2kfra8p0\localcache\local-packages\python38\site-packages (from spsdk) (0.14.3)
Requirement already satisfied: cryptography<39.1,>=3.4.4 in c:\users\ladyada\appdata\local\packages\pythonsof
tion.python.3.8_qbz5n2kfra8p0\localcache\local-packages\python38\site-packages (from spsdk) (37.0.4)
Requirement already satisfied: bincopy<17.15,>=17.10.2 in c:\users\ladyada\appdata\local\packages\pythonsof
on.python.3.8_qbz5n2kfra8p0\localcache\local-packages\python38\site-packages (from spsdk) (17.14.0)
Requirement already satisfied: fastjsonschema<2.17,>=2.15.1 in c:\users\ladyada\appdata\local\packages\python
ndation.python.3.8_qbz5n2kfra8p0\localcache\local-packages\python38\site-packages (from spsdk) (2.16.2)
Requirement already satisfied: jinja2<3.2,>=3.0 in c:\users\ladyada\appdata\local\packages\pythonsoftwarefoun
on.3.8_qbz5n2kfra8p0\localcache\local-packages\python38\site-packages (from spsdk) (3.1.2)

```

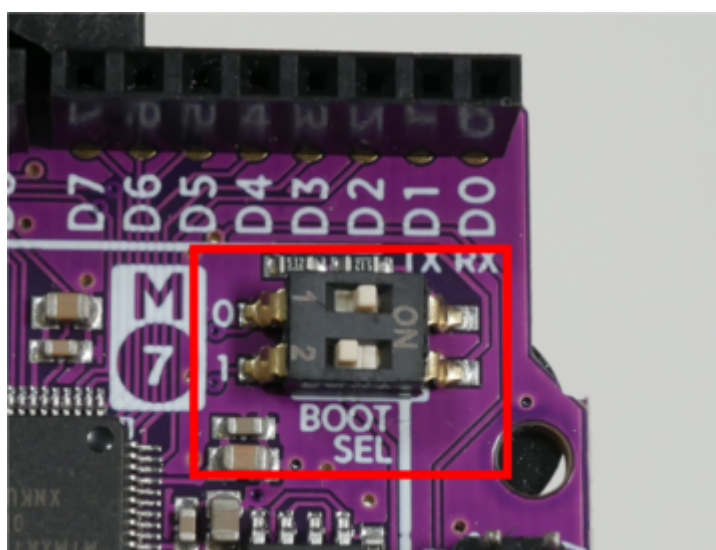

Power up your board with the Boot Mode switch set to `BOOT_MODE[1:0]=01` to enter Serial Download mode. That means the **Boot Select B0 switch** is 'on' (next to the ON text) **Boot Select B1 switch** is 'off' (not next to the ON text).

Note that the Serial Download mode will automatically run with blank flash, so if you have a fresh QSPI flash chip, the boot select switch doesn't matter

[tinyuf2-metro_m7_1011.bin](https://adafru.it/18vC)

<https://adafru.it/18vC>

Download the **tinyuf2-metro_m7_1011.bin** binary firmware file and place it into the directory you are running python3 from, then run:


```

sdphost -v -u 0x1fc9,0x0145 -- write-file 0x20206400 tinyuf2-metro_m7_1011
sdphost -u 0x1fc9,0x0145 jump-address 0x20207000

```

To upload the binary file to RAM memory and then jump to the `main()` function (which is not at the exact same address!) which will burn the bootloader to FLASH.

```
Desktop — -bash — 80x17
ladyada@Limors-MacBook-Air:~/Desktop$ sdphost -v -u 0x1fc9,0x0145 -- write-file 0x20206400 tinyuf2-metro_m7_1011.bin
INFO:libusbsio:Loading SIO library: /opt/homebrew/lib/python3.9/site-packages/libusbsio/bin/osx_arm64/libusbsio.dylib
INFO:libusbsio:HID enumeration[105553135459328]: initialized
INFO:libusbsio:HID enumeration[105553135459328]: finished, total 16 devices
INFO:spsdk.sdp.sdp:Connect: SE Blank RT Family (0x1FC9, 0x0145)
INFO:libusbsio.hidapi.dev:Opening HID device at path: 'b'DevSrvsID:4295368868''
INFO:libusbsio.hidapi.dev:HID device 4872533456 is now open
INFO:spsdk.sdp.sdp:TX-CMD: WriteFile(address=0x20206400, length=34092)
INFO:libusbsio.hidapi.dev:HID device 4872533456 closed
Status (HAB mode) = 1450735702 (0x56787856) Hab Is Disabled (Unlocked).
Response status = 2290649224 (0x88888888) Write File Success.
ladyada@Limors-MacBook-Air:~/Desktop$ sdphost -u 0x1fc9,0x0145 jump-address 0x20207000
Status (HAB mode) = 1450735702 (0x56787856) Hab Is Disabled (Unlocked).
ladyada@Limors-MacBook-Air:~/Desktop$
```

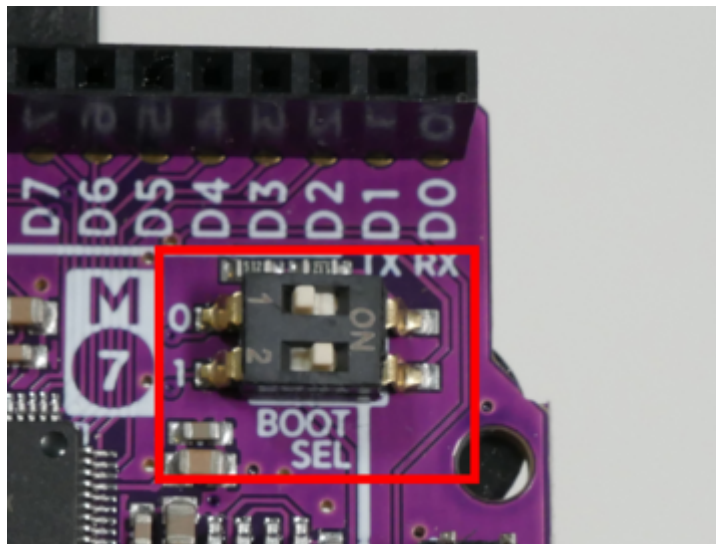

Now change both Boot Mode switches to `BOOT_MODE[1:0]=10` to leave the ROM bootloader mode. That means the **Boot Select B0 switch** is 'off' (not next to the ON text) **Boot Select B1 switch** is 'on' (next to the ON text).

Upgrading ESP32 AirLift Firmware

Upload Passthrough Code

First, you'll need to upload the code below to allow your board to act as a programmer for the ESP32 AirLift module.


Back up any code and files on your CIRCUITPY drive. The code will overwrite the drive's contents. You should not end up losing any files on the QSPI flash, but it's a good idea to back them up anyways.

Download the **UF2** file for your board and save it to your computer's Desktop.

[esp32programmer-metro_m7_1011-0.12.3.uf2](https://adafru.it/18vE)

<https://adafru.it/18vE>


To enter bootloader mode, start with your board unplugged from USB. Next, find the reset button on your board. It's a small, black button, and on most of the boards, it will be the only button available.

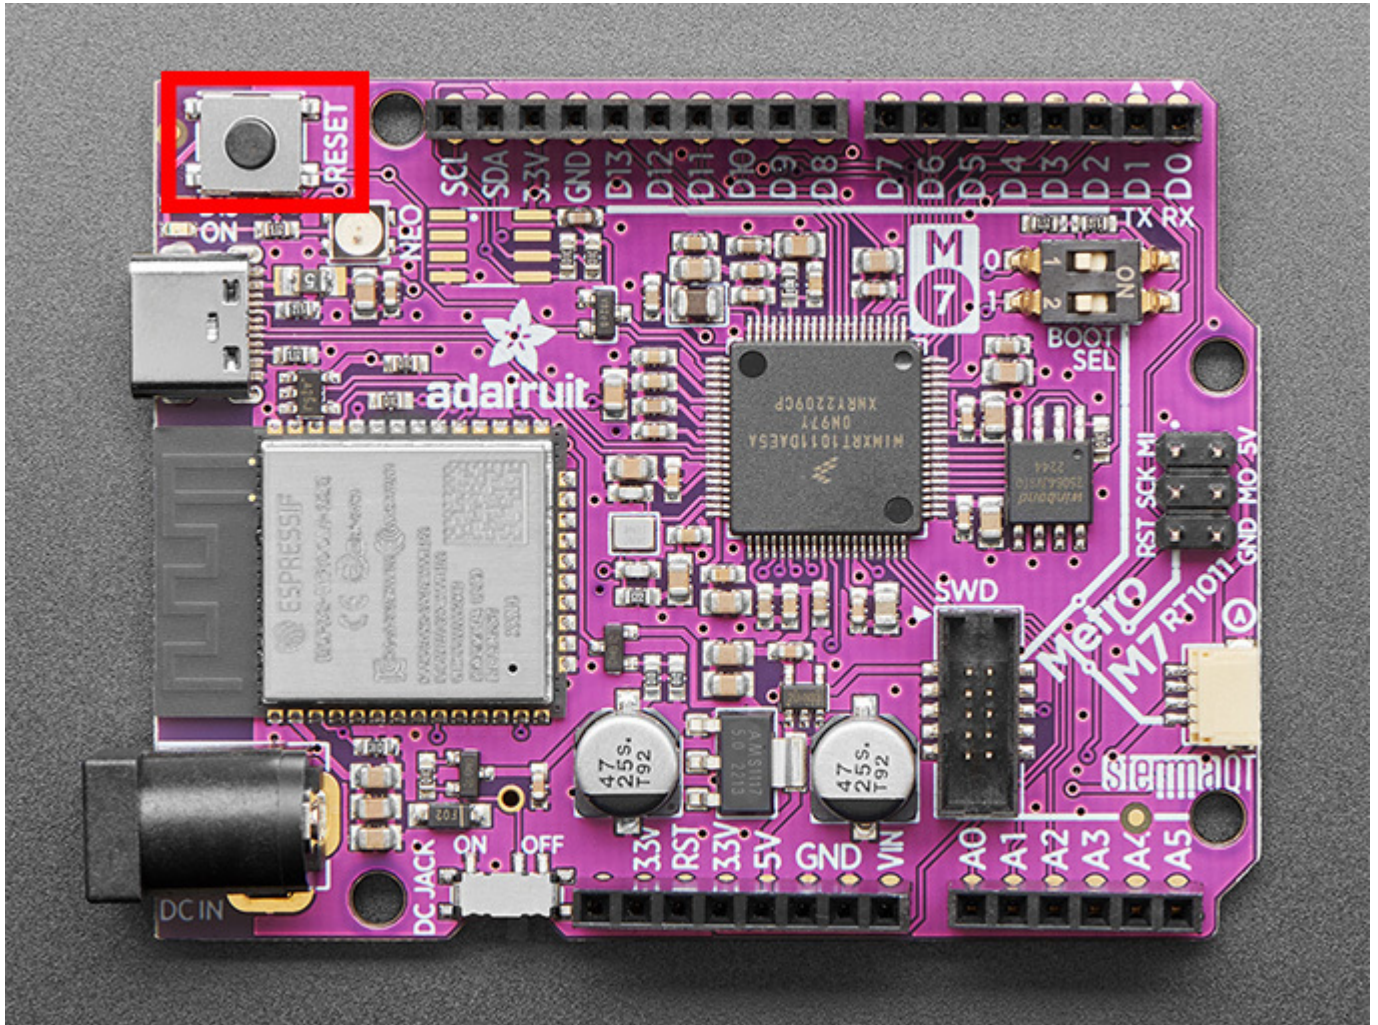

Tap this button twice to enter the bootloader. If it doesn't work on the first try, don't be discouraged. The rhythm of the taps needs to be correct and sometimes it takes a few tries. Once successful, the RGB LED on the board will flash red and then stay green. A new drive will show up on your computer. The drive will be called **METROM7BOOT** where **METROM7** is a reference to your specific board.


For example, a Feather will have **FEATHERBOOT** and a Trinket will have **TRINKETBOOT** etc. Going forward we'll just call the boot drive **BOOT**.

You will see a new disk drive appear called **METROM7BOOT**.

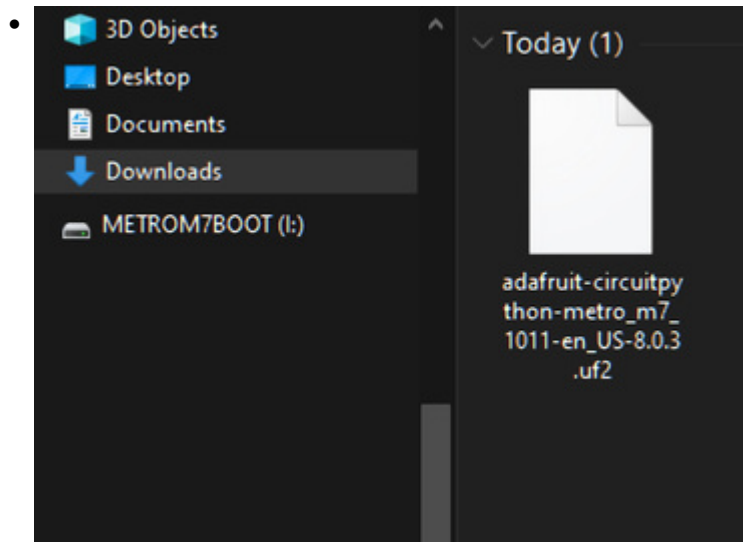

The board is now in bootloader mode.

Find the **.UF2** file you downloaded and drag that file to the new drive on your computer.

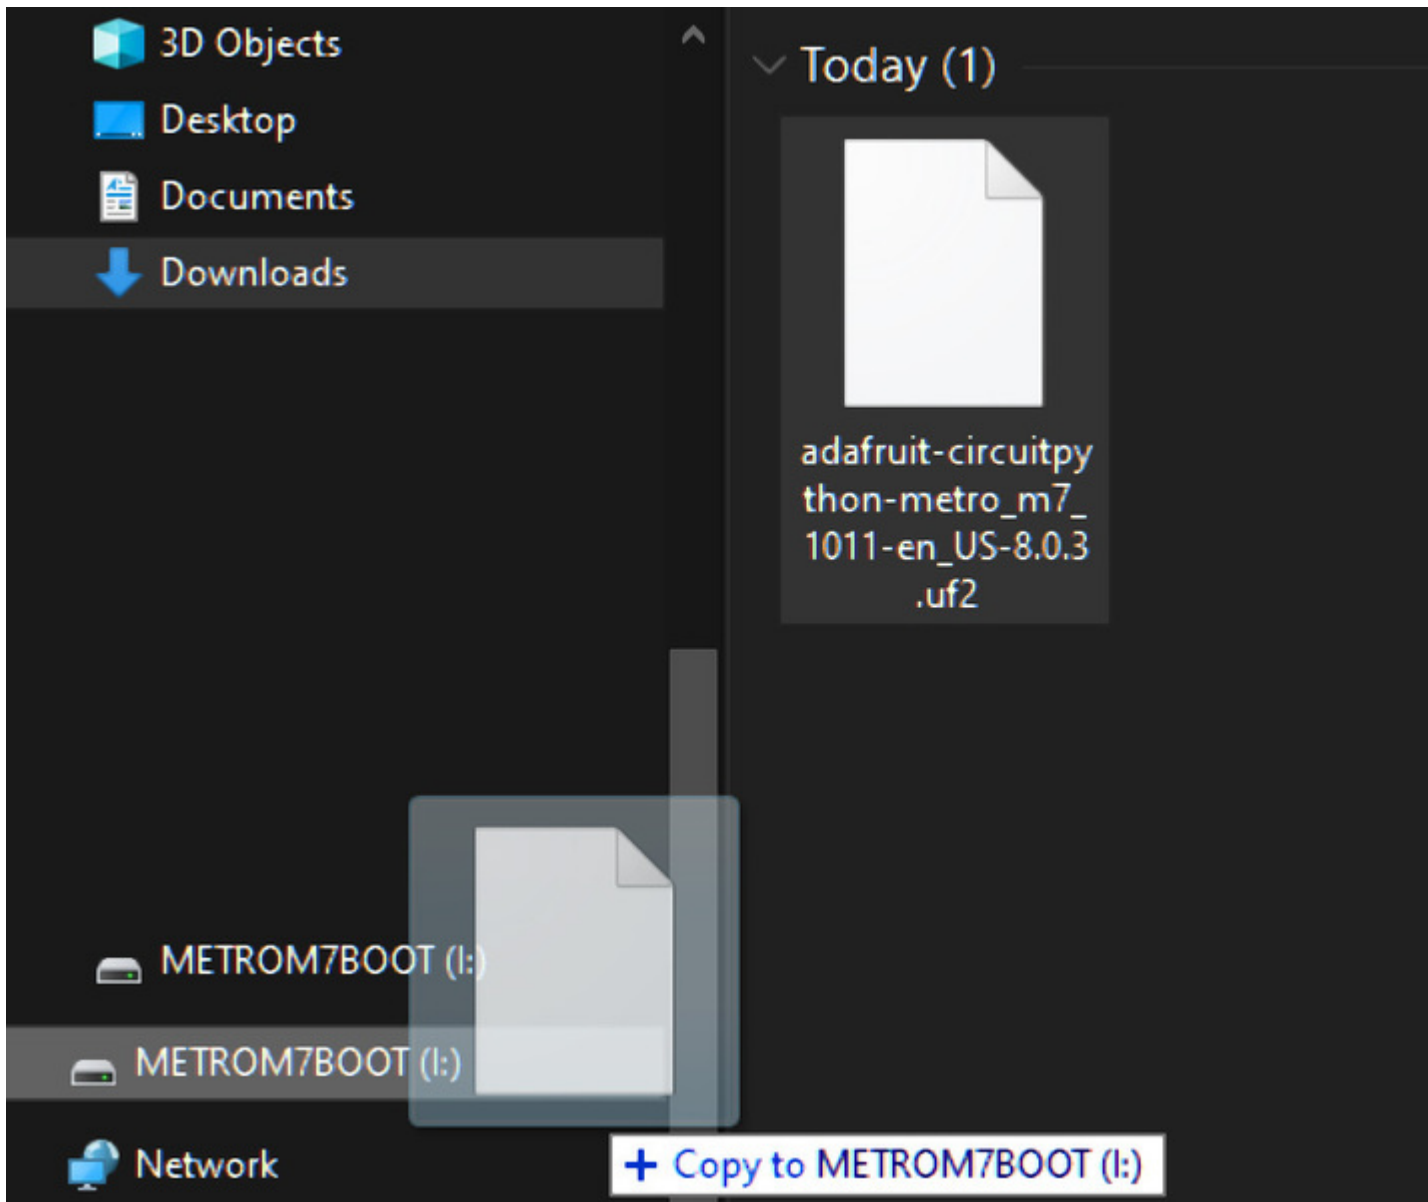

The board's LED should flash and the drive will disappear. Your board should re-enumerate USB and appear as a COM or Serial port on your computer. Make a note of the serial port by checking the **Device Manager** (Windows) or **typing `ls /dev/cu*` or `/dev/tty*`** (Mac or Linux) **in a terminal**.

```
$ ls /dev/cu.*  
/dev/cu.Bluetooth-Incoming-Port /dev/cu.usbmodem1432201  
$ ls /dev/cu.*  
/dev/cu.Bluetooth-Incoming-Port /dev/cu.usbmodem1432201
```

Download NINA Firmware

Click the link below to download the latest version of the NINA firmware. **Unzip it and save the .bin file to your desktop.**

To support BLE on the ESP32 AirLift, you'll need to download NINA firmware version 1.7.1, or later.

[Download the latest nina-fw .bin file](#)

<https://adafru.it/G3D>

Next, you'll need to flash the firmware to your ESP32 AirLift module.

If you're using the Google Chrome browser or Microsoft Edge (version 89 or later), you may follow the instructions below for programming using your board.

For advanced users who have **esptool.py** installed, skip to the bottom of the page.

Upload NINA Firmware


Next, you'll need to upload the new version of NINA firmware to your ESP32 AirLift. To do this, we'll use the web-based implementation of the flasher tool for Espressif chips, ESPTool. You will need to be running Google Chrome or Microsoft Edge (version 89 or later) to follow the steps below.

Safari and Firefox, etc. are not supported because we need Web Serial and only Chrome is supporting it to the level needed. **If you're using an unsupported browser**, you'll need to either switch to Google Chrome or upload NINA firmware using the Python **esptool.py** program from your computer (Scroll down to Upload NINA Firmware with esptool.py,)

Please ensure you are running Google Chrome or Microsoft Edge (version 89 or later) before following the steps below. Esptool-js is based on Web Serial API and ONLY works for Google Chrome and Microsoft Edge, version 89 or later.

On your Google Chrome browser, navigate to https://adafruit.github.io/Adafruit_WebSerial_ESPTool/ (<https://adafru.it/PMB>)


In the top-right corner, select 115200 as the baud rate and click the **Connect** button.

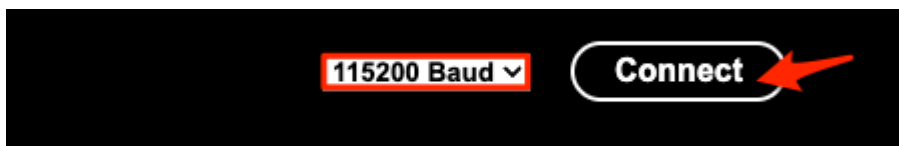

You will get a pop-up asking you to select the board's COM or Serial port.

- If there are a lot of boards and ports appearing in this list and you're not sure what to select - remove all other USB devices so only your board is attached, that way there's no confusion over multiple ports!

Click **Connect**.

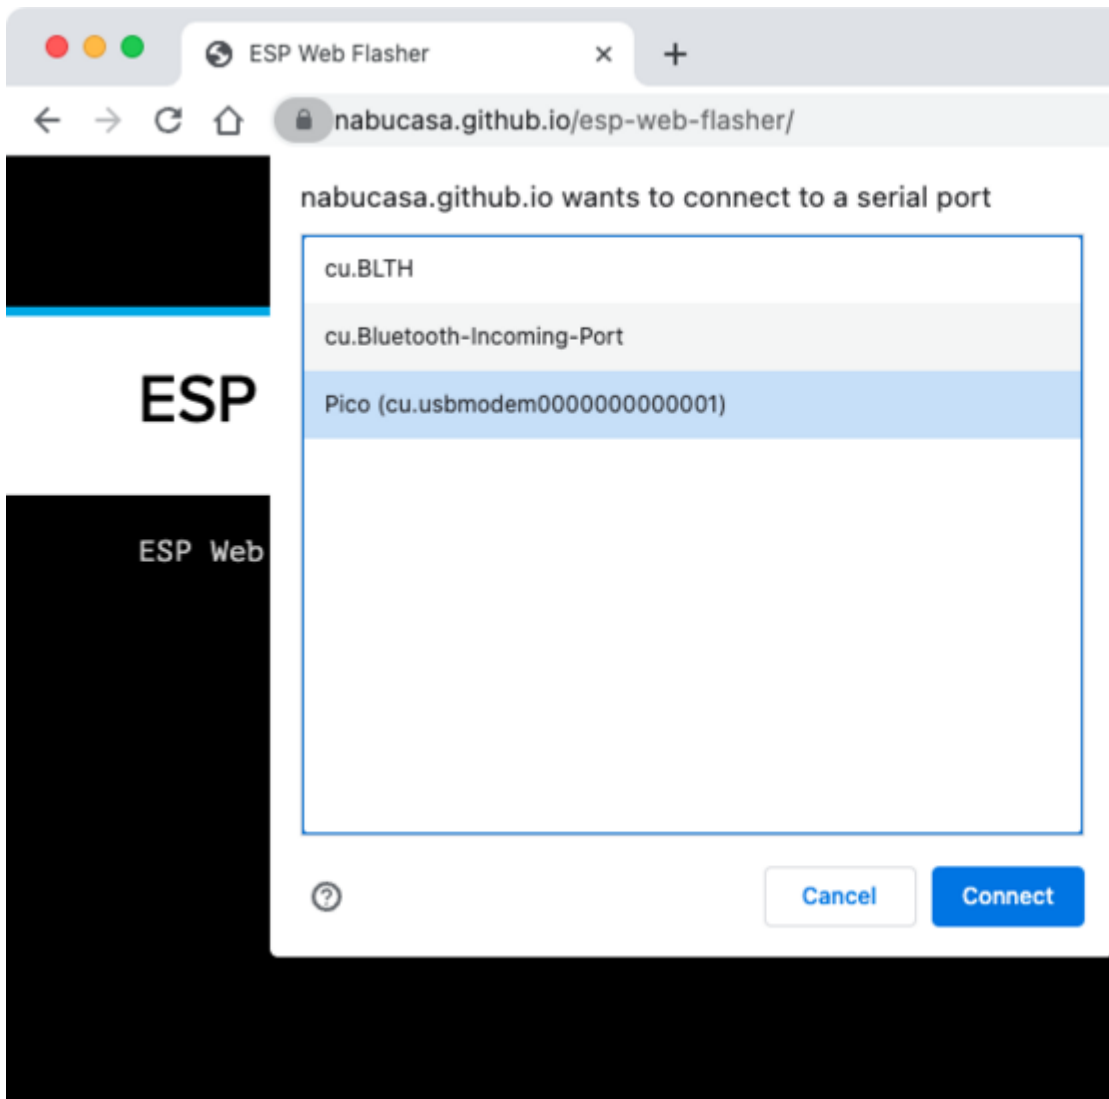

- ```
ESP Web Flasher loaded.
Connecting...
Connected successfully.
Try hard reset.
Chip type ESP32
Connected to ESP32
MAC Address: C4:4F:33:0E:A1:29
Uploading stub...
Running stub...
Stub is now running...
Detecting Flash Size
FlashId: 0x164020
Flash Manufacturer: 20
Flash Device: 4016
Auto-detected Flash size: 4MB
```

Upon success, you will see that it is connected and will print out a unique MAC address identifying the board.

Once you have successfully connected, a command toolbar will appear at the top of the screen.

Verify that the offset is **0x0** and choose the **NINA\_....bin** file you downloaded above.

- **sher**

Offset: 0x  NINA\_W102-1.7....

Offset: 0x  Choose a file...

Offset: 0x  Choose a file...

Offset: 0x  Choose a file...

Erase Program

Click the **program** button to flash the firmware to your ESP32 AirLift.



- **ESP Web Flasher**

Offset: 0x  NINA\_W102-1.7....

Offset: 0x  Choose a file...

Offset: 0x  Choose a file...

Offset: 0x  Choose a file...

Erase Program

```

CONNECTED TO ESP32
MAC Address: C4:4F:33:0E:A1:29
Uploading stub...
Running stub...
Stub is now running...
Detecting Flash Size
FlashId: 0x164020
Flash Manufacturer: 20
Flash Device: 4016
Auto-detected Flash size: 4MB
Image header, Magic=0xFF, FlashMode=0xFF, FlashSizeFreq=0xFF
Writing data with filesize: 1159168
Erase size 1159168, blocks 71, block size 0x4000, offset 0x0000, encrypted no

```

ESPTool will take a few minutes to write firmware to your device. After it's complete, the progress bar will disappear and the console will print "To run the new firmware,..."

- **ESP Web Flasher**

Offset: 0x  NINA\_W102-1.7....

Offset: 0x  Choose a file...

Offset: 0x  Choose a file...

Offset: 0x  Choose a file...

Erase Program

Press the Reset button (or, on the RP2040 Pico, unplug your device from USB power) to get out of the ROM bootloader.

```

Running stub...
Stub is now running...
Detecting Flash Size
FlashId: 0x164020
Flash Manufacturer: 20
Flash Device: 4016
Auto-detected Flash size: 4MB
Image header, Magic=0xFF, FlashMode=0xFF, FlashSizeFreq=0xFF
Writing data with filesize: 1159168
Erase size 1159168, blocks 71, block size 0x4000, offset 0x0000, encrypted no
Took 103215ms to write 1159168 bytes
Erase size 0, blocks 0, block size 0x4000, offset 0x0000, encrypted no
To run the new firmware, please reset your device.

```


# Verify the New Firmware Version

To verify everything is working correctly, we'll load up some CircuitPython code.

**If you were previously using your ESP32 project with CircuitPython**, you'll need to first reinstall CircuitPython firmware for your board. The QSPI flash should have retained its contents. If you don't see anything on the **CIRCUITPY** volume, copy files from the backup you made earlier to **CIRCUITPY**.

To verify the new ESP32 WiFi firmware version is correct, [follow the Connect to WiFi step in this guide](https://adafru.it/Eao) (https://adafru.it/Eao) and come back here when you've successfully run the code. The REPL output should display the firmware version you flashed.

```
code.py output:
ESP32 SPI webclient test
ESP32 found and in idle mode
Firmware vers. bytearray(b'1.7.4\x00')
MAC addr: ['0xc4', '0x83', '0x11', '0x12', '0xcf', '0xa4']
RSSI: -54
RSSI: -65
RSSI: -73
Connecting to AP...
Connected to RSSI: -52
My IP address is 192.168.1.155
```

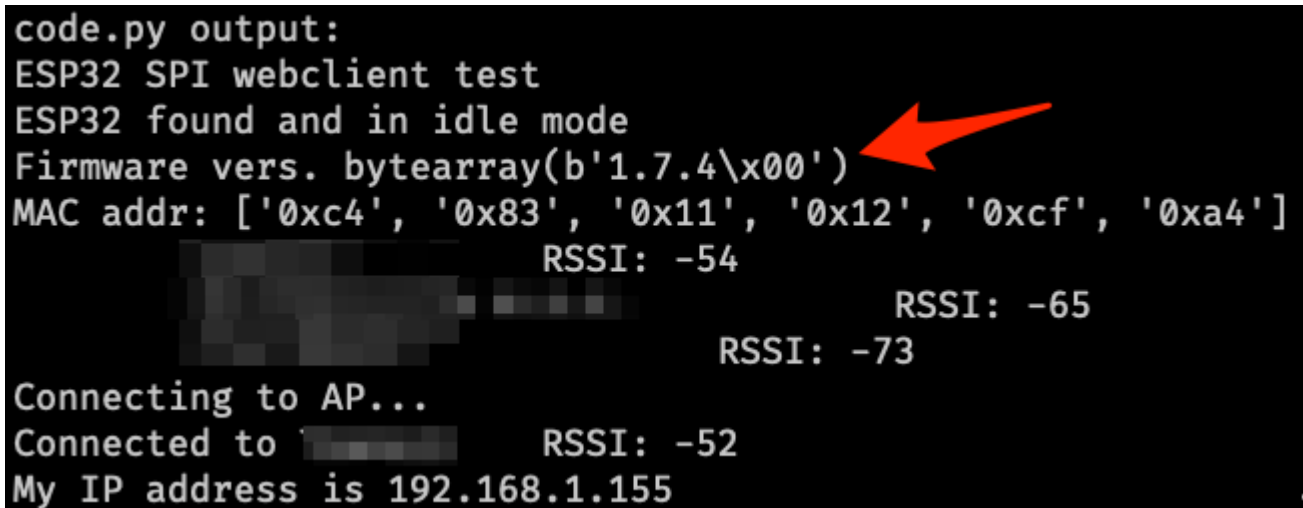

## (Advanced) Upload NINA Firmware with ESPTool.py

For advanced users who have **esptool.py** installed, run the following commands on your command line:

**If you're using macOS or Linux** - run the following command, replacing /dev/ttyACM0 with the serial port of your board and NINA\_W102-1.6.0 with the binary file you're flashing to the ESP32.

```
esptool.py --port /dev/ttyACM0 --before no_reset --baud 115200
write_flash 0 NINA_W102-1.6.0.bin
```

**If you're using Windows** - run the following command, replacing COM7 with the serial port of your board and NINA\_W102-1.6.0 with the binary file you're flashing to the ESP32

```
esptool.py --port COM7 --before no_reset --baud 115200
write_flash 0 NINA_W102-1.6.0.bin
```

The command should detect the ESP32 and will take a minute or two to upload the firmware.

- If ESPTool doesn't detect the ESP32, make sure you've uploaded the correct **.UF2** file to the bootloader and are using the correct serial port.

Once the firmware is fully uploaded, press the Reset button (or, on the RP2040 Pico, unplug your device from USB power) to get out of the ROM bootloader mode.

```
$ esptool.py --port /dev/cu.usbmodem1432201 --before no_reset --baud 115200 write_flash 0 NINA_W102-1
esptool.py v2.7
Serial port /dev/cu.usbmodem1432201
Connecting.....
Detecting chip type... ESP32
Chip is ESP32D0WDQ6 (revision 1)
Features: WiFi, BT, Dual Core, 240MHz, VRef calibration in efuse, Coding Scheme None
Crystal is 40MHz
MAC: c4:4f:33:0d:5c:19
Uploading stub...
Running stub...
Stub running...
Configuring flash size...
Auto-detected Flash size: 4MB
Compressed 1154048 bytes to 622216...
Wrote 1154048 bytes (622216 compressed) at 0x00000000 in 204.7 seconds (effective 45.1 kbit/s)...
Hash of data verified.

Leaving...
Hard resetting via RTS pin...
```

# Downloads

## Files

- [NXP i.MX1011 product page with resources](https://adafru.it/18vF) (https://adafru.it/18vF)
- [NXP i.MX1011 Data Sheet](https://adafru.it/18wa) (https://adafru.it/18wa)
- [NXP i.MX1011 Technical Reference](https://adafru.it/18wb) (https://adafru.it/18wb)
- [EagleCAD PCB files on GitHub](https://adafru.it/18wc) (https://adafru.it/18wc)
- [Fritzing object in the Adafruit Fritzing Library](https://adafru.it/18wd) (https://adafru.it/18wd)
- [Firmware Erase UF2](https://adafru.it/18we) (https://adafru.it/18we)

The image displays a complex PCB layout for the Adafruit Metro M7 IMU board. The layout is organized into several functional sections, each labeled with a letter (A through E) and a corresponding column number (1 through 7) at the top. The components and their connections are as follows:

- Section A (Columns 1-3):** USB Connection & Selection. Includes a USB Type-C connector, a USB-to-UART bridge (MAX3232), and a power supply selection circuit (MAX3232).
- Section B (Columns 4-7):** POWER SUPPLY: 5V, POWER SUPPLY: 3.3V, POWER LED, and QSPI FLASH. Includes a 5V power supply regulator, a 3.3V power supply regulator, a power LED, and a QSPI FLASH memory chip.
- Section C (Columns 1-3):** Boot Mode and UART. Includes a MAX3232 chip for UART communication and a MAX3232 chip for boot mode selection.
- Section D (Columns 4-7):** ESP32 MODULE + AUTORESET. Includes an ESP32 module with an autoreset circuit, a power supply, and a reset button.
- Section E (Columns 1-3):** Optional Crypto Chip and SWD Interface. Includes an optional crypto chip (ATECC608A) and a SWD interface circuit.

The layout also includes various other components such as resistors, capacitors, and LEDs, with their values and connections clearly marked. The overall design is a professional-grade PCB layout for a microcontroller-based board.

